

***52 STANDARD/EXPANDED REPORT FOR PRIMARY**

Alarm Rstr Bypass Trbl Opn/Cls Low Bat

[0=Standard]; 1=expanded; Note: Expanded overrides 4+2 format.

***53 STANDARD/EXPANDED REPORT FOR SECONDARY**

Alarm Rstr Bypass Trbl Opn/Cls Low Bat

[0=Standard]; 1=expanded; Note: Expanded overrides 4+2 format.

ALARM REPORT CODE & ID DIGITS FOR ZONES 1-32 & SUPERVISORY & RESTORE CODES

*54 Code	*55 ID	*56 Code	*57 ID	*58		*59 Code	*60 ID	*61 Code	*62 ID	*63					
1	0 1	0 0	9	0 9	0 0	0 1	Alarm Rst.	17	0 2	0 0	25	1 0	0 0	0 1	Alarm Rst.
2	0 2	0 0	10	1 0	0 0	0 1	Trouble	18	0 3	0 0	26	1 1	0 0	0 1	Trouble
3	0 3	0 0	11	1 1	0 0	0 1	Trouble Rst.	19	0 4	0 0	27	1 2	0 0	0 1	Trouble Rst.
4	0 4	0 0	12	1 2	0 0	0 0	Bypass	20	0 5	0 0	28	1 3	0 0	0 0	Bypass
5	0 5	0 0	13	1 3	0 0	0 0	Bypass Rst.	21	0 6	0 0	29	1 4	0 0	0 0	Bypass Rst.
6	0 6	0 0	14	1 4	0 0			22	0 7	0 0	30	1 5	0 0		
7	0 7	0 0	15	1 5	0 0			23	0 8	0 0	31	0 1	0 0		
8	0 8	0 0	16	0 1	0 0			24	0 9	0 0	32	0 2	0 0		

ALARM REPORT CODE & ID DIGITS FOR ZONES 33-64 & SUPERVISORY & RESTORE CODES

*64 Code	*65 ID	*66 Code	*67 ID	*68		*69 Code	*70 ID	*71 Code	*72 ID	*73					
33	0 3	0 0	41	1 1	0 0	0 1	Alarm Rst.	49	0 4	0 0	57	1 2	0 0	0 1	Alarm Rst.
34	0 4	0 0	42	1 2	0 0	0 1	Trouble	50	0 5	0 0	58	1 3	0 0	0 1	Trouble
35	0 5	0 0	43	1 3	0 0	0 1	Trouble Rst.	51	0 6	0 0	59	1 4	0 0	0 1	Trouble Rst.
36	0 6	0 0	44	1 4	0 0	0 0	Bypass	52	0 7	0 0	60	1 5	0 0	0 0	Bypass
37	0 7	0 0	45	1 5	0 0	0 0	Bypass Rst.	53	0 8	0 0	61	0 1	0 0	0 0	Bypass Rst.
38	0 8	0 0	46	0 1	0 0			54	0 9	0 0	62	0 2	0 0		
39	0 9	0 0	47	0 2	0 0			55	1 0	0 0	63	0 3	0 0		
40	1 0	0 0	48	0 3	0 0			56	1 1	0 0	64	0 4	0 0		

ALARM REPORT CODE & ID DIGITS FOR ZONES 81-87, RF RCVRS & PANICS, & THEIR SUPV. & RESTORE CODES

*74 Code	*75 ID	*76 Code	*77 ID	*78			
81	0 6	0 0	89	1 4	0 0	0 1	Alarm Rst.
82	0 7	0 0	90	1 5	0 0	0 1	Trouble
83	0 8	0 0	91	0 1	0 0	0 1	Trouble Rst.
84	0 9	0 0	Duress	0 0	0 0	0 0	Bypass
85	1 0	0 0	97	0 3	0 0	0 0	Bypass Rst.
86	1 1	0 0	95	0 4	0 0	(1 + */A)	
87	1 2	0 0	96	0 0	0 0	(3 + #/C)	
88	1 3	0 0	99	0 6	0 0	(* + #/B)	

NOTES: 97 = Poll Loop Short;
88 & 90= RCVR not receiving transmitter signals.
89 & 91= RCVR not responding, bad conn. to panel.
87 = Voice Module supervision.

***79 ZONE TYPE RESTORE for TYPES 1-8**
[1=Enable]; 0=Disable

1 1 1 1 1 1 1 1 1 1
1 2 3 4 5 6 7 8

***80 ZONE TYPE RESTORE for TYPES 9 & 10**
[1=Enable]; 0=Disable

1 1
9 10

SYSTEM NON-ALARM CODES

	*81	*82	
	First Digit	Second Digit	
Close	0 0	0 0	Second digit of each applies only to 4+2 or expanded (fields *52 & *53) formats
Open	0 0	0 0	
Low Battery	0 1	0 0	
Low Bat Res.	0 1	0 0	
AC Loss	0 0	0 0	
AC Restore	0 0	0 0	
Test	0 1	0 0	
Power	0 1	0 0	
Cancel	0 1	0 0	
Prog. tamper	0 1	0 0	

***83 FIRST TEST REPORT TIME** [00] [03] [00]
[Day 00; hour 03; min 00] Days 01-07 Hours 00-23 Min 00-59;
00 in all boxes = instant (Day 01 = Monday)

***84 SWINGER SUPPRESSION** Partition-Specific

***85 ENABLE DIALER REPORTS FOR PANICS & DURESS** Partition-Specific

***87 ENTRY WARNING** Partition-Specific

***88 BURG. ALARM COMM. DELAY** Partition-Specific

***89 RESTORE REPORT TIMING** [1]
0= instant, as zone restores; [1=after bell timeout if zone restored];
2=when system is subsequently disarmed

***90 SECONDARY SUBSCRIBER ACCOUNT NUMBER** Partition-Specific

SECOND PAGE PROGRAMMING FIELDS (press *94)

ASSIGN RESPONSE TYPES FOR ZONES

(Enter 00-10, 20-23; see Response Types below)

28	1*01	00	33	1*02	00	41	1*03	00	49	1*04	00	57	1*05	00
29	00	34	00	42	00	50	00	58	00	00	59	00	00	00
30	00	35	00	43	00	51	00	60	00	00	61	00	00	00
31	00	36	00	44	00	52	00	62	00	00	63	00	00	00
32	00	37	00	45	00	53	00	64	00	00	00	00	00	00
		38	00	46	00	54	00	62	00	00	63	00	00	00
		39	00	47	00	55	00	63	00	00	64	00	00	00
		40	00	48	00	56	00	64	00	00				
65	1*06	00	73	1*07	00	81	1*08	00	89	1*09	05	2nd RCVR		
66	00	74	00	82	00	90	00	1st RCVR	00	05	1st RCVR			
67	00	75	00	83	00	91	05	1st RCVR	00	05	1st RCVR			
68	00	76	00	84	00									
69	00	77	00	85	00									
70	00	78	00	86	00									
71	00	79	00	87	00									
72	00	80	00	88	05	Voice Module								
						2nd RCVR								

RESPONSE TYPES:	00 = Disabled zone
01 = ENTRY/EXIT #1	02 = ENTRY/EXIT #2
03 = PERIMETER	04 = INTERIOR, FOLLOWER
05 = DAY/NIGHT	06 = 24-HOUR SILENT
07 = 24-HOUR AUDIBLE ALARM	08 = 24-HOUR AUXILIARY
09 = FIRE	10 = INTERIOR, DELAY
20 = ARM STAY	21 = ARM AWAY
22 = DISARM	23 = NO ALARM RESPONSE

NOTES: If using 1 or 2 RF RCVRs, enable their respective faults (88-91) as troubles (type 5) to provide trouble annunciation. Enter 00 if no annunciation is desired.

88 & 90 = RCVR not receiving transmitter signals.
89 & 91 = RCVR not responding, bad conn. to panel.

- 1*17 LOBBY PARTITION [0] 0
Enter the "common lobby" partition (1-8)
- 1*18 AFFECTS LOBBY Partition-Specific
- 1*19 ARMS LOBBY Partition-Specific
- 1*20 EXIT ERROR LOGIC 0
[0 = Disable]; 1 = Enable (E/E and Interior zones will be bypassed if faulted after exit delay).
- 1*21 EXIT DELAY RESET 1
0 = No; [1 = Resets Exit Delay to 60 seconds after zone is closed].
FIELDS 1*22-1*25: Allow four sets of two zones each to be linked so that both must fault within a five minute period to cause an alarm.
- 1*22 CROSS-ZONING PAIR #1 [00,00] 0000
- 1*23 CROSS-ZONING PAIR #2 [00,00] 0000
- 1*24 CROSS-ZONING PAIR #3 [00,00] 0000
- 1*25 CROSS-ZONING PAIR #4 [00,00] 0000
- 1*28 RF TRANSMITTER LOW BATTERY SOUND 0
1=Immediate; [0=when disarmed]; Must be "1" for UL.
- 1*29 RF TRANSMITTER LOW BATTERY REPORT ENABLE 1
[1=Enable]; 0=Disable Must be "1" for UL.
- 1*30 RF RECEIVER CHECK-IN INTERVAL 06
02-15 times 2 Hours;
00 disables transmitter supervision
Max. [6] (12 hr) for UL.
- 1*31 RF TRANSMITTER CHECK-IN INTERVAL 06
02-15 times 2 Hours;
00 disables supervision [06] Max. "6" (12 hr) for UL.
- 1*32 RF RECEIVER TYPE 2
0 = None; 1 = 4281; [2 = 5881]

- 1*33 TOUCH-TONE W/ROTARY BACKUP 1
[1=Enable; 0=Disable]
- 1*34 COMM. SPLIT REPORT SELECTION 0
[0=No]; 1=Alarms primary, others secondary;
2=Open/close, test secondary, others primary;
See *51 for comments.

ALARM REPORT CODE & ID DIGITS FOR ZONES 65-80 & SUPV. & RESTORE CODES

1*35 Code	1*36 D	1*37 Code	1*38 D	1*39			
65	05	00	73	13	00	01	Alarm Rst.
66	06	00	74	14	00	01	Trouble
67	07	00	75	15	00	01	Trouble Rst.
68	08	00	76	01	00	00	Bypass
69	09	00	77	02	00	00	Bypass Rst.
70	10	00	78	03	00		
71	11	00	79	04	00		
72	12	00	80	05	00		

NON-ALARM DIALER CODES

(Armed Stay, Time Set & Event Logging)
[All codes default to zero]

	1*40	1*41	
	First Digit	Second Digit	
Armed Stay	00	00	
Time/Date set or event log reset	00	00	
Event log 50% & 90% full	00	00	
Event log overflow	00	00	
Exit Error (Zone)	00	00	
Exit Error (User)	00	00	
Recent Close	00	00	

- 1*42 CALL WAITING DEFEAT 0
1=Yes; [0=No]
- 1*43 PERMANENT KEYPAD BACKLIGHT Partition-Specific
- 1*44 WIRELESS KEYPAD TAMPER DETECT ENABLE 0
1=Enable; [0=Disable]
- 1*45 EXIT DELAY SOUNDING Partition-Specific
- 1*46 AUXILIARY OUTPUT MODE 0
[0=Ground start];
1=Open/close trigger;
2=Console sounding;
3=Audio Alarm Verification
- 1*47 CHIME ON EXTERNAL SIREN Partition-Specific
- 1*48 WIRELESS KEYPAD ASSIGNMENT 0
[0=Disable]; enter partition in which RF keypad used, 1-8.
- 1*49 SUPPRESS TRANSMISSION SUPERVISION SOUND 1
[1=Disable]; 0=Enable. Must be "0" for UL.
- 1*52 SEND CANCEL IF ALARM + OFF Partition-Specific
- 1*53 DOWNLOAD CALLBACK 0
1=callback not required;
[0=callback required]; Must be "0" for UL.
- 1*57 5800 RF BUTTON GLOBAL ARM 0
Enter "1" to have the system arm/disarm following the button user's global arm settings. Enter ["0"] if the button is not to be used to global arm the system.
- 1*58 5800 RF BUTTON FORCE BYPASS 0
Enter "1" to enable. If a zone is faulted after pressing button, console will beep once. User should press button again within 4 sec. to force bypass those zones. Enter ["0"] to disable. Must be disabled for UL Listed installations.
- 1*60 ZONE 5 / AUDIO ALARM VERIFICATION 0
Enter "1" if audio alarm verification (AAV) is desired. If selected, zone 5 is no longer available as a protection zone. Enter ["0"] if two-way audio is not used.

**THIRD PAGE PROGRAMMING FIELDS
(press *94) PARTITIONING SETUP FIELDS**

Refer to the **PARTITION-SPECIFIC** program fields for programming each partition's variable characteristics.

1*70 EVENT LOG TYPES Alarm Check Bypass Opn/Cls System
[1 = Enable logging];
0 = Disable

1*71 12/24 HOUR TIME STAMP FORMAT
[0=12 hour]; 1=24 hour

1*72 EVENT LOG PRINTER ON-LINE
[0=Disable]; 1=Enable

1*73 PRINTER BAUD RATE
[0=1200]; 1=300

1*74 RELAY TIMEOUT XX MINUTES [000]
Enter the relay timeout, 0-127 in multiples of 2 minutes, desired for #80 Menu Mode time driven event relay command numbers "04/09" and #93 Menu Mode Relay Programming output command "56".

1*75 RELAY TIMEOUT YY SECONDS [000]
Enter the relay timeout, 0-127 seconds, desired for #80 Menu Mode time driven event relay command numbers "05/10" and #93 Menu Mode Relay Programming command "57".

1*76 ACCESS CONTROL FOR PARTITIONS Partition-Specific

2*00 NUMBER OF PARTITIONS
Enter [1] - 8

2*01 DAYLIGHT SAVINGS TIME [04, 10]
START/END MONTH
Start End
00-12; if no daylight savings time, enter 00,00

2*02 DAYLIGHT SAVINGS TIME [1, 5]
START/END WEEKEND#
Start| End
Enter 1-7. 1=first; 2=second; 3=third; 4=fourth; 5=last; 6=next to last; 7=3rd from last [1,5; 1st Sunday in April, last in Oct.]

2*05 AUTO-ARM DELAY Partition-Specific

2*06 AUTO-ARM WARNING PERIOD Partition-Specific

2*07 AUTO-DISARM DELAY Partition-Specific

2*08 ENABLE FORCE ARM FOR AUTO-ARM Partition-Specific

2*09 ENABLE OPEN/CLOSE REPORTS BY EXCEPTION Partition-Specific

2*10 ALLOW DISARMING ONLY DURING ARMING/DISARMING WINDOWS Partition-Specific

2*11 ALLOW DISARM OUTSIDE WINDOW [1] IF ALARM OCCURS
Used only if field 2*10 (partition-specific field) is set to "1". If this field is enabled ("1") the system can be disarmed outside the disarm window if an alarm has occurred. If "0", disarming can only be done during the disarm window. If field 2*10 is set to "0" for a partition, this field has no effect for that partition.

SCHEDULING RELATED DIALER REPORTS

2*13	2*14	
1st Digit	2nd Digit	
<input type="text" value="0"/> <input type="text" value="0"/>	<input type="text" value="0"/> <input type="text" value="0"/>	Early opening report code
<input type="text" value="0"/> <input type="text" value="0"/>	<input type="text" value="0"/> <input type="text" value="0"/>	Early closing report code
<input type="text" value="0"/> <input type="text" value="0"/>	<input type="text" value="0"/> <input type="text" value="0"/>	Late opening report code
<input type="text" value="0"/> <input type="text" value="0"/>	<input type="text" value="0"/> <input type="text" value="0"/>	Late closing report code
<input type="text" value="0"/> <input type="text" value="0"/>	<input type="text" value="0"/> <input type="text" value="0"/>	No opening (late to open) report code
<input type="text" value="0"/> <input type="text" value="0"/>	<input type="text" value="0"/> <input type="text" value="0"/>	No closing (late to close) report code
<input type="text" value="0"/> <input type="text" value="0"/>	<input type="text" value="0"/> <input type="text" value="0"/>	Auto-arm failure report code
<input type="text" value="0"/> <input type="text" value="0"/>	<input type="text" value="0"/> <input type="text" value="0"/>	Access schedule changed report code

2*18 ENABLE GOTO FOR THIS PARTITION Partition-Specific

2*19 USE PARTITION DESCRIPTORS
[0=Disable]; 1=Enable

2*20 ENABLE J7 TRIGGERS BY PARTITION Partition-Specific

2*21 ENABLE SUPERVISION PULSES [000]
FOR LRR TRIGGER OUTPUTS
F B S
Used for supervised connection to 7920SE.
Enter "0" to disable or "1" to enable the listed outputs.
F=Fire; B=Burglary; S=Silent panic/duress

SUMMARY OF PROGRAMMING COMMANDS

To enter program mode, enter installer code + [8] + [0] + [0]. Enter first field address to begin programming.

To set standard defaults, press *97

To set communications defaults, press *94 + one of the following: *80=low speed; *81=Ademco Express; *82=Ademco High Speed; *83=Ademco's Contact ID

To change to next page of program fields, press *94

To return to previous set of fields, press *99

To erase account & phone number field entries, press [*] + field number + [*]

To assign zone descriptors, press *93 + follow menu prompts

To add custom words, press *93 + follow menu prompts

To enter Installer's Message, press *93 + follow menu prompts

To exit program mode, press *99 OR *98: *99 allows re-access to programming mode by installer code. *98 prevents re-access to programming mode by installer code.

*93 OUTPUT RELAYS

OUTPUT RELAY	RSTRC	RELAY ACTION (A)	START					STOP		
			EVENT (EV)	ZONE LIST (ZL)	ZONE TYPE (ZT)		PART.	ZONE LIST (ZL)	ZONE TYPE (ZT)	
01	0	0	0	0	0	0	0	0	0	
02	0	0	0	0	0	0	0	0	0	
03	0	0	0	0	0	0	0	0	0	
04	0	0	0	0	0	0	0	0	0	
05	0	0	0	0	0	0	0	0	0	
06	0	0	0	0	0	0	0	0	0	
07	0	0	0	0	0	0	0	0	0	
08	0	0	0	0	0	0	0	0	0	
09	0	0	0	0	0	0	0	0	0	
10	0	0	0	0	0	0	0	0	0	
11	0	0	0	0	0	0	0	0	0	
12	0	0	0	0	0	0	0	0	0	
13	0	0	0	0	0	0	0	0	0	
14	0	0	0	0	0	0	0	0	0	
15	0	0	0	0	0	0	0	0	0	
16	0	0	0	0	0	0	0	0	0	

Where: **A = RELAY ACTION** 0 = No Response; 1 = Close for 2 sec; 2 = Close and stay closed; 3 = Pulse on and off
EV = EVENT 0 = Not used; 1 = Alarm; 2 = Fault; 3 = Trouble; 4 = Restore
ZL = ZONE LIST 1,2,3 or 4. 0 = Not Used.

START ZONE LIST: Upon alarm, fault, or trouble of ANY zone on this list, relay action will START.
STOP ZONE LIST: Upon restore of ALL zones on this list, relay action will STOP.
 It need not be same list as used for START.

ZT = ZONE TYPE/SYSTEM OPERATION

Choices for Zone Types are:

- 00 = Not Used
- 01 = Entry/Exit 1
- 02 = Entry/Exit 2
- 03 = Perimeter
- 04 = Interior Follower
- 05 = Trouble Day/Alarm Night

- 06 = 24 Hr Silent
- 07 = 24 Hr Audible
- 08 = 24 Hr Aux
- 09 = Fire Alarm or Trouble
- 10 = Interior w/Delay
- 23 = No Alarm Response

Note: Any zone in "ZT" going into alarm, fault, or trouble will actuate relay.
 Any zone of that type that restores will stop relay action.

Choices for System Operation are:

- 20 = Arming-Stay
- 21 = Arming-Away
- 22 = Disarming (Code + OFF)
- 31 = End of Exit Time
- 32 = Start of Entry Time
- 39 = Any Fire Alarm
- 42 = System Battery Low
- 45 = Polling Loop Failure
- 54 = Fire Zone Reset
- 57 = YY seconds (Enter YY in field 1*75; stop condition only)

- 33 = Any Burglary Alarm
- 34 = Code + # + 71 Key Entry
- 35 = Code + # + 72 Key Entry
- 36 = At Bell Timeout**
- 37 = 2 Times Bell Timeout**
- 40 = Bypassing
- 43 = Communication Failure
- 51 = RF Receiver Failure
- 55 = Disarm + 1 minute
- 58 = Duress

- 39 = Any Fire Alarm
- 40 = Bypassing
- 41 = AC Power Failure
- 42 = System Battery Low
- 38 = Chime
- 41 = AC Power Fail
- 44 = RF Low Battery
- 52 = Kissoff
- 56 = XX minutes (Enter XX in field 1*75; stop condition only)

60 = Two-way Audio

**Or at Disarming, whichever occurs earlier.

***93 ZONE LISTS FOR OUTPUT RELAYS**

Record desired zone numbers. More or fewer boxes than shown may be needed, since any list may include *any* or *all* of system's zone numbers.

Zone List 1: Started or stopped by zone numbers (enter 00 to end entries).

, , , , , , , , , , ...etc.

Zone List 2: Started or stopped by zone numbers (enter 00 to end entries).

, , , , , , , , , , ...etc.

Zone List 3: Started or stopped by zone numbers (enter 00 to end entries).

, , , , , , , , , , ...etc.

Zone List 4: Started or stopped by zone numbers (enter 00 to end entries).

, , , , , , , , , , ...etc.

Zone List 5: Started or stopped by zone numbers (enter 00 to end entries).

, , , , , , , , , , ...etc.

Zone List 6: Started or stopped by zone numbers (enter 00 to end entries).

, , , , , , , , , , ...etc.

Zone List 7: Started or stopped by zone numbers (enter 00 to end entries).

, , , , , , , , , , ...etc.

Zone List 8: Started or stopped by zone numbers (enter 00 to end entries).

, , , , , , , , , , ...etc.

Device Assignments

Device Addr	Device Type	Parameter 1	Value	Parameter 2	Value
0	Alpha Console	Master Partition	1	Sounder Opt	No suppression
1	Alpha Console	Master Partition	1	Sounder Opt	No suppression
2	Alpha Console	Master Partition	1	Sounder Opt	No suppression
3	Not Used	N/A	N/A	N/A	N/A
4	Not Used	N/A	N/A	N/A	N/A
5	Not Used	N/A	N/A	N/A	N/A
6	Not Used	N/A	N/A	N/A	N/A
7	Not Used	N/A	N/A	N/A	N/A
8	Not Used	N/A	N/A	N/A	N/A
9	Not Used	N/A	N/A	N/A	N/A
10	Not Used	N/A	N/A	N/A	N/A
11	Not Used	N/A	N/A	N/A	N/A
12	Not Used	N/A	N/A	N/A	N/A
13	Not Used	N/A	N/A	N/A	N/A
14	Not Used	N/A	N/A	N/A	N/A
15	Not Used	N/A	N/A	N/A	N/A
16	Not Used	N/A	N/A	N/A	N/A
17	Not Used	N/A	N/A	N/A	N/A
18	Not Used	N/A	N/A	N/A	N/A
19	Not Used	N/A	N/A	N/A	N/A
20	Not Used	N/A	N/A	N/A	N/A
21	Not Used	N/A	N/A	N/A	N/A
22	Not Used	N/A	N/A	N/A	N/A
23	Not Used	N/A	N/A	N/A	N/A
24	Not Used	N/A	N/A	N/A	N/A
25	Not Used	N/A	N/A	N/A	N/A
26	Not Used	N/A	N/A	N/A	N/A
27	Not Used	N/A	N/A	N/A	N/A
28	Not Used	N/A	N/A	N/A	N/A
29	Not Used	N/A	N/A	N/A	N/A
30	Not Used	N/A	N/A	N/A	N/A

Vista50PADT-6+ GLOBAL SCHEDULING DATA

Time Windows No Time Windows Currently Set

	Schedule # 1		Schedule # 2		Schedule # 3		Schedule # 4		Schedule # 5		Schedule # 6		Schedule # 7		Schedule # 8	
	WNDW 1	WNDW 2	WNDW 1	WNDW 2	WNDW 1	WNDW 2	WNDW 1	WNDW 2	WNDW 1	WNDW 2	WNDW 1	WNDW 2	WNDW 1	WNDW 2	WNDW 1	WNDW 2
Monday	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--
Tuesday	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--
Wednesday	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--
Thursday	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--
Friday	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--
Saturday	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--
Sunday	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--
Holiday	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--

Daylight Savings Time Selections		
	Month	Sunday
Start	April	First
End	October	Last

Enable Disarming Outside Disarm Window

Event	Description	Active Days							Time Window	Activation Time w/in Time Window	Action
		M	T	W	R	F	S	Su			
1	--	--	--	--	--	--	--	--	--	--	
2	--	--	--	--	--	--	--	--	--	--	
3	--	--	--	--	--	--	--	--	--	--	
4	--	--	--	--	--	--	--	--	--	--	
5	--	--	--	--	--	--	--	--	--	--	
6	--	--	--	--	--	--	--	--	--	--	
7	--	--	--	--	--	--	--	--	--	--	
8	--	--	--	--	--	--	--	--	--	--	
9	--	--	--	--	--	--	--	--	--	--	
10	--	--	--	--	--	--	--	--	--	--	
11	--	--	--	--	--	--	--	--	--	--	
12	--	--	--	--	--	--	--	--	--	--	
13	--	--	--	--	--	--	--	--	--	--	
14	--	--	--	--	--	--	--	--	--	--	
15	--	--	--	--	--	--	--	--	--	--	
16	--	--	--	--	--	--	--	--	--	--	
17	--	--	--	--	--	--	--	--	--	--	
18	--	--	--	--	--	--	--	--	--	--	
19	--	--	--	--	--	--	--	--	--	--	
20	--	--	--	--	--	--	--	--	--	--	

Vista50PADT-6+ GLOBAL SCHEDULING DATA

Timer Output Programming											
Timer	Device	On Time	Off Time	Monday	Tuesday	Wednesday	Thursday	Friday	Saturday	Sunday	Permanent
1	0 *** No Relay	0:00 AM	0:00 AM	--	--	--	--	--	--	--	--
2	0 *** No Relay	0:00 AM	0:00 AM	--	--	--	--	--	--	--	--
3	0 *** No Relay	0:00 AM	0:00 AM	--	--	--	--	--	--	--	--
4	0 *** No Relay	0:00 AM	0:00 AM	--	--	--	--	--	--	--	--
5	0 *** No Relay	0:00 AM	0:00 AM	--	--	--	--	--	--	--	--
6	0 *** No Relay	0:00 AM	0:00 AM	--	--	--	--	--	--	--	--
7	0 *** No Relay	0:00 AM	0:00 AM	--	--	--	--	--	--	--	--
8	0 *** No Relay	0:00 AM	0:00 AM	--	--	--	--	--	--	--	--
9	0 *** No Relay	0:00 AM	0:00 AM	--	--	--	--	--	--	--	--
10	0 *** No Relay	0:00 AM	0:00 AM	--	--	--	--	--	--	--	--
11	0 *** No Relay	0:00 AM	0:00 AM	--	--	--	--	--	--	--	--
12	0 *** No Relay	0:00 AM	0:00 AM	--	--	--	--	--	--	--	--
13	0 *** No Relay	0:00 AM	0:00 AM	--	--	--	--	--	--	--	--
14	0 *** No Relay	0:00 AM	0:00 AM	--	--	--	--	--	--	--	--
15	0 *** No Relay	0:00 AM	0:00 AM	--	--	--	--	--	--	--	--
16	0 *** No Relay	0:00 AM	0:00 AM	--	--	--	--	--	--	--	--
17	0 *** No Relay	0:00 AM	0:00 AM	--	--	--	--	--	--	--	--
18	0 *** No Relay	0:00 AM	0:00 AM	--	--	--	--	--	--	--	--
19	0 *** No Relay	0:00 AM	0:00 AM	--	--	--	--	--	--	--	--
20	0 *** No Relay	0:00 AM	0:00 AM	--	--	--	--	--	--	--	--

Scheduling Related Dialer Reports		
	1st Digit	2nd Digit
EARLY OPENING	0	0
EARLY CLOSING	0	0
LATE OPENING	0	0
LATE CLOSING	0	0
NO OPENING	0	0
NO CLOSING	0	0
AUTO-ARM FAILURE	0	0
ACCESS SCHEDULE CHANGED	0	0

Holiday Schedule		
Holiday #	Date	Partition 1
1	Not Used	--
2	Not Used	--
3	Not Used	--
4	Not Used	--
5	Not Used	--
6	Not Used	--
7	Not Used	--
8	Not Used	--
9	Not Used	--
10	Not Used	--
11	Not Used	--
12	Not Used	--
13	Not Used	--
14	Not Used	--
15	Not Used	--
16	Not Used	--

Vista50PADT-6+ PARTITION SPECIFIC SCHEDULING DATA

Open/Close Schedules	Partition 1	
	Open	Close
Monday	0	0
Tuesday	0	0
Wednesday	0	0
Thursday	0	0
Friday	0	0
Saturday	0	0
Sunday	0	0
Holiday	0	0

Temporary Schedules

Partition 1	Status	Start Arm	Stop Arm	Start Disarm	Stop Disarm
Monday	--	0:00 AM	0:00 AM	0:00 AM	0:00 AM
Tuesday	--	0:00 AM	0:00 AM	0:00 AM	0:00 AM
Wednesday	--	0:00 AM	0:00 AM	0:00 AM	0:00 AM
Thursday	--	0:00 AM	0:00 AM	0:00 AM	0:00 AM
Friday	--	0:00 AM	0:00 AM	0:00 AM	0:00 AM
Saturday	--	0:00 AM	0:00 AM	0:00 AM	0:00 AM
Sunday	--	0:00 AM	0:00 AM	0:00 AM	0:00 AM

Vista50PADT-6+ PARTITION SPECIFIC SCHEDULING DATA

Scheduling Options

Partition	Partition Options			Auto-Arm Times		
	Force Arm for Auto-Arm	Open/Close Reports by Exception	Disarm Only During Disarm Window	Delay	Warning	Disarm
1	--	--	--	Disable	15	Disable

PARTITION-SPECIFIC FIELDS

To program these fields,

1. Press *91 to select a partition.
2. Enter a partition-specific field number (ex. *09).
3. Repeat steps 1 & 2 for each partition in the system.
4. To return to the global program fields, press *99.

PARTITION # 1 PROGRAM FIELDS

1st Page Fields

- *09** ENTRY DELAY #1 03
 [03] (00-15 times 15 seconds)
 Maximum 3 for UL Listed installations.
- *10** EXIT DELAY #1 04
 [04] (00-15 times 15 seconds)
 Maximum 4 for UL Listed installations.
- *11** ENTRY DELAY #2 06
 [06] (00-15 times 15 seconds)
 Maximum 3 for UL Listed installations.
- *12** EXIT DELAY #2 08
 [08] (00-15 times 15 seconds)
 Maximum 4 for UL Listed installations.
- *13** ALARM SOUNDER DURATION 02
 [02] 01-15 times 2 minutes [02]. Minimum 4 minutes for UL.
- *16** CONFIRMATION OF ARMING DING 0
 [0] 1=enable; [0]=disable]
- *22** KEYPAD PANIC ENABLES [001] 1 0 1
 [1 0 1] 1=enable; 0=disable
 95 96 99
- *23** MULTIPLE ALARMS 1
 [1] [1=Yes]; 0=No
- *29** QUICK ARM 1
 [1] [1=Yes]; 0=No
- *32** PRIM. SBSCRBR ACCT# 08 08 07 06
 [08 08 07 06] Enter 00-09; B-F (11-15) [15 15 15 15]
- *38** PREVENT ZONE XX BYPASS 00
 [00] 01-86; [00 if all zones (except Fire Zones) can be bypassed]
- *39** ENABLE OPEN/CLOSE REPORT FOR INSTALLER CODE 0
 [0] 1=Enable; [0]=Disable]
- *84** SWINGER SUPPRESSION 15
 [15] 0-15 alarms; Must be "00" (disabled) for UL.
- *85** ENABLE DIALER REPORTS FOR PANICS & DURESS 1 0 1 0
 [1 0 1 0] 1=Enable; 0=Disable
 95 96 99 Duress
- *87** ENTRY WARNING 1
 [1] [1=Continuous]; 0=3 Beeps
- *88** BURG. ALARM COMM. DELAY 1
 [1] [1=16 seconds]; 0=no delay
- *90** SECONDARY SUBSCRIBER ACCOUNT # 15 15 15 15
 [15 15 15 15] Enter 00-09; B-F(11-15)
 [15 15 15 15]
- *93** PARTITION DESCRIPTOR P1
 [P1]

2nd Page Fields

- 1*18** AFFECTS LOBBY 0
 [0] Enter "1" if this partition affects the common lobby;
 Enter "0" if it does not.
- 1*19** ARMS LOBBY 0
 [0] Enter "1" if arming this partition attempts to arm lobby;
 Enter "0" if it does not.
- 1*43** PERMANENT KEYPAD BACKLIGHT 0
 [0] 1=Enable; [0]=Disable] When disabled, display lights when any
 key is pressed, and turns off after period of keypad inactivity.
- 1*45** EXIT DELAY SOUNDING 1
 [1] [1=Enable]; 0=Disable Produces quick beeping during exit
 delay if enabled.
- 1*47** CHIME ON EXTERNAL SIREN 0
 [0] 1=Enable; [0]=Disable]
- 1*52** SEND CANCEL IF ALARM + OFF 1
 [1] [1=No restriction]; 0=Within Bell Timeout period only
- 1*76** ACCESS CONTROL RELAY [00] FOR PARTITIONS 0 0
 [0 0] Relay will be pulsed for 2 seconds whenever code + [0] is
 pressed. Enter 00-16; 00 = none
- #### 3rd Page Fields
- 2*05** AUTO-ARM DELAY 1 5
 [1 5] Enter the time between the end of the arming window and the
 start of auto-arming warning period, in values of 1-14 times 4
 minutes 00=instant; [15=no auto arm at all]. When this delay
 expires, the Auto-Arm Warning Period begins.
- 2*06** AUTO-ARM WARNING PERIOD 1 5
 [1 5] This is the time during which the user is warned to exit the
 premises prior to the auto-arming of the system (beeps every
 15 seconds; "ALERT" displayed). Enter 01-15 minutes.
 [15 minutes].
- 2*07** AUTO-DISARM DELAY 1 5
 [1 5] This is the time between the end of the disarming window and
 the start of auto-disarming. Enter 01-14 times 4 minutes;
 00=instant at end of window; [15=no auto-disarm].
- 2*08** ENABLE FORCE ARM 0
 [0] [0=Disable]; 1=Enable
- 2*09** ENABLE OPEN/CLOSE REPORTS BY EXCEPTION 0
 [0] [0=Disable]; 1=Enable; If enabled, only openings and closings
 occurring outside the scheduled opening/closing windows will
 trigger dialer reports. Opening reports will also be suppressed
 during the closing window, in order to prevent false reports
 when the user arms the system and then reenters the
 premises to retrieve a forgotten item.
- 2*10** ALLOW DISARMING ONLY DURING ARMING/DISARMING WINDOWS 0
 [0] See system-wide field 2*11 if enabling field 2*10. This feature
 adds high security to the installation.
 [0=Disable]; 1=Enable
- 2*18** ENABLE GOTO FOR THIS PARTITION 1
 [1] 0=Disable; [1=Enable]
- 2*20** ENABLE J7 TRIGGERS BY PARTITION 1
 [1] 0=Disable for displayed partition; [1=Enable for displayed partition]