

### OptiCoax-1 Pin Out

This document explains the pin out for the OptiCoax-1's RJ45 connection.

#### RJ45 Connection

Pin 1 - + 12vdc

Pin 6 – BNC Signal Negative

Pin 4 – Ground (Black wire)

Pin 5 – BNC Signal

