



# ADEMCO

## 4120XM

### Keypad/Console Command Summary

Command / Function Name	Syntax	Comments/Notes
Arming Away	Code + 2	Gives Both Entry & Exit Delays & Arms Everything
Arming Stay	Code + 3	Gives Both Entry & Exit Delays & Bypasses Interior Zones
Arming Instant	Code + 7	Gives Exit, but no entry Delay & Bypasses Interior Zones
Bypassing	Code + 6 + Zone #	
Forced Bypass	Code + 6 + #	
Chime	Code + 9	
Adding User Codes	Master Code + User # (03-70) + New Code	
Deleting User Codes	Master Code + 8 + User # (03-70) + Master Code	
Duress	One digit higher	Example: If the code is 1234 the duress code would be 1235
10 Day History	Code + 0	Once this is viewed the history is deleted
Site Initiated Download	Installer Code + # + 1	
Virgin Download/Direct Wire Command	Installer Code + # + 5	Panel MUST be defaulted & it will only answer 1 time. (picks up after 4 <sup>th</sup> ring)
Entering Program Mode	Installer Code + 8 + 0 + 0	
Go/No Go Test Mode	Installer Code + 5	Puts the receiver in 1/2 Gain Mode to test signal strength
House ID Sniffer Mode	Installer Code + # + 2	
Transmitter ID Sniffer Mode	Installer Code + # + 3	

General Notes:

---



---



---



---



---