



ADEMCO 4140XMPT Keypad/Console Command Summary

Command / Function Name	Syntax	Comments/Notes
Arming Away	Code + 2	Gives both exit & entry delays & arms everything
Arming Stay	Code + 3	Gives both exit & entry delays & bypasses interior zones
Arming Maximum	Code + 4	Gives exit but no entry delay & arms everything
Arming Instant	Code + 7	Gives exit but no entry delay & bypasses interior zones
Quick Arming	# + 2,3,4 or 7	Master Code must be programmed as User 02
Disarming	Code + 1	
Bypassing	Code + 6 + zone number	Always Enabled
Chime Mode	Code + 9	
Forced Bypass	Code + 6 + #	
Setting Clock	Installer/Master Code + # + 63	
System Test	Code + 5	Code + 1 exits
Go/No Go test	Code + 5	The 4280 receiver must be set to house ID 00.
House ID Sniffer Mode	Installer Code + # + 2	
Transmitter ID Sniffer Mode	Installer Code + # + 3	
Scheduling Events	Installer Code + # + 80	
Temporary Schedule	User Code + # + 81	Installer, Master, or Manager levels only
Extended Closing Window	User Code + # + 82	Installer, Master, or Manager Levels only
End User Output Programming	User Code + # + 83	
To check code	Code + * + *	Gives user number, level, & partition
Adding Master Code	Installer Code + 8 + 02 – 99 + New Code then follow prompts	Level 1 is the master code
Adding Codes	Master Code + 8 + user number (02-70)	Follow Prompts
Changing Codes	Master Code + 8 + user number (02-70)	When it asks you to add new user & it will over write the existing code.
Goto Partition	Code + * + partition number	Must be enabled in 2*18 for each partition
GOTO Home Partition	User Code + 0	
View Downloaded Messages	Press 0 for 5 seconds	
Display all Zone Descriptors	Press * for 5 seconds	
Display user self help	Hold any key for 5 seconds	
Site initiated download	Installer code + [#] + 1	
Direct Wire Download Enable/Virgin Download	Installer Code + [#] + 5	If using for virgin download the panel must be defaulted & will only answer 1 time.
Enter program mode	Installer code + 8 + 00 (default = 4140)	
Activate Output Device Manually	Code + [#] + 70	Turns relays on or off

Activate Access Relay for current partition	User Code + 0	
Clear Event Log	Code + # + 62	
Display event log	Master code + [#]+ 60	