





**ALARM REPORT CODE & ID DIGITS FOR ZONES 1-32 & SUPERVISORY & RESTORE CODES**

[All codes default to 00]

<b>*54</b> Code	<b>*55</b> ID	<b>*56</b> Code	<b>*57</b> ID	<b>*58</b>	<b>*59</b> Code	<b>*60</b> ID	<b>*61</b> Code	<b>*62</b> ID	<b>*63</b>
1	01	9	09	00 Alarm Rst.	17	08	25	00	00 Alarm Rst.
2	02	10	01	00 Trouble	18	09	26	00	00 Trouble
3	03	11	02	00 Trouble Rst.	19	00	27	00	00 Trouble Rst.
4	04	12	03	00 Bypass	20	00	28	00	00 Bypass
5	05	13	04	00 Bypass Rst.	21	00	29	00	00 Bypass Rst.
6	06	14	05		22	00	30	00	
7	07	15	06		23	00	31	00	
8	08	16	07		24	00	32	00	

**ALARM REPORT CODE & ID DIGITS FOR ZONES 33-64 & SUPERVISORY & RESTORE CODES**

[All codes default to 00]

<b>*64</b> Code	<b>*65</b> ID	<b>*66</b> Code	<b>*67</b> ID	<b>*68</b>	<b>*69</b> Code	<b>*70</b> ID	<b>*71</b> Code	<b>*72</b> ID	<b>*73</b>
33	00	41	00	00 Alarm Rst.	49	00	57	00	00 Alarm Rst.
34	00	42	00	00 Trouble	50	00	58	00	00 Trouble
35	00	43	00	00 Trouble Rst.	51	00	59	00	00 Trouble Rst.
36	00	44	00	00 Bypass	52	00	60	00	00 Bypass
37	00	45	00	00 Bypass Rst.	53	00	61	00	00 Bypass Rst.
38	00	46	00		54	00	62	00	
39	00	47	00		55	00	63	00	
40	00	48	00		56	00	64	00	

**ALARM REPORT CODE & ID DIGITS FOR RF RCVR'S & PANICS, & THEIR SUPV. & RESTORE CODES**

[All codes default to 00]

<b>*74</b> Code	<b>*75</b> ID	<b>*76</b> Code	<b>*77</b> ID	<b>*78</b>
88	00	89	00	00 Alarm Rst.
		90	00	00 Trouble
		91	00	00 Trouble Rst.
			01	00 Duress
		97	00	00 Poll Loop Short
			01	00 (1 + *)
		95	01	00 (3 + #)
		96	01	00 (* + #)
		99	01	00 (* + #)

NOTES:  
 97 = Poll Loop Short  
 88 & 90 = RCVR not receiving transmitter signals  
 89 & 91 = RCVR not responding; bad connection to panel.

**ZONE TYPE RESTORE ENABLES**

[0 = disable]; 1 = enable

<b>*79</b> ZONE TYPES 1-8	<b>*80</b> ZONE TYPES 9 & 10
00000000	00
1 2 3 4 5 6 7 8	9 10

**SYSTEM NON ALARM CODES**

	<b>*81</b>	<b>*82</b>
	First Digit	Second Digit
Close	00	00
Open	00	00
Low Battery	01	00
Low Battery	00	00
AC Loss	01	00
AC Restore	00	00
Test	00	00
Power	00	00
Cancel	01	00
Program Tamper	00	00

**\*40 OPEN/CLOSE REPORTING FOR KEYSWITCH** [0 = disable]; 1 = enable

0

**EVENT LOGGING DIALER CODES**

	<b>1*40</b>	<b>1*41</b>
	First Digit	Second Digit
Armed STAY	00	00
Time/Date set or event log reset	00	00
Event log 50% & 90% full	00	00
Event log overflow	00	00

**EVENT LOGGING FIELDS**

(Real time clock must be set-code + [#] + 63)

<b>1*70</b> EVENT LOG TYPES	1	0	0	0	1
[0 = disable]; 1 = enable	Alarm	Chck	Byps	Oprn/Cls	System
<b>1*71</b> 12/24 HOUR TIME STAMP FORMAT					0
[0 = 12 hour]; 1 = 24 hour					
<b>1*72</b> EVENT LOG PRINTER ON-LINE					0
[0 = disable]; 1 = enable					
<b>1*73</b> PRINTER BAUD RATE					0
[0 = 1200]; 1 = 300					

# PARTITION SPECIFIC PROGRAM FORM

(Duplicate this page for each partition in the installation)

To program these fields, enter a partition-specific field number.  
 To select the next partition, press \*91.  
 To return to the global program fields, press \*99.

## PARTITION #1 PROGRAM FIELDS

- \*09 **ENTRY DELAY #1**    
[02] (00-15 times 15 seconds)
  - \*10 **EXIT DELAY #1**    
[03] (00-15 times 15 seconds)
  - \*11 **ENTRY DELAY #2**    
[06] (00-15 times 15 seconds)
  - \*12 **EXIT DELAY #2**    
[08] (00-15 times 15 seconds)
  - \*13 **ALARM SOUNDER DURATION**    
01-15 times 2 minutes [04]. Minimum 4 minutes for UL.
  - \*16 **CONFIRMATION OF ARMING DING**   
1=enable; [0]=disable
  - \*22 **CONSOLE PANIC ENABLES**     
1=enable; 0=disable [0-0-1] 95 96 99
  - \*23 **MULTIPLE ALARMS**   
[1=yes]; 0=no;
  - \*29 **QUICK ARM**   
[1=yes]; 0=No; Must be "0" for UL.
  - \*32 **PRIMARY SUBSCRIBER ACCOUNT #**  
         
Enter 00-09; B-F(11-15) [15 15 15 15]
  - \*38 **INHIBIT BYPASS OF A ZONE**    
01-31; [00 if all zones (except fire zones) can be bypassed]
  - \*39 **ENABLE OPEN/CLOSE REPORT FOR INSTALLER CODE**   
1=enable; [0]=disable
  - \*84 **SWINGER SUPPRESSION COUNT**    
01-15 alarms [15] Must be 00 (disabled) for UL.
  - \*85 **ENABLE DIALER REPORTS FOR PANICS & DURESS**   
1=enable; [0]=disable
  - \*87 **ENTRY WARNING**   
[1=continuous]; 0=3 beeps
  - \*88 **BURG ALARM COMM DELAY**   
1=16 seconds; [0=no delay]
  - \*90 **SECONDARY SUBSCRIBER ACCT #**  
         
Enter 00-09; B-F(11-15) [15 15 15 15]
- CURRENT LCD DISPLAY FOR THIS PARTITION
- \*\*\*\*DISARMED\*\*\*\*

READY TO ARM
- 1\*43 **ENABLE PERM BACKLIGHT**   
1=enable; [0]=disable
  - 1\*45 **ENABLE CONSOLE ANNUN DURING EXIT DELAY**   
1=enable; [0]=disable
  - 1\*47 **ENABLE CHIME ANNUN ON EXTERNAL SOUNDER**   
1=enable; [0]=disable
  - 1\*52 **CANCEL REPORT RESTRICTION**   
1=no restriction; [0=within bell timeout period only]
  - 2\*18 **ENABLE GOTO FOR THIS PARTITION**   
1=enable; [0]=disable
  - 2\*20 **ENABLE J7 TRIGGERS BY PARTITION**   
[1=enable for displayed partition]; 0=disable for displayed partition