

ADEMCO

4140XMPT2

Keypad/Console Message Summary

Display	Cause	Comments/Notes
Ed	User Edit Mode or Program Mode	Using fixed keypad to change codes
Ea	Enter Authority Level	Fixed keypad
Ad	Add new user	Fixed keypad
De	Delete user	Fixed keypad
OC	Open/close reporting	Fixed keypad
Dc	Code successfully deleted	Fixed keypad
OA	Arm All	Fixed keypad
A1 or A2	Arm partition 1 or 2	Fixed keypad
FC	User already exists or out of range	Fixed keypad
Sb	System reset	Fixed keypad
CO	Logging on to partition	Fixed keypad
dA	Disarm all	Fixed keypad
AA	Auto Arming exit now	Fixed keypad
C1 or C2	Closing extended 1 or 2 hours	Fixed keypad
D1 or d2	Disarm partition 1 or 2	Fixed keypad
OO	Multi access, global arming, next partition	Fixed keypad
Check followed by a zone #	Indicates an open on that zone, faulted zone, it is not seen by the polling loop, a wireless zone has not checked in or a wireless transmitter has been tampered	
Check 97	Polling Loop Short	
Check 88 or 90	Receivers are not receiving signals from transmitters.	88 = 2 nd receiver & 90 = 1 st receiver
Check 89 or 91	Receiver is not responding to the control panel.	89 = 2 nd receiver & 91 = 1 st receiver
COMM. FAILURE	System did not communicate with central station	
LO BAT followed by a zone number	This indicates a low battery on that wireless zone	
SYSTEM LO BAT	The backup battery is low	
RCVR SET UP ERROR or E4/E8	You have programmed more wireless zones then the receiver can handle	
MODEM COMM. Or CC	Indicates that the panel is on-line with a remote computer	
OPEN CKT or OC	Open circuit on the keypad	

