



**BATTERY STANDBY CAPACITY:** At least 4 hours (with fully charged 5AH battery). Total continuous current drain of connected accessories (e.g. space protection devices, smoke or combustion detectors) must not exceed 300 MA.

**AC POWER LIGHT (Green):** Lit when AC power is connected. Out when system is operating from standby power.

**ZONE 1-3, 6 LIGHTS (Red):** Lit steadily when the zone is faulted. Flashes slowly when the zone is bypassed. Flashes rapidly to denote a memory of a previous fault (that caused an alarm).

**ZONE 4 LIGHT (Red):** Lit steadily when the zone has an alarm fault. Flashes slowly when the zone is bypassed. Flashes rapidly to denote a memory of a previous alarm-fault (that caused an alarm).

**ZONE 4 TROUBLE LIGHT (Red):** Lit steadily when the zone has a trouble fault. Flashes rapidly to denote a memory of a previous trouble fault.

**FIRE TEST/RESET SWITCH:** Rightward momentary operation of the switch causes Fire Zone Light 4 to come on and rapid warbling siren (and/or pulsing bell) will sound until the switch is momentarily moved leftward to the RESET position. This activation also interrupts ground to any connected smoke detectors, resetting them. Use the TEST function weekly to test the fire circuit. A signal will be sent to a central monitoring agency (if used) during this test.

**BURGLARY SYSTEM TEST:** It is recommended that your burglary system be tested at least once per week.

**Diagram 9: SUMMARY OF CONNECTIONS**