

USER FUNCTIONS

Programming Devices


General Information

The Device programming option can be used to trigger device, send Follow-Me or E-mail messages of system events. Up to 16 devices can be programmed. Devices 1 through 8 are used for Triggers and Follow-Me Messages and Devices 9 through 16 are used for E-mail events. Check with your Installer to see which options are available to you.


The following options are programmed in this section:

Programming Field	Action
Device 1 -16:	Select Device 1 -16
Name:	Name the device
Action:	Select the action required for the device
Start Zone Type:	Select Zone Type to trigger event
Stop Zone Type:	Select Zone Type to stop event
Start System Operation:	Select System Operation to trigger event
Stop System Operation:	Select System Operation to stop event
Zone Number Operation:	Select Zone Number to trigger event upon fault, trouble or alarm as selected.

Programming Devices

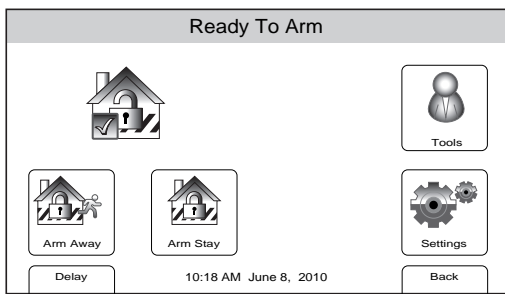

1. With the system in the disarmed state, select the “Tools” icon from the second page of the Home Screen. The system displays the Keypad screen.

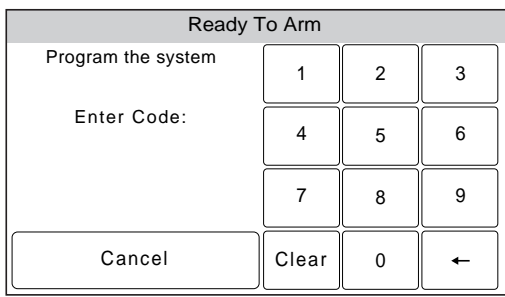

2. Enter your 4-digit Master User Code. The system displays the Master User programming screen.

Also available from Installer Tools screen

USER FUNCTIONS

Programming Devices

Ready To Arm

Users	Devices	Schedules	Test
Date Time	Events	Reminders	Slide Show

Back

5000-100-070-V0

3. Select the “Devices” icon. The system displays the Devices screen.

Ready To Arm

Device 1 New	Device 2 New	↶
Device 3 New	Device 4 New	△
Device 5 New	Device 6 New	▽
Edit		Delete

5000-100-187-V0

4. Select a “Device” key followed by the Edit button. The system displays a keyboard.

Ready To Arm

123!@#										↶
Q	W	E	R	T	Y	U	I	O	P	
A	S	D	F	G	H	J	K	L		
Clear	Z	X	C	V	B	N	M		←	
ABC...									Done	

5000-100-190-V0

5. If desired you can enter a Device Name. Select the “Clear” key and then enter up to 13 characters of text.

Note: Select the “ABC...” key to switch the keyboard between upper/lower case or the “123!@#” key to switch to numbers.

6. Once you are finished, select “Done”. The system returns to the Device screen.

Ready To Arm

Name	01	↶
Type	Disabled	
		▽
		Save

5000-100-188-V0

7. Select the “Type” button. Dependant upon what features are programmed in your control the system toggles between the following options:

- Disabled
- Trigger Output - Negative Trigger on Panel
- Message to Phone 1- If Follow Me Phone 1 is programmed
- Message to Phone 2- If Follow Me Phone 2 is programmed
- Message to ph. 1&2- If Follow Me Phone 1 & 2 are prog.
- Email 1 - If Multi Mode Relay Reports is Enabled

When an option is selected, the system displays several new programming fields.

USER FUNCTIONS

Programming Devices

Ready To Arm		
Name	01	↶
Type	Action	
Trigger Output	None	
Start Zone Type	Stop Zone Type	▼
Not Used	Not Used	
Start System Operation	Stop System Operation	Save
Not Used	Not Used	

5000-100-189-V0

8. Select "Action". Dependant upon the Type selected previously, the system scrolls between several options:
 None
 Permanent On- Trigger
 On for 2 sec - Trigger
 Pulsing - Trigger
 Send - Follow Me or Email
9. Select "Start Zone Type". The system displays the following options: Trips on Alarm/Fault/or Trouble.

Not Used	Entry Exit 1
Entry Exit 2	Perimeter
Interior Follower	Day/Night
24 Hour Silent	24 Hour Audible

 Use the "▲" "▼" buttons to scroll to second page of zone type options.

Silent Burglary	24 Hour Auxiliary
Interior With Delay	Fire No Verification
Carbon Monoxide	Trouble
No Response	Arm Stay

 Use the "▲" "▼" buttons to scroll to third page of zone type options.

Arm Away	Disarm
Monitor	Resident Monitor
Resident Response	General Monitor
General Response	
10. Select "Stop Zone Type". The system displays the same options as step 9.
11. Select "Start System Operation". The system displays the following options:

Not Used	Arm Stay
Arm Away	Disarm
Any Burglary Alarm	Any Fire Alarm
Bell Timeout*	End of Exit Delay*

 Use the "▲" "▼" buttons to scroll to second page of zone type options.

Start of Entry Delay*	Chime*
Kissoff*	Bypass*
System Low Battery*	Reporter Failure*
Duress Alarm*	
12. Select "Stop System Operation". The system displays the same options as step 11.
 Use the "▲" "▼" buttons to scroll to second page of options.

*Trigger Only

USER FUNCTIONS

Programming Devices

Ready To Arm	
Zone Number Operation Not Used	↶
	▲
	Save

5000-100-191-V0

13. Select “Zone Number Operation”. The system toggles between the following options:

None
Trouble
Fault
Alarm

If Trouble, Fault or Alarm is selected, the system displays several new options:

Ready To Arm	
Zone Number Operation Fault	↶
First Start Zone Disabled	First Stop Zone Disabled
	▲
Second Start Zone Disabled	Second Stop Zone Disabled
Third Start Zone Disabled	Third Stop Zone Disabled
	Save

5000-100-192-V0

14. Select a Start Zone or Stop Zone Number from the list displayed by the system. Shows only zones programmed.

15. Select “Save” when programming is complete.

Editing or Deleting Devices

Ready To Arm	
Device 1 System Armed Follow Me	Device 2 New
Device 3 New	Device 4 New
Device 5 New	Device 6 New
	▼
Edit	Delete

5000-100-194-V0

1. At the Device Programming Screen, select the Device that you wish to edit or delete.

2. To delete the device, select the delete button. To edit the device select the Edit button and proceed to step 3.

Ready To Arm	
Name System Armed	01
Type Message to phone 1	Action Send
Start Zone Type Not Used	Stop Zone Type Not Used
	▼
Start System Operation Armed Stay	Stop System Operation Disarm
	Save

5000-100-195-V0

3. Select the field that you wish to edit and follow the steps as outlined in the Programming Devices procedure.