

## Panel & Communicator Setup Lynx ECP – Dialer First, Radio Backup

Scope: LynxR-i, LynxR2 Family

### Required Panel Programming

Primary Phone Number .....\*41 – {Central Station Phone Number}  
Primary Subs Account Number .....\*43 – {four digit number required}  
Long Range Radio Output .....\*55 – 1 – LRR/IP and Telco Line  
Dynamic Signaling Delay/Priority .....\*77 – 4, 0 {60 Second Delay}

*Note: Report codes must be enabled for reporting.*

### Required AlarmNet Device

Device Mode .....ECP  
ECP Address .....03

### Device Connection

Connect the AlarmNet device to the control panel using a four wire connection to the keypad bus, as show below.

