

# ADEMCO LYNXR Series Security Systems

## Voice Prompt Programming Guide


### Introduction

In addition to the standard Expert Programming mode, the LYNXR Series features a quick programming mode that allows you to program the system by responding to a series of voice prompts. The Voice Prompt Programming Guide provides you with the information required to use this feature.

### Voice Prompt Programming Keypad Functions:

The keys shown below are used to navigate through the Voice Prompt Programming Feature.

1. **ESCAPE/**OFF **key:** Used at any time to exit the current menu and return to the previous prompt.
2. **ADD/**AWAY **key:** Used to add sensors, or keys or save data when entering phone or account numbers.
3. **DELETE/**STAY **key:** Used to delete a sensor when in the delete Sensors Menu.
4. **SELECT/**AUX **key:** Used to confirm a selection.
5. 3 ↑ **key:** Used to scroll forward through menu choices.
6. 6 ↓ **key:** Used to scroll backward through menu choices.
7. **FUNCTION/**# **key:** Used to repeat a voice prompt. (This function cannot be used while entering phone or account numbers.)

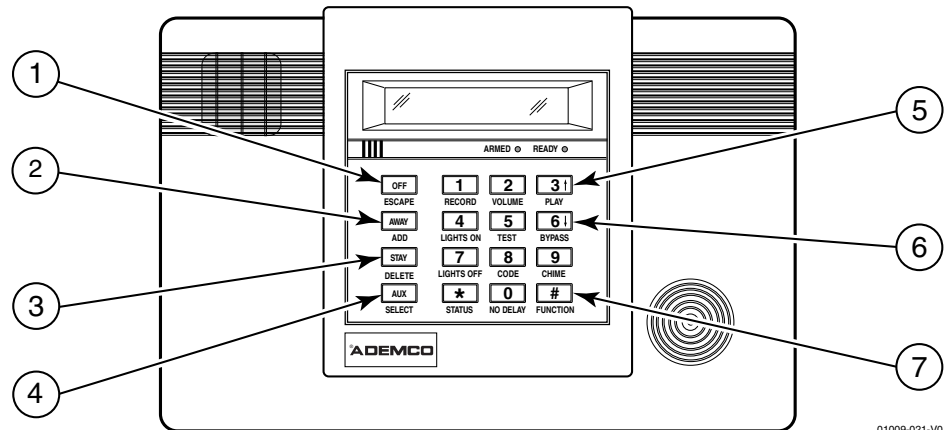

01009-021-V0

- Notes:**
- (1) Keying in any new command will terminate the active voice prompt.
  - (2) If an irrelevant command is entered LYNXR will generate a long rejection beep and repeat the previous voice prompt.
  - (3) Phone numbers and account numbers can be left blank by pressing the “ADD/”AWAY” key without entering any data.
  - (4) LYNXR automatically saves phone and account number data once all available digits are entered.

### ENTERING VOICE PROMPT PROGRAMMING

1. Power-up the control and enter the Installer Code (4 1 1 2) + 8 8 8.
2. Once you have entered into the Voice Prompt Programming Mode the system will announce, “Programming, use ARROWS to scroll choices, press SELECT to accept, press ESCAPE to quit.”
3. Press the 6 ↓ or 3 ↑ keys to scroll through the voice menu and follow the instructions provided.
4. The system will announce the following options:
  - “Add Sensors”
  - “Delete Sensors”
  - “First Central Station Phone Number”
  - “First Central Station Account Number”
  - “Second Central Station Phone Number”
  - “Second Central Station Account Number”
  - “Templates”
  - “Expert Programming Mode”

5. Follow the directions provided by each voice prompt to make your selections.



**The FUNCTION/**# **key can be used to repeat a voice prompt, as required.**

6. When you have completed each programming procedure the system will return to the Main Programming Menu.

### EXITING VOICE PROMPT PROGRAMMING

1. Once you have returned to the Main Programming Menu, the system will announce, “Programming use ARROWS to scroll choices, press SELECT to accept, press ESCAPE to quit”.
2. Press **ESCAPE/**OFF **to exit Voice Prompt programming mode once you have returned to the Main Programming Menu.**

# Voice Prompt Programming Procedure

Enter Voice Prompt Programming Mode: (Installer Code + 8 8 8). Follow the voice prompts to advance to the selected item in the Main Programming Menu.


## Main Programming Menu

Add Sensors First Central Station Phone Number Second Central Station Phone Number Templates	Delete Sensors First Central Station Account Number Second Central Station Account Number Expert Programming Mode
---	--

Program each option as shown below. Use the **6**↓ and **3**↑ keys to scroll through the voice menu and follow the voice prompts to program the LYNXR.

**!** The LYNXR will enroll a sensor once the transmitter has been activated twice. The system will confirm the enrollment following each subsequent activation of the same transmitter.


### To Add a Door Sensor

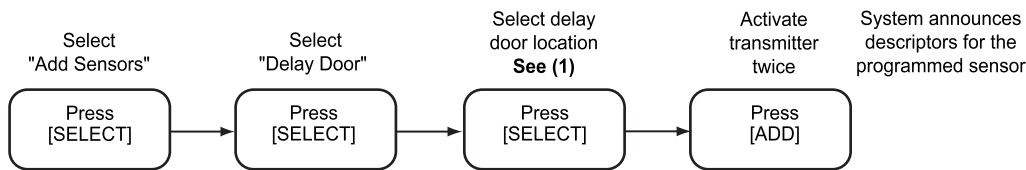

#### (1) Delay Door Location

- Front
- Back
- Side
- Garage
- Basement
- Sliding
- Hall
- Kitchen
- Patio

### To add a Window, Motion Detector, or Fire Detection Sensor

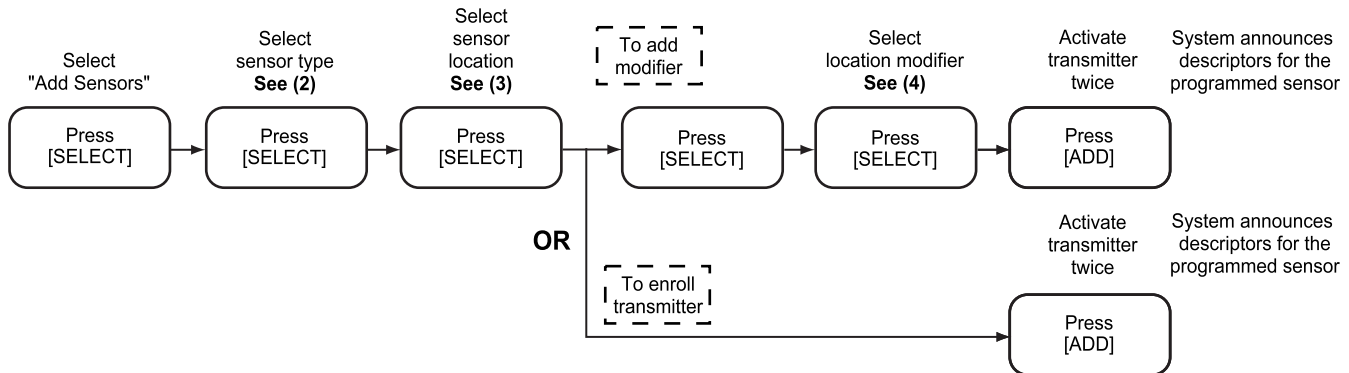

#### (2) Sensor Type

- Window
- Motion Detector
- Fire Detection

#### (3) Sensor Location

- Living room
- Dining room
- Bedroom
- Bathroom
- Nursery
- Kitchen
- Hall
- Basement
- Master Bedroom
- Den
- Family Room
- Guest Room
- Laundry Room
- Utility Room
- Garage
- Attic
- Office
- Upstairs


#### (4) Location Modifiers

- Upstairs
- Downstairs
- First
- Second
- Third
- Second Floor
- Front
- Rear
- Side


# Voice Prompt Programming Procedure

---

## To Delete Sensors

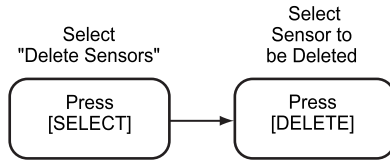

## To Add an Emergency Pendant

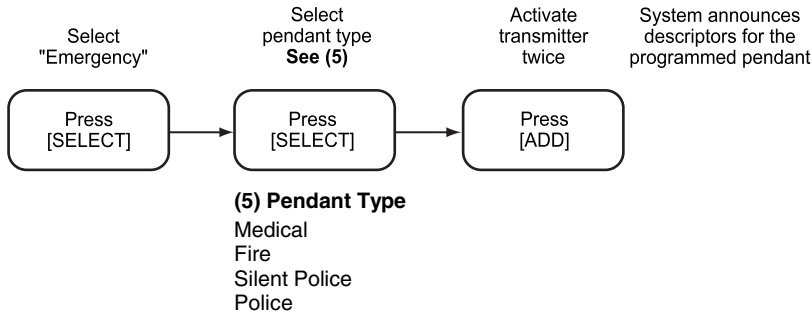


---

**!** When adding wireless keys, wait 5 seconds between transmissions.

---

## To Add a Wireless Key

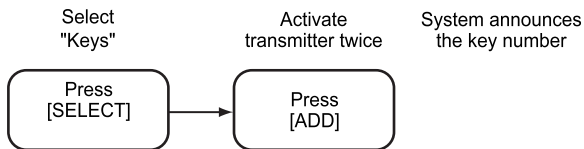


---

**LYNXR automatically saves phone and account number data once all available digits are entered.**

---

## To Add First Central Station Phone Number

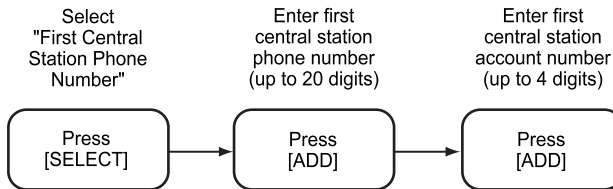


---

**!** All four digits of the Central Station Account number must be entered.

---


## To Add First Central Station Account Number

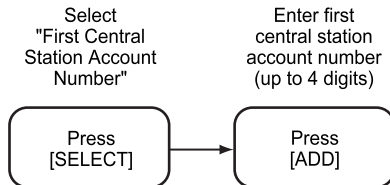

# Voice Prompt Programming Procedure

---


## To Add Second Central Station Phone Number

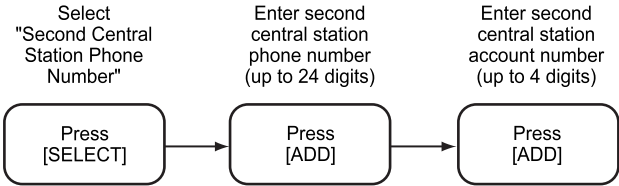


**!** All four digits of the Central Station Account number must be entered.

---


## To Add Second Central Station Account Number

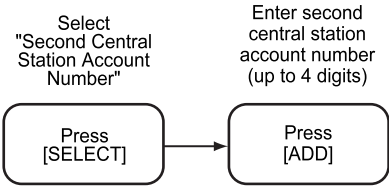

 Refer to the LYNXR Series Installation and Setup Guide to view the complete set of Template (default table) selections.

---


## To Program a Template (Default Table)

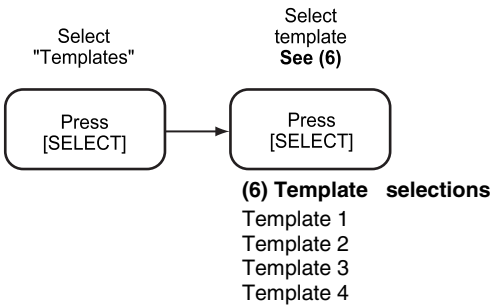

## To Enter Expert Programming Mode

**!** Once you have entered the Expert Programming Mode, the [ESCAPE] key can be used to return to the Voice Prompt Programming mode.

---

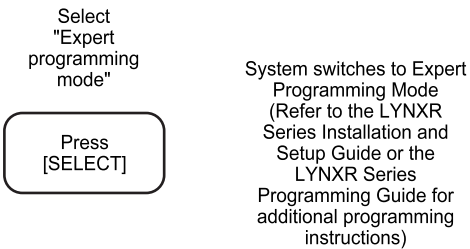

# Honeywell

165 Eileen Way, Syosset, New York 11791

Copyright © 2004 Honeywell International Inc.

[www.honeywell.com/security](http://www.honeywell.com/security)



K9288V1 4/04 Rev. A