


ADDENDUM TO: VISTA-100 INSTALLATION INSTRUCTIONS

USE WITH ISSUE: N6019-2

The 5881EH wireless receiver and 5808 smoke detector are now listed for use in commercial fire applications. These features are pending CSFM approval. The following provisions apply:

1. Program fields 1*30 and 1*31 currently state that the supervision period for the wireless receiver and transmitters must be no longer than 6 hours. This should be no longer than 4 hours (program entry of "2") for commercial fire applications.
2. On page 141 of the Vista-100 Installation Instructions, zones 989 and 991 are stated to be the supervisory zones for receivers 1 and 2. Actually, each receiver's supervisory zone is equal to 8 + the two-digit device address of the receiver. For example, if the receiver is set to device address 05, the receiver's supervisory zone would be 805. The supervisory zone must be programmed for 24-hour trouble (zone type 19).
3. Zones 990 and 988 are used to supervise the RF reception of receivers 1 and 2, respectively. These zones must be programmed for a response type of 24-hr. Trouble (zone type 19). A fault on either of these zones indicates that:
 - A. the receiver has detected a condition that may impede proper RF reception (i.e., jamming or other RF interference)
 - or
 - B. the receiver has not received any RF messages in the time period defined by program field 1*30. In this case, the fault would be accompanied by a supervision fault for one or more RF transmitters as well.
4. DIP Switch #5 on the 5881EH receiver must be set to "ON" for commercial fire applications (see figure below).
5. The 5881EH receiver must be mounted in a metal enclosure for commercial fire applications. When mounting in the enclosure, DO NOT use the antenna grounding lugs. Additionally, you must use an insulating washer (supplied) between the head of each screw and the PC board (see figure below).

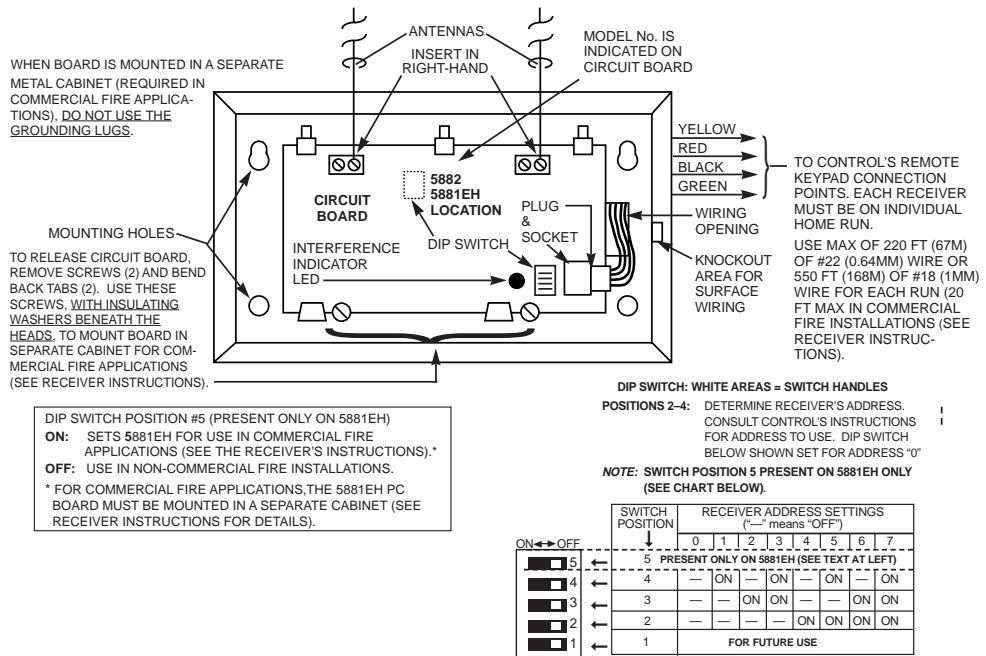

Important Note regarding Duress:

To enable the Duress feature, make sure you complete the following steps:

1. Enable Duress for each partition in program field *85.
2. Enter a report code for zone 992 (the feature will not work if a report code is not programmed).

The following is an updated alpha vocabulary for the Vista-100 control. Words announced by the 4285 VIP module are highlighted in bold text.

- 000 (Word Space)
- **001 AIR**
- **002 ALARM**
- 003 ALCOVE
- 004 ALLEY
- 005 AMBUSH
- 006 ANTENNA
- **007 AREA**
- **008 APARTMENT**
- 009 ART
- **010 ATTIC**
- 011 AUDIO
- 012 AUX
- 013 AUXILIARY
- **014 BABY**
- **015 BACK**
- **016 BAR**
- 017 BARN
- **018 BASEMENT**
- **019 BATHROOM**
- **020 BED**
- **021 BEDROOM**
- 022 BELL
- 023 BELL 1
- 024 BELL 2
- **025 BLOWER**
- **026 BOILER**
- 027 BOTTOM
- 028 BOX
- 029 BREAK
- **030 BUILDING**
- 031 BURNER
- 032 CABINET
- **033 CALL**
- 034 CAMERA
- 035 CAR
- 036 CASE
- 037 CASH
- 038 CCTV
- 039 CEILING
- 040 CELLAR
- **041 CENTRAL**
- 042 CIRCUIT
- 043 CLIP
- **044 CLOSED**
- 045 COIN
- 046 COLD
- 047 COATROOM
- 048 COLLECTION
- 049 COMBUSTION
- **050 COMPUTER**
- 051 CONTACT
- **052 DAUGHTERS**
- 053 DELAYED
- **054 DEN**
- 055 DESK
- **056 DETECTOR**
- **057 DIALER 1**
- **058 DIALER 2**
- **059 DINING**
- 060 DISCRIMINATOR
- 061 DISPLAY
- 062 DOCK
- **063 DOOR**
- 064 DORMER
- **065 DOWN**
- **066 DOWNSTAIRS**
- 067 DRAWER
- **068 DRIVEWAY**
- 069 DRUG
- **070 DUCT**
- **071 EARTH**
- **072 EAST**
- 073 ELECTRIC
- 074 EMERGENCY
- 075 ENTRY
- **076 EQUIPMENT**
- 077 EXECUTIVE
- **078 EXIT**
- 079 EXTERIOR
- **080 FACTORY**
- 081 FAILURE
- 082 FAMILY
- **083 FATHERS**
- **084 FENCE**
- 085 FILE
- **086 FIRE**
- **087 FLOOR**
- 088 FLOW
- 089 FOIL
- **090 FOYER**
- 091 FREEZER
- **092 FRONT**
- 093 FUR
- 094 FURNACE
- 095 GALLERY
- **096 GARAGE**
- **097 GAS**
- 098 GATE
- **099 GLASS**
- **100 GROUND**
- 101 GUEST
- 102 GUN
- **103 HALL**
- **104 HEAT**
- 105 HIGH
- 106 HOLDUP
- 107 HOUSE
- 108 INFRARED
- **109 INSIDE**
- 110 INTERIOR
- 111 INTRUSION
- 112 JEWELRY
- **113 KITCHEN**
- **114 LAUNDRY**
- **115 LEFT**
- 116 LEVEL
- **117 LIBRARY**
- **118 LIGHT**
- 119 LINE
- 120 LIQUOR
- **121 LIVING**
- **122 LOADING**
- 123 LOCK
- 124 LOOP
- 125 LORRA
- 126 LOW
- **127 LOWER**
- **128 MACHINE**
- 129 MAGNETIC
- 130 MAIDS
- 131 MAIN
- **132 MASTER**
- 133 MAT
- **134 MEDICAL**
- 135 MEDICINE
- 136 MICROWAVE
- 137 MONEY
- 138 MONITOR
- **139 MOTHERS**
- **140 MOTION**
- 141 MOTOR
- 142 MUD
- **143 NORTH**
- 144 NURSERY
- **145 OFFICE**
- 146 OIL
- **147 OPEN**
- 148 OPENING
- **149 OUTSIDE**
- 150 OVERFLOW
- 151 OVERHEAD
- 152 PAINTING
- **153 PANIC**
- 154 PASSIVE
- **155 PATIO**
- 156 PERIMETER
- **157 PHONE**
- 158 PHOTO
- 159 POINT
- 160 POLICE
- 161 POOL
- **162 POWER**
- 163 QUAD
- 164 RADIO
- **165 REAR**
- 166 RECREATION
- 167 REFRIG
- 168 REFRIGERATION
- 169 RELAY 1
- 170 RF
- **171 RIGHT**
- **172 ROOM**
- 173 ROOF
- 174 SAFE
- 175 SCREEN
- 176 SENSOR
- **177 SERVICE**
- **178 SHED**
- 179 SHOCK
- **180 SHOP**
- 181 SHORT
- 182 SHOW
- **183 SIDE**
- 184 SKYLIGHT
- 185 SLIDING
- **186 SMOKE**
- 187 SONIC
- **188 SONS**
- **189 SOUTH**
- 190 SPRINKLER
- 191 STAMP
- **192 STATION**
- 193 STEREO
- 194 STORE
- **195 STORAGE**
- 196 STORY
- 197 STRESS
- 198 STRIKE
- 199 SUMP
- 200 SUPERVISED
- 201 SUPERVISION
- 202 SWIMMING
- 203 SWITCH
- 204 TAMPER
- 205 TAPE
- 206 TELCO
- 207 TELEPHONE
- 208 TELLER
- **209 TEMPERATURE**
- 210 THERMOSTAT
- **211 TOOL**
- 212 TRANSMITTER
- 213 TRAP
- 214 TRIGGERS
- 215 ULTRA
- **216 UP**
- **217 UPPER**
- **218 UPSTAIRS**
- **219 UTILITY**
- 220 VALVE
- 221 VAULT
- 222 VIBRATION
- 223 VOLTAGE
- 224 WALL
- 225 WAREHOUSE
- 226 WASH
- **227 WEST**
- **228 WINDOW**
- 229 WINE
- **230 WING**
- 231 WORK
- 232 XMITTER
- 233 YARD
- 234 ZN-1
- **235 ZONE**
- 236 0
- 237 1
- 238 1ST
- 239 2
- 240 2ND
- 241 3
- 242 3RD
- 243 4
- 244 4TH
- 245 5
- 246 5TH
- 247 6
- 248 6TH
- 249 7
- 250 7TH
- 251 8
- 252 8TH
- 253 9
- 254 9TH
- 255 Custom Word 1 to
- 274 Custom Word 20

CHARACTER (ASCII) CHART
(For Adding Custom Words)

| | | | | | |
|------------|------|------|------|------|------|
| 32 (space) | 42 * | 52 4 | 62 > | 72 H | 82 R |
| 33 ! | 43 + | 53 5 | 63 ? | 73 I | 83 S |
| 34 " | 44 , | 54 6 | 64 @ | 74 J | 84 T |
| 35 # | 45 - | 55 7 | 65 A | 75 K | 85 U |
| 36 \$ | 46 . | 56 8 | 66 B | 76 L | 86 V |
| 37 % | 47 / | 57 9 | 67 C | 77 M | 87 W |
| 38 & | 48 0 | 58 : | 68 D | 78 N | 88 X |
| 39 ' & | 49 1 | 59 ; | 69 E | 79 O | 89 Y |
| 40 (| 50 2 | 60 < | 70 F | 80 P | 90 Z |
| 41) | 51 3 | 61 = | 71 G | | |



ALARM DEVICE MANUFACTURING CO.
A DIVISION OF PITTSWAY CORPORATION
165 Eileen Way, Syosset, New York 11791
Copyright © 1996