



Quick Reference Card for common area keypads in partitioned systems

For assistance with your system, call your C&K Dealer
at this number:

(fold here)

To Bypass a Zone:

1. Press the key.
2. Enter the two-digit zone number.
3. Enter your user code. (If you have Quick Bypassing, no user code is needed.)

**Remember: bypassed zones
are not protected.**

(fold here)

To Disarm:

1. Enter your user code.
2. Press the number of the area to be disarmed. Or, to disarm all of your areas at once, press the key.

To Cancel an Alarm:

1. Press the key.
2. Enter your user code.

To Full Arm:

Full arming arms both the interior and perimeter zones.

You cannot be inside the building while it is armed.

1. Enter your user code.
2. Press the number of the area to be armed. Or, to arm all of your areas at once, press the key.

(fold here)

To Home Arm:

Home arming arms only the perimeter zones.

You can remain inside the building while it is armed.

1. Enter your user code.
2. Press the key.
3. Press the number of the area to be armed. Or, to arm all of your areas at once, press the key.

(fold here)

To Instant Home-Arm:

The instant a door or window opens, an alarm sounds.

1. Enter your user code.
2. Press and hold the key for 2 seconds.
3. Press the number of the area to be armed. Or, to arm all of your areas at once, press the key.