

DMP- EXECUTIVE SERIES FOR 1912XR

What Does Keypad Show? – This series of panels has a digital readout and will let you know what type of trouble you have. Also there is a power/ac light to let you know you have power. There are four select keys to let you select different options, which show up in the display screen.

Arming and Disarming the Alarm – Press the COMMAND key. Arm/Disarm will display. Select ARM, then enter your user code. The display will read ALL? Select YES to arm. System will then be armed. This system can also be set up for partition arming. If so, the keypad will prompt you on what areas your code can arm. Also which ones you cannot. DISARMING is done by entering your user code. The system will then display ALL SYSTEM OFF.

System Alarm Silence? – User code level three and above can silence any alarm siren. Access the user menu, by pressing select key on keypad. The keypad will display ALARM SILENCE. Press the SELECT key and the system will silence.

Resetting Fire Alarm and System - Access the user menu. Press the COMMAND key until SENSOR RESET? Is displayed. Press any SELECT key. The keypad displays SENSORS OFF for five seconds followed by SENSORS ON.

Bypassing Zones? – With this panel it is also known as loop bypassing. Access the User Menu. Press the COMMAND key until BYPASS LOOPS? Displays. Press any SELECT keys. The keypad displays LOOP RST BYPS. To reset, enter loop number you want to reset and select RST. To Bypass, enter the loop you want to bypass select BYPS. The loop number automatically disappears and a new loop number can be entered. Then arm system as usual.

Chime Mode? – Also known with this panel as the loop monitor mode. Access the User Menu. Press the COMMAND key until LOOP MONITOR? Displays. Press any one of the SELECT keys. The keypad will display ALL NBR for an area system and PERIM ALL NBR for an all/perimeter or home/system. Select perimeter to place all perimeter loops in monitor mode. If NBR selected, the keypad displays LOOP: - ADD RMV. Then add or remove perimeter chime.

User Codes? – Access the User Menu, by pressing the COMMAND key until USER CODES? Displays. Press any one of the SELECT keys. The keypad displays ADD DEL CHG. Press The select key under ADD to add a user number. You must have a user code level of 9 or have a custom user code with authority to be able to add a user code. At the USER NUMBER: - prompt, enter a user number of the user and press COMMAND. The user number is a two digit number (01-25). The display changes to CODE NO: Enter a user code number of 1 to 5 digits and press COMMAND. Each code will then need a AUTHORITY LEVEL. To give a AUTHORITY LEVEL, enter into the LEVEL CUSTOM area and assign a code of (1-9). A level 9 can do everything. A level 6 is what a customer will want for the rest of the user codes. This is the number they will use each time they arm, disarm, or make changes to the system. At the AREAS display, enter the area numbers where this user will have access. For example, press the 1 key for area 1. Then at the LEVEL: display, enter an authority level from 1 to 9. Press COMMAND. The displays shows USER # ADDED. Select CUSTOM to customize the functions you want the user to access. This allows users to have certain capabilities outside of a standard authority level. Then you can select if this will be a temporary user code or permanent. Press the ARROW key once to add another user or twice to exit from the User Menu.

Deleting User Codes? – Access the User Menu. Press the COMMAND key until USER CODES? Displays. Press any one of the select keys. The keypad displays ADD DEL CHG. Press the Select key under DEL to delete a user code from the system. You must have a user code of 9 or have a custom user code to be able to add or delete users. Be careful not to delete all level 9 users from the system. At the USER NUMBER prompt, enter the user number you want to delete and press COMMAND. The display changes to USER#DELETED. Press the arrow key twice to exit the user menu.

Changing the Date and Time? – Access the User Menu. Press the COMMAND key until TIME? Displays. Press any select key. The keypad displays the current day and time. Press the COMMAND key. The keypad displays the current date. Press the COMMAND key to make any changes. The keypad displays TIME DAY DATE. Press the select key under TIME to change the time. Then select AM or PM. Press the select key under DAY to select the day. The keypad will display the days of the week. If the day you want is not on the display press the COMMAND key to display more days. Press the select key under the proper day. Press the select key under the date to change the date. Enter one or two digits for the month and the day and the year Press the COMMAND key after every selection. Press the arrow key to return back to the status menu.

Fire reset? --- To silence the fire alarm, put in valid user code. Then to reset smoke detector power, press in the same valid user number. Alarm memory will be cleared from the keypad also.

Phone problem? --- If system has seized the customers phone line in a runaway situation or lockup. Have customer go to control panel and disconnect the RJ cord. If phones are back to normal, customer will need service call. If phone lines are still down, There is a problem with the phone lines themselves.

Rev. 1 2/23/98