
MODEL XR6 WIRING DIAGRAM

Refer to the XR6 Installation Guide (LT-0229) for a complete description of wiring connections. Refer to the XR6 Programming Guide (LT-0230) for complete programming instructions.

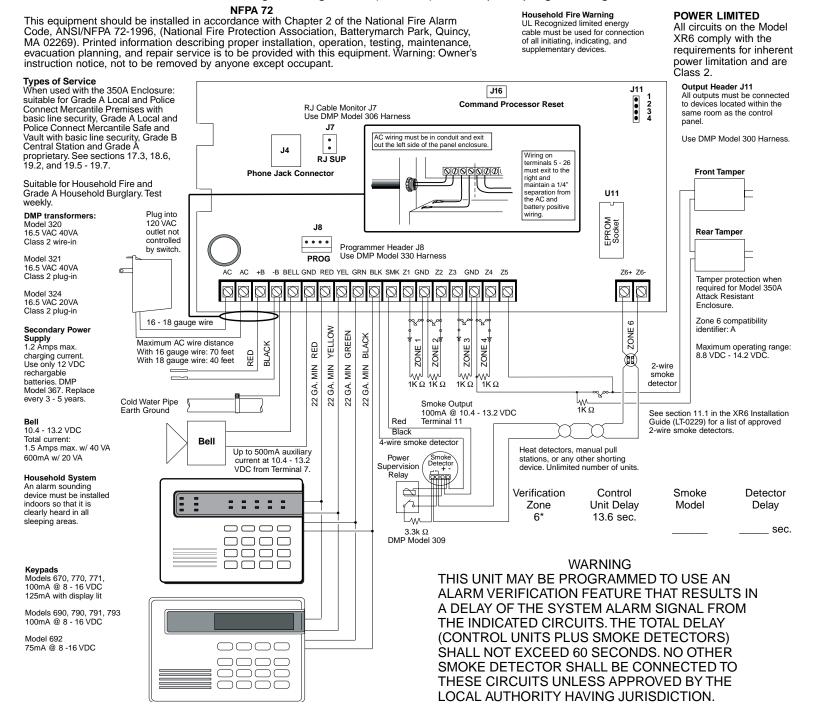

LT-0445 (9/99)