

SKYROUTE - INSTALL FLOW CHART

You must be enrolled with Connect24 before you begin!

Before Going to Site

Obtain/Confirm Information:
-Account No.
-Dealer No.
-Installer ID
-Installer PIN

Spare Skyroute ??
Antenna Extension ??
Remote housing ??

At Site

Confirm Signal Strength at panel location Using Skyroute module. This will determine control panel and Skyroute location

Install Panel - Program & Test

Problems ? Sur-Gard Tech Support
1-888-623-7873

Proceed ?

Install Skyroute in Panel or at remote location

Reverify Signal Strength

Problems ? Use Antenna Kit or remote mount Skyroute module

Proceed ?

Default Skyroute Module (Section 803, "99"
Choose "00", "11", "22")

Enroll Skyroute with Connect 24
1-877-759-7688

Problems ? Sur-Gard Tech Support
1-888-623-7873

Proceed ?

Program Skyroute Module (Section 803)

Test Skyroute Signals

GENERIC 22

Simple Generic zone alarm information (Burglary, Fire, Supervisory or Panic) Eliminates multiple same type signals and delays between signals to the Central Station with the unique timer feature. Central Stations can receive Cancellation Fire, Panic signals without a delay from Burglary signals eliminates low-priority supervisory information being sent to the Central Station (can be reactivated if necessary).

FULL/GENERIC 11

Full/Generic reporting with fall back to full reporting if TLM or FTC trouble occurs.

FULL REPORTING 00

Full Reporting sends all zone information (same information as the control panel will send) to the Central Station via the telephone network.
NOTE: There will be transmission delays due to multiple same type signals.

NOTE: Contact your Central Station. Full Reporting 00 may result in delays in signal transmission to your Central Station.

see reverse for Enrollment steps

