

Programming the TL-250 for Email only

Sections that are important

- 001** - IP address you are going to assign to the tl-250 or 000.000.000.000 for DHCP
- 002** - Subnet mask of your network. Not necessary if using DHCP.
- 007** - Program 127.0.0.0
- 008** - Program the gateway IP of your network. Not necessary if using DHCP.
- 026/027** - Program the email address' of where you want the emails to be sent.
- 028** - Email address of the sender, this has to be in format [someone@somewhere.com](#).
- 029** - DNS IP address only has to be programmed if you do not know the SMTP IP address. If you programmed the SMTP name in section 030 then you need to enter this IP address.
- 030** - Needs to be either and SMTP IP address or a SMTP name.
- 031** - Email username for SMTP if needed
- 032** - Email password for SMTP if needed

Programming PowerSeries with TL-250 for Email only

Sections that are important

301/302 – One of these sections should be programmed as DCAA.

310 – This should be programmed with account number.

350 – This should be programmed as 04-04.

351 to 376 – Depending on what you want to be emailed, you should have 1 on if you used 301 as DCAA or 2 on if you used 302 as DCAA.

380 – Option 1 should be enabled.

381 – Option 3 should be off.

382 – Option 5 should be on.

Programming the Maxsys with TL-250 for Email only

Section that are important

000401 – Communications must be yes; also if you scroll to the right twice T-link enabled must be yes.

000400000 or **0004000100** – Program one of these sections as CAAA.

0004000001 or **0004000101** – One of these sections depending on if you used phone number 1 or 2 must be programmed as SIA FSK.

0004000002 or **0004000102** – One of these sections depending on if you used phone number 1 or 2 must have the type of signals you want to be sent through email set to yes.

00040003 – This should be programmed with an account number.