

Zone light(s) when ON in the disarmed mode, indicate an open zone. e.g. open door, window, etc. Refer to zone chart on the keypad door for zone information.

Press **[#]**.....

When an error is made in entering code, then enter code again.


To return to ready state after using **[*]** commands.

Press **[F]** for 2 seconds to activate FIRE transmission.

Press **[A]** for 2 seconds to activate an AUXILIARY transmission.

Press **[P]** for 2 seconds to activate PANIC transmission.

THESE BUTTONS WILL NOT FUNCTION UNLESS PROGRAMMED BY YOUR INSTALLER.

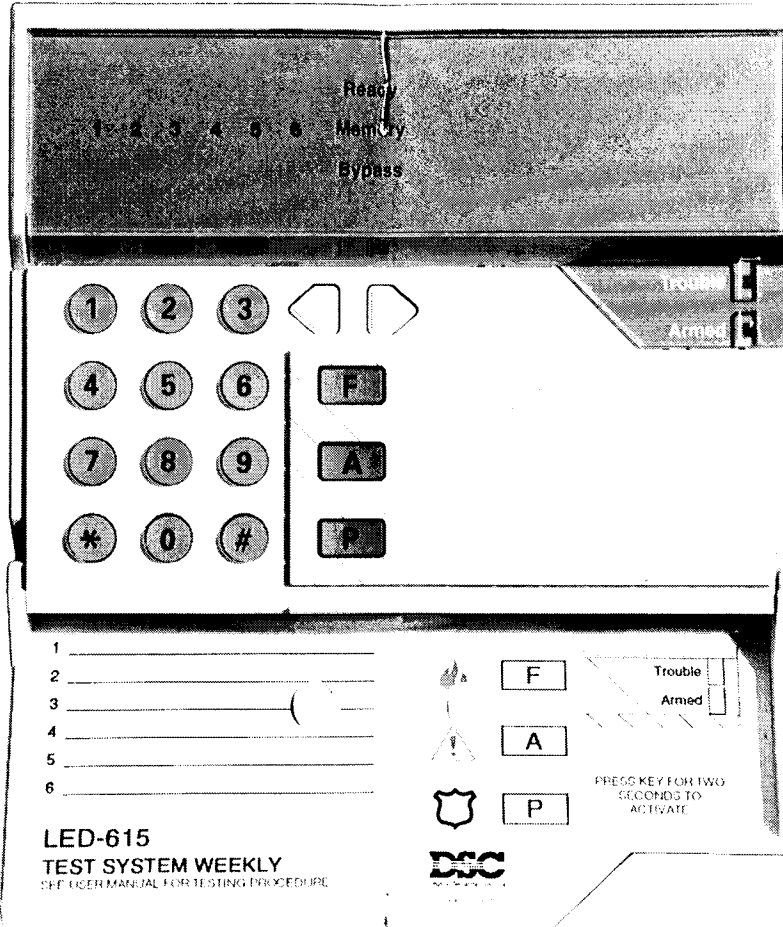

Ready light ON - System is ready for arming.
Ready light OFF - System has an open zone which must be closed or bypassed before arming.

Memory light ON means an alarm has occurred. Press **[*]** then **[3]**. Zone light will come ON to indicate which zone caused the alarm.

Bypass light comes ON when you bypass a zone. To bypass a zone, press **[*][1]** and then the zone(s) you wish to bypass. Enter 1 for zone 1....6 for zone 6. Press **[#]** to return to Ready.

Trouble light is ON when there is a fault in the system. Press any key to silence the keypad beeping. Press **[*]** then **[2]** to display the trouble type .

Zone Light	Trouble Type
1	Low battery.
2	AC fail (buzzer does not sound).
3	Fuse open (BELL or AUX fuse).
4	Failure to communicate.
5	Fire loop(s) trouble.
6	Clock needs resetting.

Armed light will come ON indicating the system is armed. To arm, ensure "Ready" light is ON; enter 4 digit code.