

PC1555 Keypad Command Changes

The following is a summary of the changes in keypad commands on the PC1555, as compared to the keypad commands for the PC1550. For more details, please refer to the Installation Manual, Section 3: Keypad Commands.

NOTE: System Light

When using the PC1555RKZ keypad, the panel will use the 'System' light to indicate Bypass, Trouble, Memory and Programming.

[*][2] View Trouble

To view the type of trouble condition, press [*][2]. One or more zone lights will turn ON, indicating the various trouble conditions:

ZONE LIGHT TYPE OF TROUBLE

- | | |
|---|---|
| 1 | Service required. Press [1] for more details:
Light 1 = Main Panel Low Battery Light 4 = Module Tamper
Light 2 = Bell Circuit Trouble Light 5 = Module Supervisory Trouble
Light 3 = Printer Trouble |
| 2 | AC Trouble |
| 3 | TLM Trouble |
| 4 | FTC Trouble |
| 5 | Zone fault. Press [5] and the zone light(s) corresponding to the faulted zones will turn ON. |
| 6 | Zone tamper. Press [6] and the zone light(s) corresponding to the tampered zones will turn ON. |
| 7 | WLS Low Battery. Press [7] one, two, or three times to view which devices are experiencing battery failure. The following will occur: |

Keypad beeps:

Keypad displays:

- | | | |
|-----------------|---|--|
| Press [7] | 1 | Zones with low batteries |
| Press [7] again | 2 | Handheld keypads with low batteries |
| Press [7] again | 3 | Wireless keys with low batteries (LED keypad - zone lights 1 to 8). <i>To view the battery conditions of wireless keys 9 through 16, you must be at an LCD keypad.</i> |

- | | |
|---|----------------|
| 8 | Loss of clock. |
|---|----------------|

[*][4] Door Chime Enable/Disable

Press [*][4] to enable/disable door chime.

[*][5] Programming User Codes

- | | | |
|--------------------|---|-------------------------|
| General User Codes | - | User Code [01] to [32] |
| Duress Codes | - | User Code [33] and [34] |
| System Master Code | - | User Code [40] |
| Supervisor Codes | - | User Code [41] and [42] |

To erase a code, enter the 2 digit number for the code to be deleted, then press [*] once.

[*][6] User Functions

- | | | |
|--------------------------|---|--|
| [*][6] [Master Code] [1] | - | Program Time and Date (HH:MM MM/DD/YY) - 10 digits |
| [*][6] [Master Code] [2] | - | Auto Arm Enable/Disable |
| [*][6] [Master Code] [3] | - | Auto Arm Time |
| [*][6] [Master Code] [4] | - | System Test |
| [*][6] [Master Code] [5] | - | Enable Downloading |
| [*][6] [Master Code] [6] | - | User Initiated Downloading |

[*][7] Utility Output

- | | | | | | |
|------------|---|----------------|------------|---|----------------------|
| [*][7] [1] | - | Utility Output | [*][7] [2] | - | Smoke Detector Reset |
|------------|---|----------------|------------|---|----------------------|



© 1997 Digital Security Controls Ltd.

1645 Flint Road, Downsview, Ontario, Canada M3J 2J6

Tel. (416) 665-8460 • Fax (416) 665-7498 • Tech. Line 1-800-387-3630

Printed in Canada

29002781 R0