

Application Notes



1.8 Default – Reset Panel to Factory Default (PC1616/1832/1864 V4.2)

Panels:

POWER SERIES (PC1616/1832/1864 V4.2)

Overview:

Any PowerSeries panel can be defaulted, provided installer's lockout is not enabled. There are two ways to default the panel: a software default and a hardware default.

Factory Default Main Panel (via *Hardwire if the Installer Code IS NOT known*)

To factory default the main control panel, perform the following:

- Step 1 – Remove AC and battery from the panel
- Step 2 – Remove all wires from the Zone 1 and PGM1 terminals
- Step 3 – With a piece of wire short the Zone 1 terminal to the PGM1 terminal
- Step 4 – Apply AC power to the main panel
- Step 5 – Zone light 1 will turn ON when the default is complete (approx. 30 seconds)
- Step 6 – Remove AC power from the panel
- Step 7 – Reconnect all original wiring and power up the control panel normally

Note: Only the main panel will default. All modules will not be affected.

Factory Default Main Panel (via *Software if the Installer Code IS known*)

To factory default the main control panel, perform the following:

- Enter [*] [8] [Installer's Code] Enter Installer's Programming
- Enter [999] Default Section
- Enter [Installer's Code]
- Enter [999] again Perform Factory Default

The panel will take a few seconds to perform the default. When the keypad is again operational the default is complete.

Note: Only the main panel will default. All modules will not be affected.