

**READY** light ON: system is ready to be armed.

**READY** light OFF: open zone. Zone must be closed or bypassed before arming.

**READY** light flashing with "Armed" light ON indicates access code 9-16 programming.

**BYPASS** light comes ON when you bypass a zone. To bypass a zone, press [\*], [1], [Master Code] and then the zone(s) you wish to Bypass. Enter 01 for zone 1; 08 for zone 8; 16 for zone 16. Press [#] to return to ready.


**TROUBLE** light ON means there is a fault on the system. Press any key to silence keypad beeping. Press [\*] then [2] to display trouble type; one or more zone lights will come ON to indicate the type of trouble.

- |   |                        |
|---|------------------------|
| 1 | Battery                |
| 2 | A.C. Power             |
| 3 | Day loop               |
| 4 | Telephone line         |
| 5 | Communicator           |
| 6 | Bell circuit           |
| 7 | Smoke detector circuit |
| 8 | Clock needs resetting  |

**PRESS [#].....**

...when an error is made in entering code, then enter code again.

...to return to ready state after using [\*] commands.

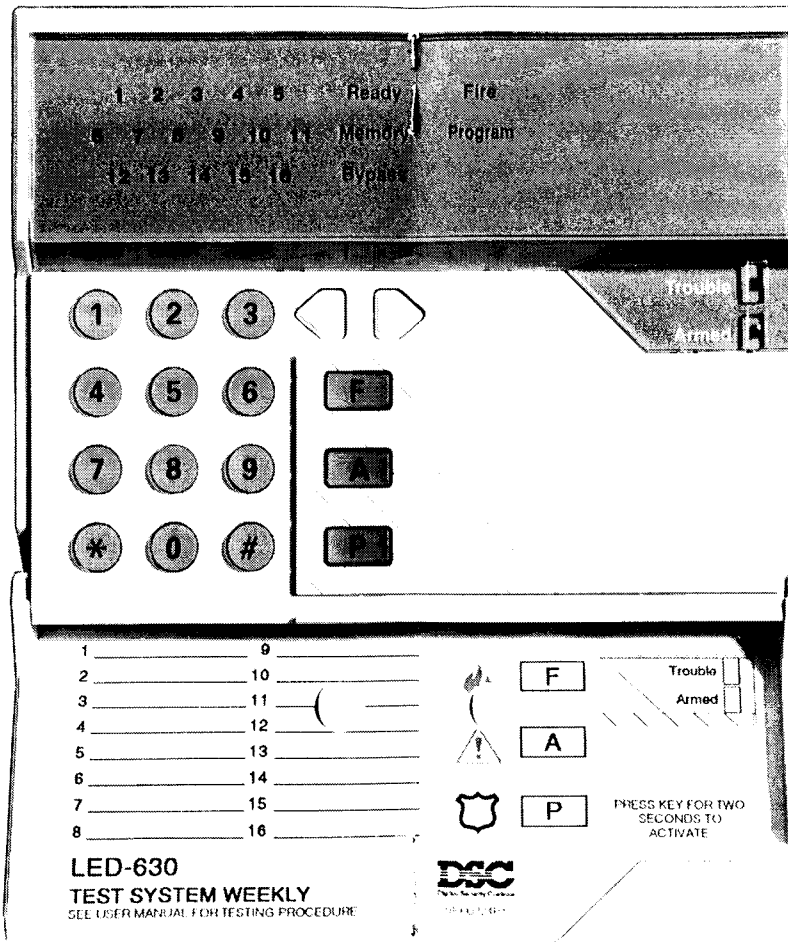

**ZONE** light(s) when ON in the normal operating mode indicates an open zone. eg. open door, window, etc. Refer to zone chart on keypad door for zone information.

**ARMED** light will come ON indicating system is armed. Ensure "Ready" light is ON, enter [4 digit] access code.

**ARMED** light flashing with "Ready" light indicates access code 9-16 programming.

**MEMORY** light ON means an alarm has occurred. To display zone that caused alarm, press [\*] then [3]. Zone light will come on indicating which zone caused the alarm.

**FIRE** light is ON when a detector on the fire loop is in alarm. Press any key within 30 seconds of first alarm to get 2 minutes to reset smoke detectors.

PRESS **[F]** for 2 seconds to activate FIRE transmission.

PRESS **[A]** for 2 seconds to activate an AUXILIARY transmission.

PRESS **[P]** for 2 seconds to activate PANIC transmission.

**THESE BUTTONS WILL NOT FUNCTION UNLESS PROGRAMMED BY INSTALLER.**

**COLORED LABELS ON KEYPAD DOOR INDICATE WHICH KEYS ARE ACTIVE.**