

PC5020 Module Compatibility

Module	Compatible?	Comments
Classic Escort (VPM-1)	No	
Escort5580	Yes	Users will not be able to access partitions 3 to 8, and zones 33 to 64 through Escort5580 versions 2.x and lower. Only partitions 1 and 2, and zones 1 to 32 are supported on these versions.
PC-16 Out	No	
PC5100	Yes	Can only add addressable devices to the first 32 zones.
PC5108 v1.x	Yes	Can only support the first 32 zones. Enrolls as two expander modules - each module will use up two supervisory slots.
PC5108 v2.x	Yes	
PC5108L	Yes	Can only be assigned zones from 1 to 32. Will not support zones 33 to 64. Camera scripts can only be run for zones 1 to 32. Enrolls as two expander modules - each module will use up two supervisory slots.
PC5132 v1.X	Yes	No support for Wireless Keys, Pendants or Handheld Keypads. Only the first 32 zones can be used as wireless zones.
PC5132 v2.X	Yes	No identified Wireless Keys support. Only the first 32 zones can be used as wireless zones.
PC5132 v3.X	Yes	Only the first 32 zones can be used as wireless zones.
PC5204	Yes	
PC5208	Yes	
PC5506	No	
PC55XX	Yes	No Keypad zone support. Can only be used on Partition 1 and Partition 2, and the first 8, 16, or 32 zones.
PC55XXZ	Yes	Can only be used on Partition 1 and Partition 2, and the first 8, 16, or 32 zones.
PC5509	No	
LCD5500 v1.X	Yes	No Keypad zone support. Some display messages not supported. Can only be used on Partition 1 and Partition 2, and the first 32 zones.
LCD5500Z v2.X	Yes	Can only be used on Partition 1 and Partition 2, and the first 32 zones.
LCD5500Z v3.X	Yes	
LCD5501Z v1.x	Yes	Can only be used on Partition 1 and Partition 2, and the first 32 zones.
LCD5501Z v2.x	Yes	
LCD600	No	
LED615	No	
SL-XX	No	
PC5400 Printer/ DVACS Module v1.X to v2.1	Yes	Some printing messages not supported. Some events not supported.
PC5400 Printer/ DVACS Module v2.2	Yes	Some events not supported.
PC5700	Yes	Enrolls as two expander modules - each module will use up two supervisory slots.
PC5720	Yes	Enrolls as two expander modules - each module will use up two supervisory slots.
PC5908	Yes	Only Partition 1 and Partition 2, and the first 32 zones are supported.
PC5928	Yes	Only Partition 1 and Partition 2, and the first 32 zones are supported.
Links1000	Yes	
Links2150	Yes	Some events not supported.
Links2450	Yes	Some events not supported.
Skyroute	Yes	Some events not supported.
DLM-1	No	
DLM-4 v1.x	No	
DLM-4 v1.0L	Yes	
DLM-7	No	