



2-way Wireless Security Suite Technical Training Guide

NA Version

Table of Contents

Section 1 – Training Guide Summary

Section 2 – Wireless Information

- Serial Number
- Supervision

Section 3 – Key Features

Section 4 – Specifications

Section 5 – Compatible Wireless Offerings

Section 6 – PC9155 Suite Overview

- Compatible Device/Detector List
- PC9155 Enclosure Details
- PC9155 Circuit Board – Overview
- PC9155 Circuit Board – Terminals
- WT5500 Overview
- WT4901 Overview
- WT4911 Overview
- WT4989 Overview
- WS4913 Overview
- WS4985 Overview
- GS2065 Overview
- TL265GS Overview

Section 7 – Programming Navigation

- General Navigation
- Quick Enroll
- Template

Section 8 – System Installation

Section 9 – Additional Wireless Programming

Section 10 – I/O Terminal Information

Section 11 – Star Commands

Section 12 – Arming and Disarming

Training Guide Summary

Welcome to the 2-way wireless security suite training guide. This guide is designed to provide technical information about the 2-way wireless security suite in preparation for the upcoming technical presentation (in-class or video conference).

Most of the information outlined in this guide will also be covered during the in-class/video session. The in-class/video session will however primarily focus on key features, installation, product overview etc. It is important to ensure that all of the material in this guide be thoroughly reviewed.

A technical test will be issued at the end of the training session.



General Wireless Information

Serial Numbers:

PC9155:

The PC9155 requires that all device/detector are programmed with an 8-digit serial number.

Wireless Devices:

1 – Way Devices: the serial number for these devices are 6-digits in length. Since the PC9155 requires that serial number are programmed with 8-digits, enter '00' prior to entering the 6-digit number.

2 – Way Devices: these devices are 8-digits

Wireless Supervision

Supervisory Signal:

Each wireless device automatically transmits a supervisory signal every 64 minutes. This signal is automatic and contains the following information:

- Contact State
- Tamper State
- Battery Voltage

Supervisory Window:

This is a programmable window in the PC9155 control panel (default = 24 hours). It is required that at least one supervisory signal be received by the PC9155 from each device/detector before the end of each supervisory window. If a signal is not received, a Zone Fault trouble condition is generated for the failed device/detector

Wireless Detector Compatibility

1 – Way Detectors:

1-way 433MHz detectors are compatible with the PC9155

2 – Way Detectors:

2-way 433MHz detectors (contain a prefix 'WT') are only compatible with the PC9155 and are NOT compatible with 1-way receivers

List of 1-way receivers:

- PC5132-433
- RF5132-433
- RF5108-433
- SCW9045/47
- RFK55XX-433

Key Features

- 1-way, 2-way wireless detector support
- 2-way wireless keypad support (WT5500)
- Wireless Quick Enroll
- Template programming
- Account Code Error Checking
- Alternate communications via GSM/GPRS and IP
- Local and remote downloading
- 4 communication phone numbers
- 2 Input/Output terminals
- Front and back tamper
- Onboard Siren at 85dB
- False alarm reduction features

Specifications

Specifications:

Number of Zones Supported

- 34 zones (32 wireless, 2 hardwired)

Number of Key FOBs Supported

- 16

Number of Proximity Tags Supported

- 17

Number of PGMs Supported

- 2

Access Codes

- 17 (16 user codes, 1 system master)

Communication Format

- Automatic SIA, Automatic Contact ID, Pulse, Residential Dial

Number of Keypads

- 4 (WT5500)

Number of Sirens

- 4 (Combination of WT4901/WT4911)

AC Power Requirements

- 16.5VAC, 20VA

Battery Requirements

- 12vdc, 2.3 AH

AUX Current

- 12vdc, 200mA (Max.)

PGM Current

- 50mA (Max.)

Event Buffer

- 500 Events (Time, Date stamped)

Compatible Wireless Devices

- All DSC 433MHz devices (1-way and 2-way)

Compatible Alternate Communicator

- GS2065 – GSM/GPRS Wireless Alarm Communicator
- TL265GS – Internet and GSM/GPRS Dual-path Alarm Communicator

Compatible Wireless Offerings



Compatible Device/Detector List

List of devices in the 2-way wireless security suite:

- PC9155 control panel
- WT5500 2-way wireless keypad*
- WT5500P 2-way wireless keypad with prox tag (PT4) support*
- WT5500D 2-way wireless keypad (desk stand version)
- WT4901 2-way wireless indoor siren*
- WT4911 2-way wireless outdoor siren*

List of new 2-way wireless devices:

- WT4989 2-way wireless key FOB*

List of new 1-way wireless devices:

- WS4913 – 1-way wireless CO detector
- WS4985 – 1-way wireless flood sensor

New Alarm Communicators

- GS2065 – GSM/GPRS Wireless Alarm Communicator
- TL265GS – Internet and GSM/GPRS Dual-path Alarm Communicator



List of current 1-way wireless devices:

Motion Detectors:

All existing 433MHz wireless detectors are compatible

- WS4904P – wireless motion detector with pet-immunity (multiple pets)
- WLS914 – wireless motion detector with pet-immunity (single pet)

Glassbreak

- WLS912 – wireless glassbreak detector

Smoke Detectors:

- WS4916 – wireless smoke detector

Door/Window Contacts

- EV-DW4917 – wireless recessed door/window contact
- EV-DW4927 – wireless shock sensor
- WS4945 – wireless door/window contact
- EV-DW4955 – wireless door/window contact
- WS4965 – wireless tri-zone door/window contact
- EV-DW4975 – wireless door/window contact

Key FOBs

- WS4939 – wireless 4-button key FOB
- WS4949 – wireless 2-button key FOB (3 channel)
- WS4959 – wireless 4-button key FOB (12 channel)
- WS4969 – wireless 4-button key FOB (built-in LED flashlight)

Panic Button

- WS4938 – wireless single-button panic button

Additional Devices

- WS4979 – wireless arm/disarm plate

Note:

- only 2-way devices have a prefix of 'WT'

*** 2-way devices are NOT compatible with 1-way receivers**

PC9155 Enclosure - Front



= **'Ready'**. This indicator is active when all zones are secure



= **'Armed'**. This indicator is active when the system is armed



= **'Trouble'**. This indicator is active when a system trouble is present



= **'AC Status'**. This indicator is active when AC power is present



= **'Communicator Trouble'**. This indicator is active when a trouble is present on the GS/IP module



= **'Network'**. This indicator is active when the internet communicator is absent



= **'Signal Strength (Hi)'**. This indicator is active when the GS signal strength is good




= **'Signal Strength (Lo)'**. This indicator is active when the GS signal strength is poor




= **Siren Grill**



PC9155 Enclosure - Back

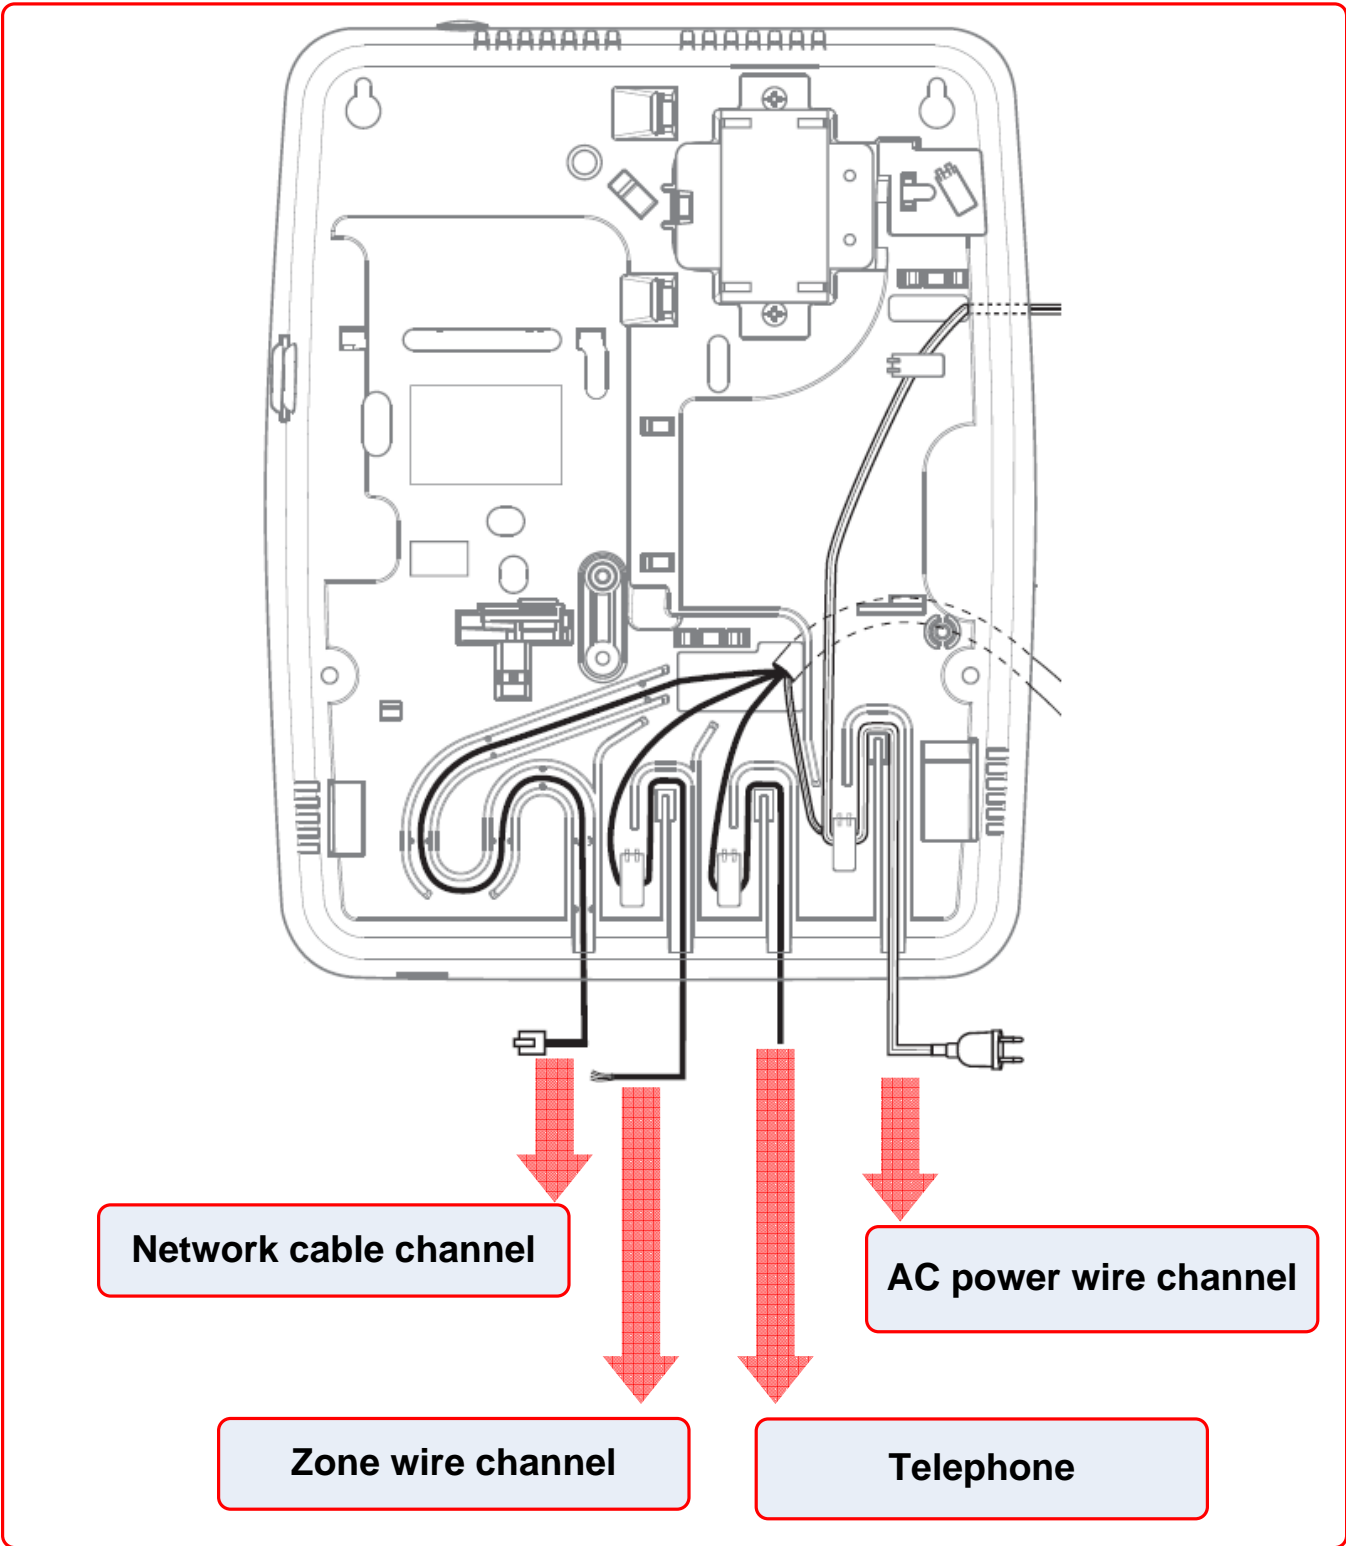

PC9155 Circuit Board Overview

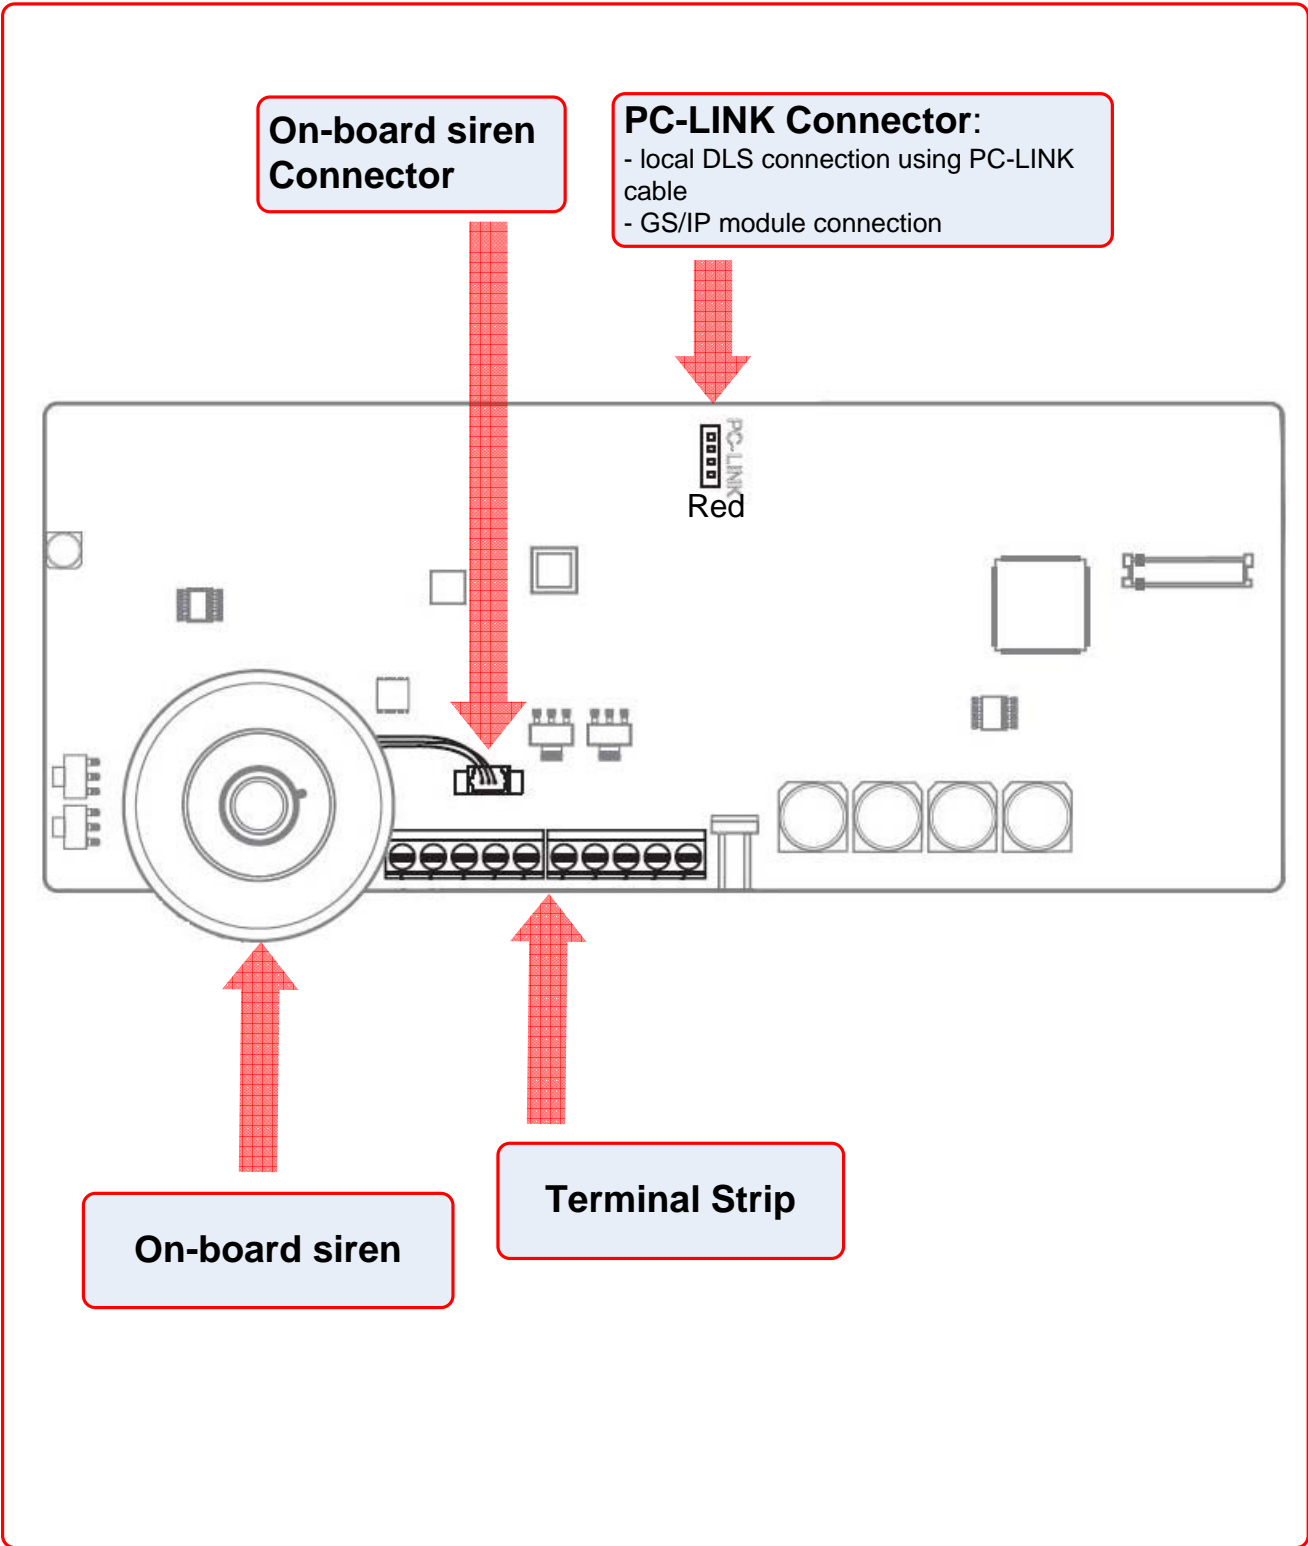

PC9155 Terminals

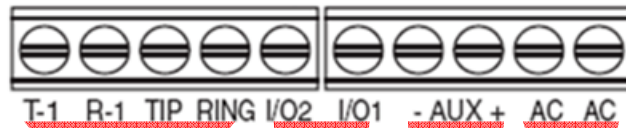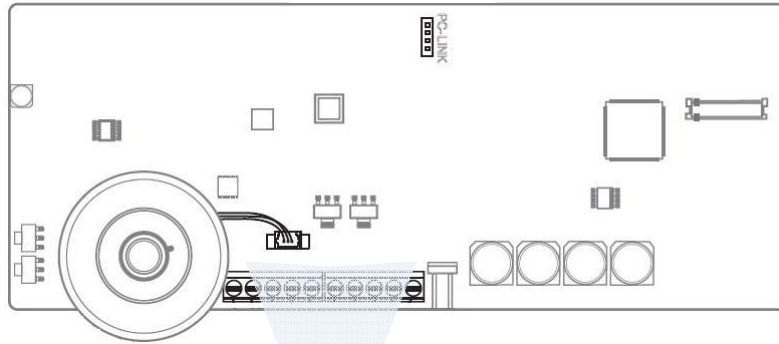

Telephone Connections
 T-1/R-1 - return telephone connection to premise
 TIP/RING - incoming telephone service

AC
 AC power connections.
 16.5VAC, 20VA

I/O Terminals
 I/O 1 - configurable as zone input or PGM output. Zone#33 when configured as a zone input. Max. 50mA when configured as a PGM output.
 I/O 2 - configurable as zone input or PGM output. Zone#34 when configured as a zone input. Max. 50mA when configured as a PGM output.

AUX +/-
 Power connections for 12vdc devices.
 Max. 200mA current draw

IMPORTANT NOTE!!!
 The PC9155 terminal strip in is opposite order compared to previous DSC control panels. The AC input is now found on the far right hand terminal. This order is in place so that the AC input does not interfere with wireless operation.

WT5500 – 2-way Wireless Keypad

Overview:

The WT5500 is the fully supervised 2-way wireless keypad for the 2-way wireless security suite

Specifications:

- Temperature range: -6 °C to +54 °C (22 °F to 140 °F)
- Transformer voltage: 4.5V @ 0.5A
- Battery: 3V (using 4xAA Alkaline Batteries)
- WT5500 Current draw: 50mA (operating)
- Wall mount tamper
- 5 programmable function keys
- Display outdoor temperature via WT4911 2-way wireless outdoor siren



Additional Information:


Available Models:

- WT5500 (Standard)
- WT5500P (Proximity)
- WT5500D (Desk Stand Version)

Available Accessories:

- WT5500DMK – Desk Stand
- WT5500X – AC Transformer
- PT4 – Prox Tag

WT5500 – Layout/Indicators

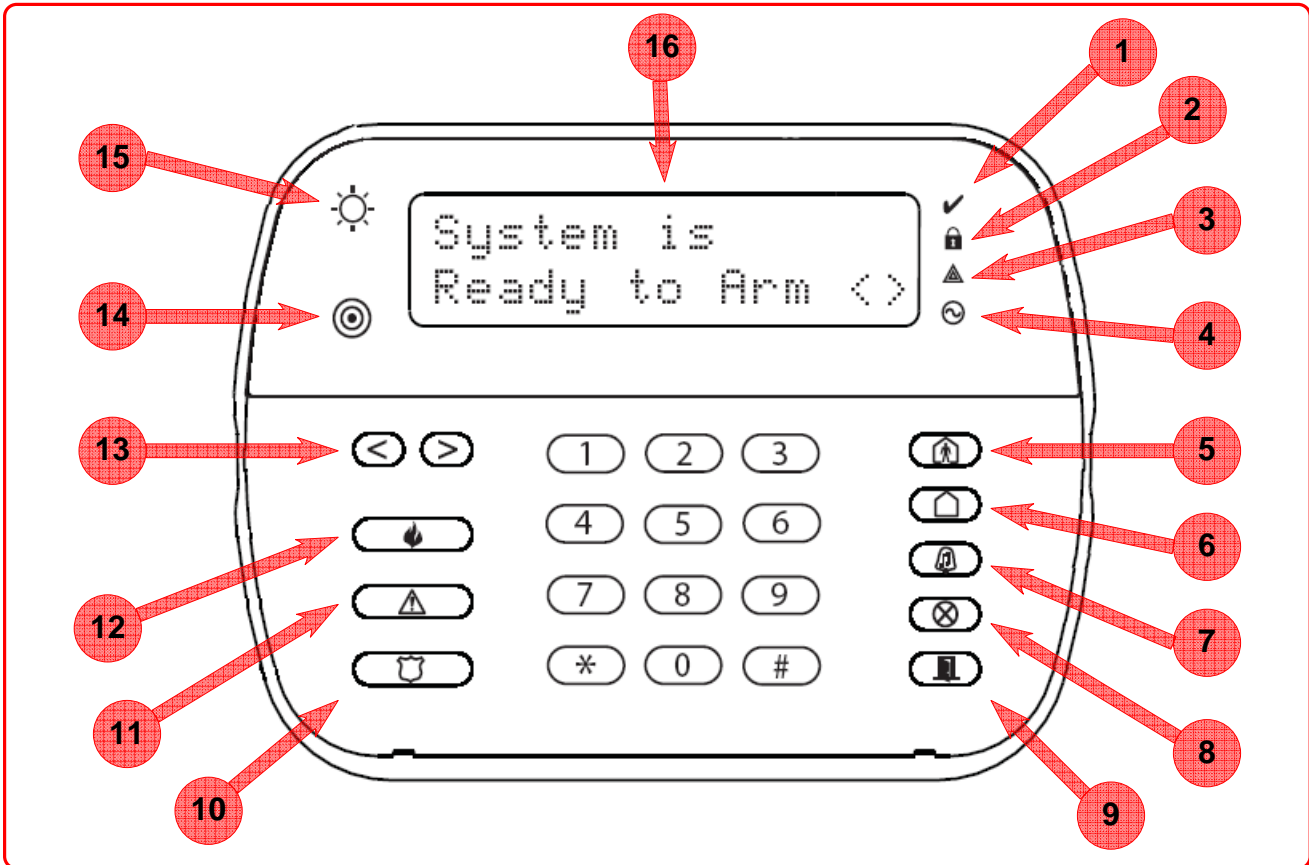

Status LED Indicators

- 1 – Ready
- 2 – Armed
- 3 – Trouble
- 4 – AC Status

Function Keys

- 5 – Stay Arm
- 6 – Away Arm
- 7 – Chime Enable/Disable
- 8 – Zone Bypass
- 9 – Quick Exit

Emergency Keys

- 10 – Panic
- 11 – Auxiliary
- 12 – Fire

- 13 – Arrow Keys
- 14 – Prox Sensor (WT5500P Only)
- 15 – Light Sensor
- 16 – Custom LCD Screen

WT4901 – 2-way Wireless Indoor Siren

Overview:

The WT4901 is a fully supervised 2-way wireless indoor siren for the 2-way wireless security suite

Specifications:

- Operating Temperature: -10 °C to +55 °C (14 °F to 131 °F)
- Batteries: (4) AA 1.5V Alkaline
- Battery Life: 2 years (typical usage)
- Low Battery Level: 5.6 V, pre-determined
- Alarm Signals – Output Level: 85dB @ 3m(high volume)
- Other Signals – Output Level: 65db @ 3m(medium volume)

Features:

- Siren sounds for: Alarms, Door Chime, Entry and Exit Delay, Trouble Indications
- Transmits module status including tamper, low battery and RF fault
- Case and wall tamper
- Fully supervised



Operation

Siren Output Pattern:

- Steady (Burg)
- Pulsed (Fire)
- Temporal Three (Fire)
- CO Output Pattern

Additional Signal Outputs:


- Placement Test Result
- Buzzer Notification*
- Door Chime*
- System Test
- System Troubles*

*Programmable feature

WT4901 Layout

Test Button:


Press and hold the test button for 5 seconds to confirm operation. The siren will activate for 4 seconds. 2 seconds at medium volume and 2 seconds at full volume.

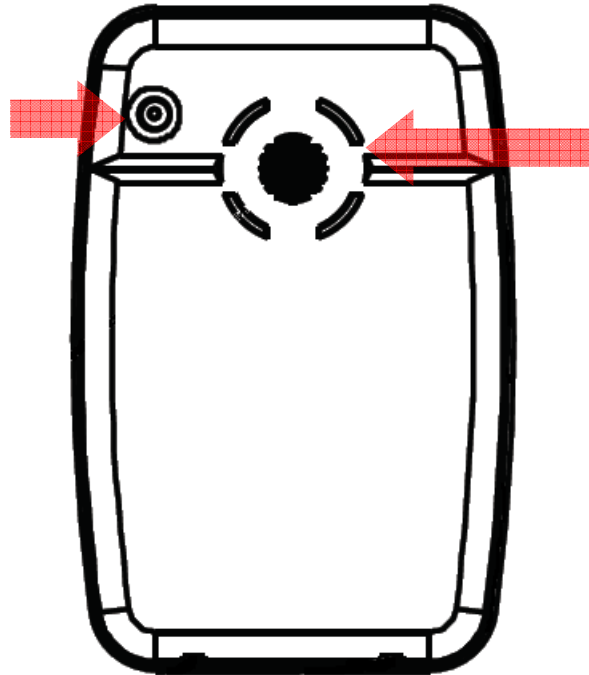

Siren

Inside Backplate

Battery Compartment:
4xAA 1.5V Alkaline Batteries

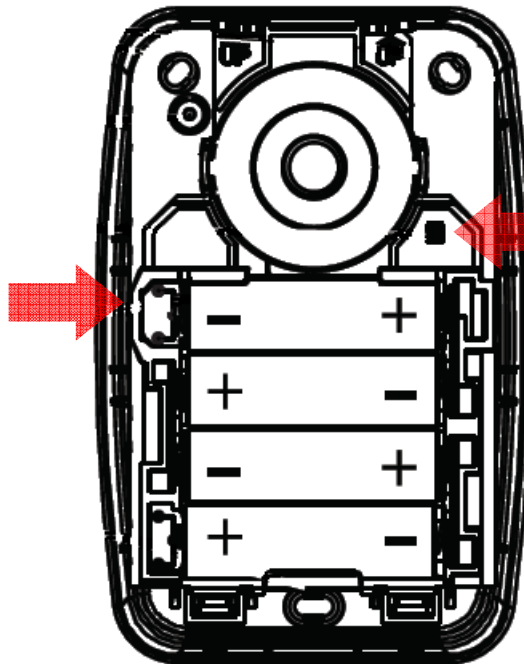

Tamper

WT4911 – 2-way Wireless Outdoor Siren

Overview:

The WT4911 is the fully supervised 2-way wireless outdoor siren for the 2-way wireless security suite

Specifications:

- Operating Temperature: -35 °C to 70 °C (-31 °F to 158 °F)
- Batteries: 1 'D' Cell Lithium (Custom DSC part – **WT4911 – battery**)
- Battery Life: 4 years (typical usage)
- Low Battery Level: 5.6 V, pre-determined
- Alarm Signals – Output Level: 105dB @ 1m

Features:

- Strobe light functionality to visually indicate alarms
- Provides outdoor temperature reading to the WT5500 wireless keypad
- Arm/disarm/alarm memory strobe indication
- Fully supervised
- Case and wall tamper
- Local and remote test capability
- UV Protection
- IP34 rating



Operation

Siren Output Pattern (Siren and Strobe):

- Steady (Burg)
- Pulsed (Fire)
- Temporal Three (Fire)
- CO Output Pattern


Additional Signal Outputs:

- Bell Squawk
- Placement Test Result

Power-up Test:

- Siren and strobe will activate 6 times on power up

WT4911 Layout

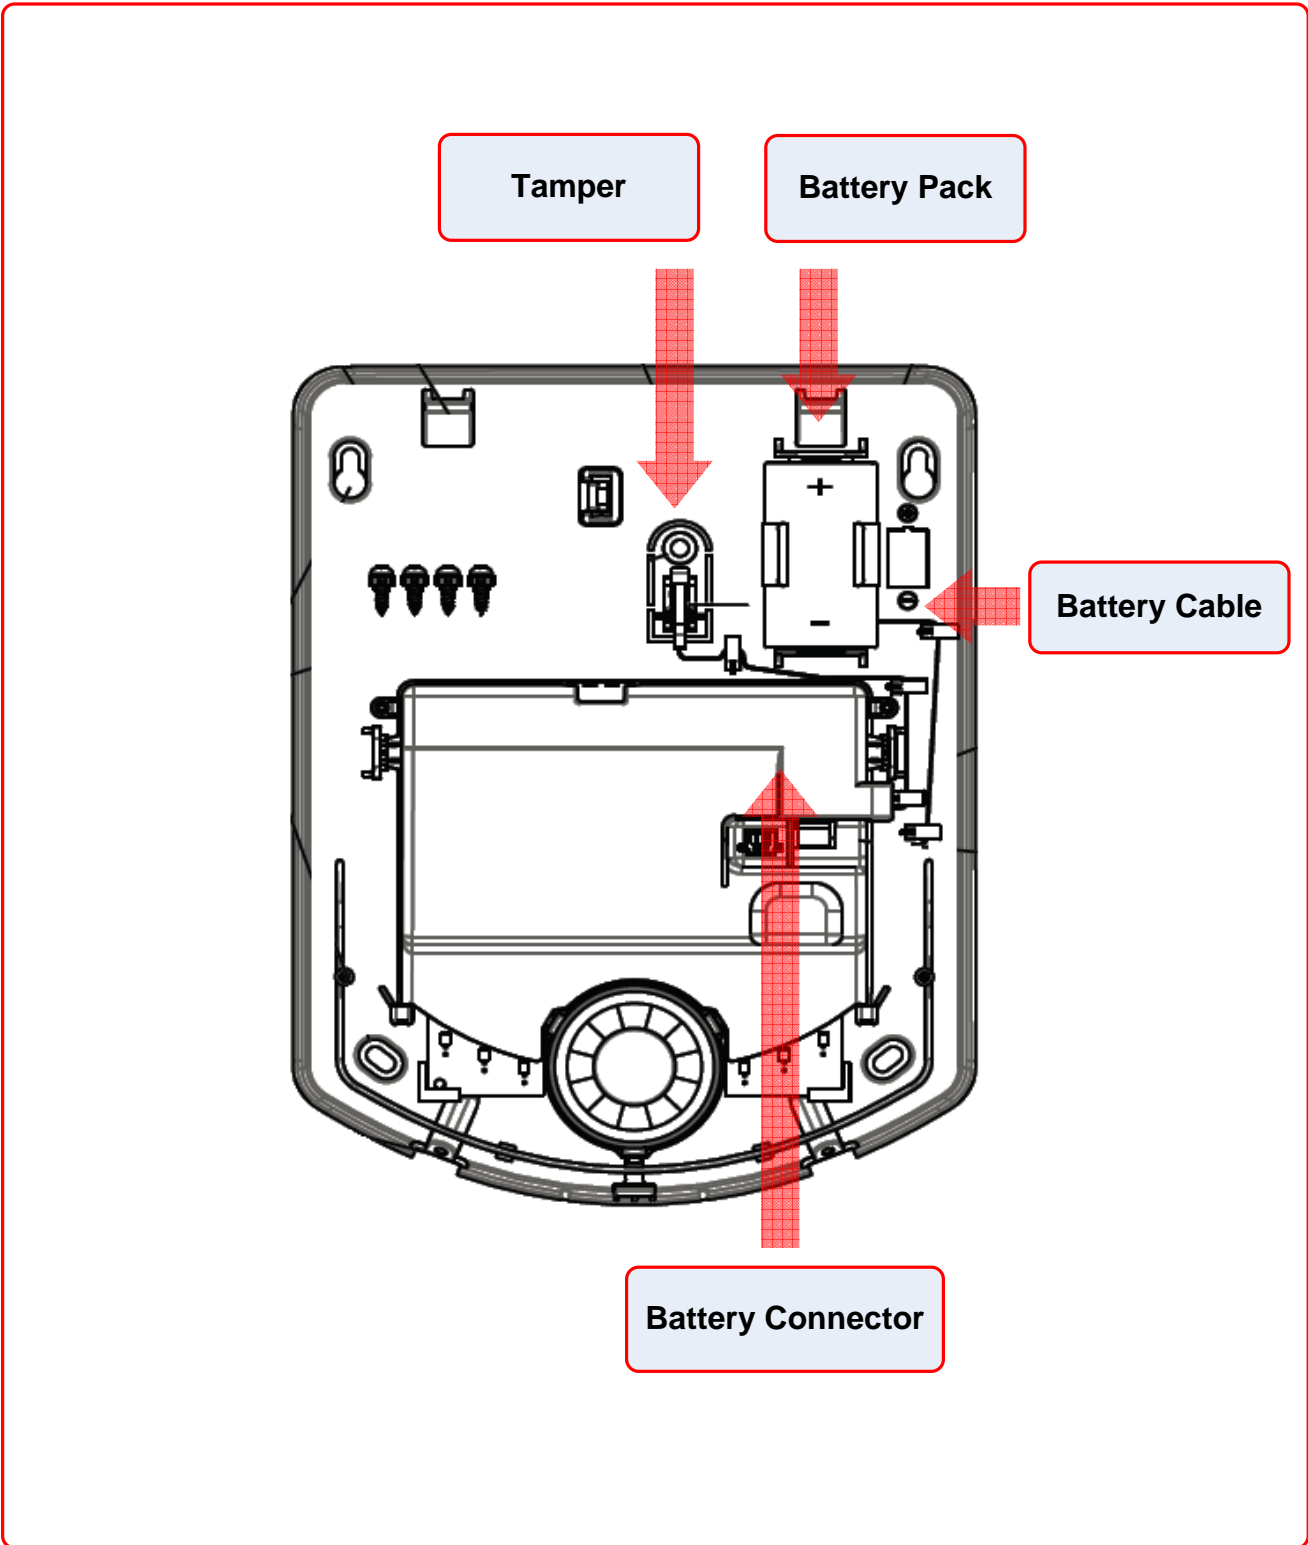

WT4989 – 2-way Wireless Key FOB

Overview:

The WT4989 is a five button, 2-way wireless key FOB for the 2-way wireless security suite

Specifications:

- Operating Frequency: 433MHz
- Batteries: (2) CR2032, 3V Lithium
- Battery Life: 3 years (under typical use)
- Dimensions (LxWxH): 75mm x 40mm x 16mm
- Weight: 41g





Features:

- Backlit icon display
- Built-in buzzer for audible feedback
- Key tactile feedback
- 4 one touch function keys, programmable for up to 6 functions
- 2 double touch function keys
- Status button indication
- Keylock
- Active alarm indication
- 3 second delay on panic button
- Water resistant
- Multifunction clip


Note:

A WT4989 may be programmed to operate one system at a time

WT4989 – Button Layout

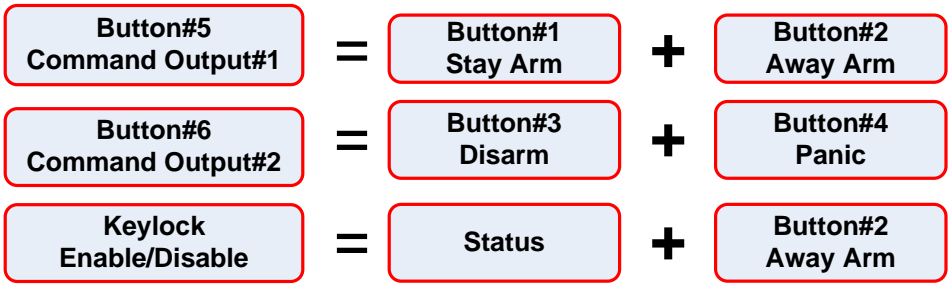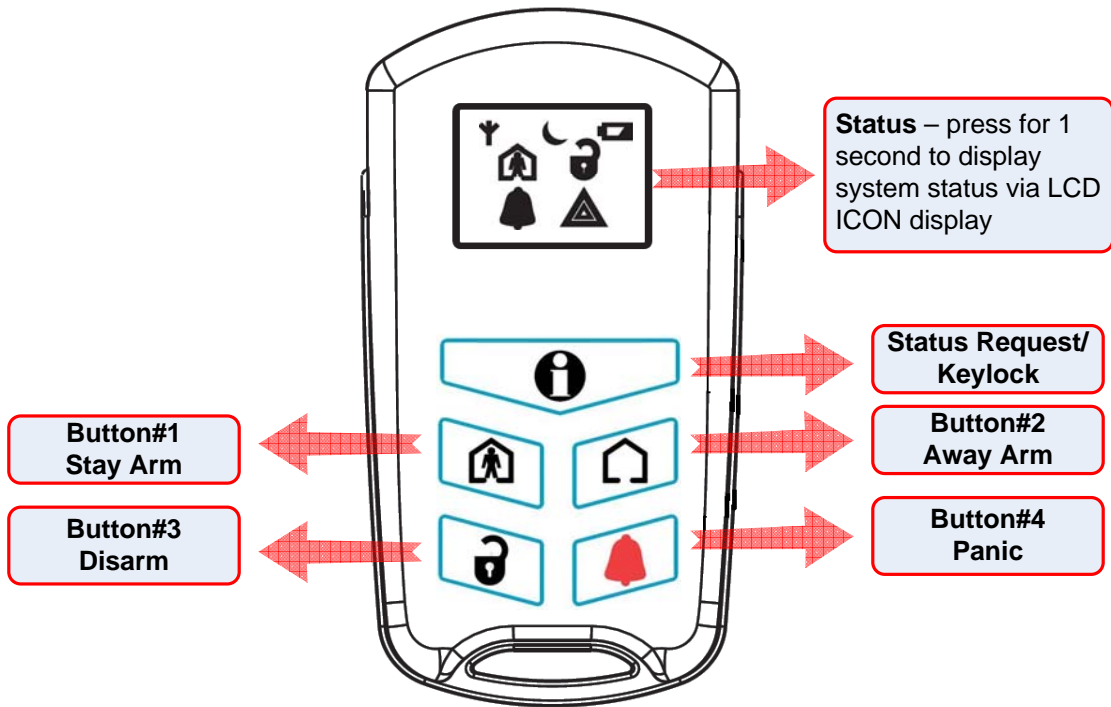

WT4989 – ICON Description

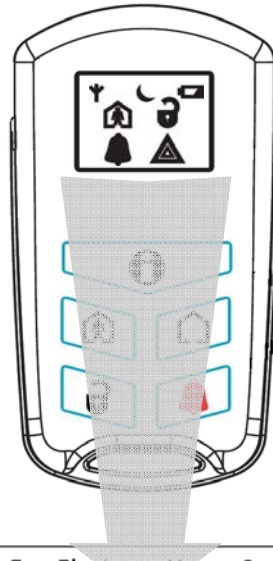

ICON (S= Steady, F= Flashing, X= a Combination of Steady or Flashing icons) SYSTEM STATUS


-  (S) System Trouble
-  (S) Disarmed - Ready, (F) Disarmed - Not Ready
-  (S) Away - Armed
-  (S) Stay - Armed
-  (S) Night - Armed
-  (S) Low Battery, (F) Critical Low Battery
-  (F) *9 Armed - Away
-  (F) *9 Armed - Stay
-  (F) *9 Armed - Night
-  (X) Exit Delay-Away Arming
-  (X) Exit Delay-Stay Arming
-  (X) Exit Delay-Night Arming
-  (F) Keylock enable

WT4989 – ICON Description

Programming:

The WT4989 supports internal programming that provides the user to configure the remote to suit their needs.












To customize the WT4989:

Step 1 – Press and hold all four buttons simultaneously for 5 seconds. The  ICON will flash to indicate that programming has been entered

Step 2 – Press the button 1-4 as per the desired feature listing in the chart below

Note:

- programming will last for 5 seconds

To Program this Option	Do This
Enable/Disable the Keypress Beeps.	Press the () key.
Enable/Disable the 3-Second Delay on () key.	Press the () key.
Enable/Disable Key 3 ()	Press the () key.
Enable/Disable Key 4 ()	Press the () key.
Enable/Disable Keylock ()	Press the () key.
Turn off the Backlighting function.	Press the Enable/Disable of Keylock () + ()

WS4913 – Wireless CO Detector

Overview:

The WS4913 1-way wireless CO detector supports the ability to detect excess carbon monoxide levels

Specifications:

- Sensor: Electrochemical carbon monoxide sensor
- Dimensions: 1.42" x 4.72" (36 mm x 120 mm)
- Battery Life: 5 years
- Operating Temperature: 0 °C to 38 °C
- Battery: Duracell CR123A
- Supported Receivers: PC9155 Only

Features:

- Low sensitivity supervision
- Onboard LEDs indicate:
 - Red – Alarm
 - Yellow – Trouble
 - Green – Power
- Hush feature
- Wall tamper

Important Note:

- the WS4913 is NOT compatible with 1-way receivers



WS4913 – Operation

Operation:

- The CO alarm will go into alarm when the concentration of carbon monoxide (CO) in the air around the device exceeds the 'alarm' threshold
- During an alarm, the red LED light will flash quickly and the buzzer will activate (repeating 4 quick beeps, pause 5 seconds)
- After 4 minutes of being in alarm the pause between beeps will change to 60 seconds (4 quick beeps, pause 60 seconds)
- The alarm will continue to sound until the concentration of CO in the air around detector drops below the 'alarm' threshold or the reset button is pressed

Alarm Indicators:

Power ON mode: when the batteries are installed, the LED will blink 3 times and the built in sounder will activate for half a second

Stand-by mode: the green LED will flash once every 60 seconds to indicate normal operation

Low battery warning mode: in the event of a low battery condition, the yellow LED will blink and the built in sounder will activate once every 60 seconds

Tamper mode: if the case tamper is activated, the built in sounder will activate once every 60 seconds and the yellow LED will be on continuous until the unit is mounted on its backplate.

Trouble mode: if the yellow LED quickly flashes **2, 3** or **4** times every 60 seconds an internal trouble has occurred and the WS4913 will need to be replaced:

2 Times – Malfunction error: indicates an internal fault

3 Times – Low sensitivity mode: indicates an internal fault

4 Times – End of life signal mode: indicates that the detector is reaching the end of useful life (approximately 5 years from initial installation)


WS4985 – Wireless Flood Sensor

Overview:



The WS4985 1-way wireless flood sensor supports the ability to detect excess water levels

Specifications:

- Operating Frequency: 433MHz
- Batteries: (2) CR2032, 3V Lithium
- Battery Life: 3 years
- Dimensions: 75mm x 40mm x 16mm
- Weight: 41g

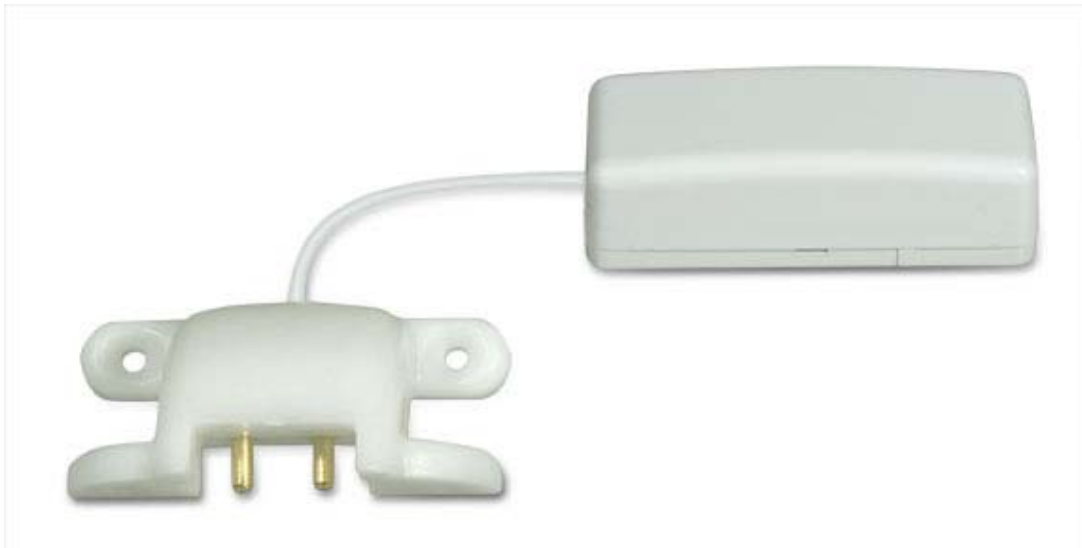

WS4985 – Wireless Flood Sensor

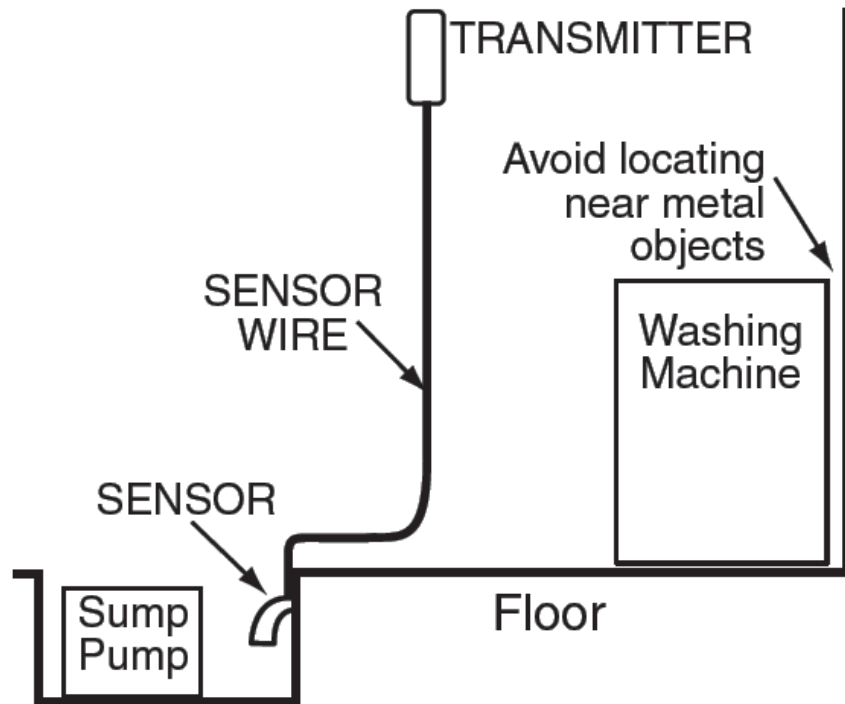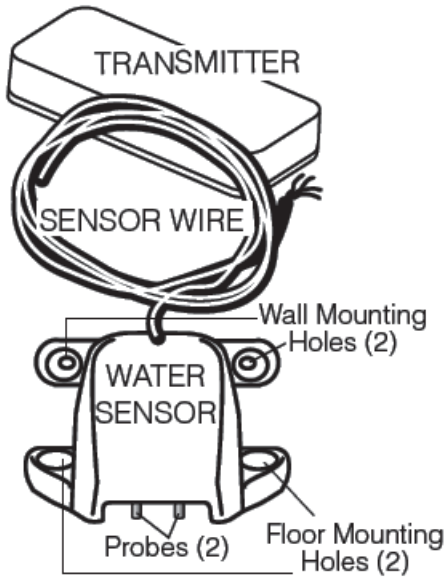

GS2065

Overview:

The GS2065 provides primary or backup GSM/GPRS communication for the 2-way wireless security suite

Specifications:

- Dimensions : 3.937"x5.875"x0.625" (100mmx150mmx15mm)
- Weight : 68 g
- Input Voltage : 10 to 13.8 V (from the PC-Link header)
- Current Draw : 100 mA at 12V (400 mA during the GSM transmission)
- Operating Environment : 5 ° C to 40° C (40° F to 104° F)

Features:

- Back up and primary GSM/GPRS alarm communication
- Panel remote uploading/downloading support via GSM/GPRS
- Supervision heartbeats via GSM/GPRS
- 128-bit AES encryption over GSM/GPRS
- Full event reporting
- SIA format
- PC-Link connection
- SIM card included
- Signal strength and trouble display
- Activating and initializing through Connect 24
- Quad-Band: 850 MHz, 1900 MHz, 900 MHz and 1800 MHz

Compatible Receivers:

- Sur-Gard System I Receiver: version 1.10 and higher
- Sur-Gard System II Receiver: version 2.00 and higher
- Sur-Gard SG-DRL3-IP: version 2.20 and higher (for Sur-Gard System III Receiver)



TL265GS

Overview:

The TL265GS is an Internet and GSM/GPRS Dual-Path alarm communicator for the 2-way wireless security suite

Specifications:

- Dimensions : 3.937"x5.875"x0.75" (100mmx150mmx18mm)
- Weight : 78 g
- Input Voltage : 10 to 13.8 V (from the PC-Link header)
- Current Draw : 100 mA at 12V (400 mA during the GSM transmission)
- Operating Environment : 5 ° C to 40° C (40° F to 104° F)

Features:

- Fully redundant Internet and GSM/GPRS dual-path alarm communication
- Integrated call routing
- Panel remote uploading/downloading support via GSM/GPRS and Internet
- Supervision heartbeats via GSM/GPRS and Internet
- 128-bit AES encryption via GSM/GPRS and Internet
- Full event reporting
- SIA format
- PC-Link connection
- SIM card included
- Signal strength and trouble display
- Activating and initializing through Connect 24
- Quad-Band: 850 MHz, 1900 MHz, 900 MHz and 1800 MHz



Compatible Receivers:

- Sur-Gard System I Receiver: version 1.10 and higher
- Sur-Gard System II Receiver: version 2.00 and higher
- Sur-Gard SG-DRL3-IP: version 2.20 and higher (for Sur-Gard System III Receiver)

Programming Navigation

Programming Navigation

Navigating through programming is simple and intuitive. To enter Installer programming:

Step 1 – Enter [*][8] + [Installer Code]

The default installer code is [5555]

Step 2 – Enter the required 3-digit installer programming section ('Enter Section' will be displayed)

At this point, you have the option of choosing the desired programming method:

- Section Number Programming
- Quick Enroll
- Template programming

Section Number Programming:

This is the traditional method of programming and allows the user to enter any programming section.

When using this method, there are two types of programming sections:

- Toggle Sections
- Data Sections

Toggle Section:

Toggle sections consist of a series of options that may be enabled or disabled. To toggle an option ON or OFF, press the key number corresponding to the option.

	Option Enabled	Option Disabled
Programmable-Message LCD	# Displayed	Dash [-] Displayed

To exit a toggle section, press [#]

Data Section:

Data sections require multiple 2 or 3 digit number entries. Data sections allow for both decimal or hexadecimal entries (some data sections have fixed values where the available entries are provided from a chart. For example 'Zone Definitions'). To enter hexadecimal data, first enter [*] followed by [1] to [6] to enter [A] to [F] respectively. To exit hexadecimal programming, enter [*] again.

To exit a data section, either complete all entries or press [#]

Once you exit a programming section, a new 3-digit section may be entered


Quick Enroll

Quick Enroll:

The Quick Enroll programming method is designed to reduce the time required to program wireless devices/detectors.

The following information is programmable when using the Quick Enroll method:

- Serial Number - no need for programming serial numbers manually. Therefore preventing programming errors
- Zone Number (detectors)
- Zone Definitions (detectors)
- Slot Number (Keypads, Sirens, FOBs)

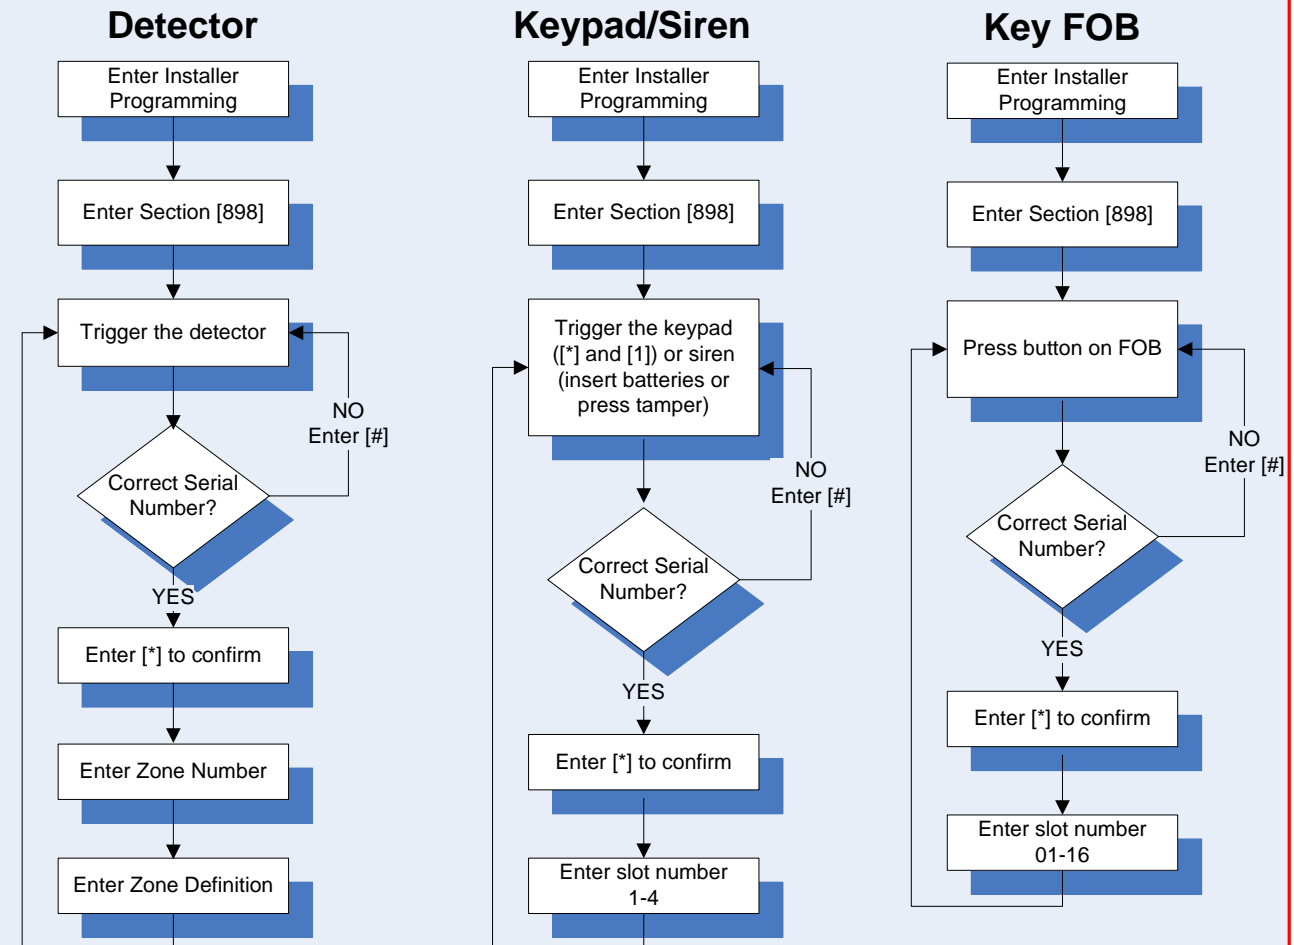

Note:
- pressing [#] will return to the previous step

Template Programming

Template Programming:

Template programming provides a quick and easy method of programming the control panel's core features.

To use template programming, perform the following:

- Step 1 – Enter Installer programming, [*][8] + [Installer Code]
- Step 2 – Enter Section [899]
- Step 3 – The keypad will display 4-digits. Each digit in each segment represents the template programming currently selected.
 - 1st Digit – Zone Definitions
 - 2nd Digit – Communications Programming (Format)
 - 3rd Digit – Reporting Code and Call Direction Configurations
 - 4th Digit – DLS Configuration
- Step 4 – Move the cursor to each digit segment and enter the desired configuration number
- Step 5 – Enter [#]
- Step 6 – Enter the following data:
 - Central station telephone number
 - Panel account code
 - DLS access code
 - Entry & Exit time
 - Installer code

Note: If '0' is entered for the 1st digit, the system will keep the zone definitions selected when the 'Quick Enrollment' was performed. Selecting any other digit will change the previously programmed information.

Example:

A system requires the following configuration:

Zone Definitions	Zone#1, #2 = Delay 1 Zone#3 - #8 = Instant
Communication Options	Automatic SIA
Reporting Codes	Alarms and Maintenance Reporting (Telephone#1)
DLS Options	No DLS Required

Required Programming in Section [899] = **4211**

Installation

BEFORE YOU BEGIN

Have the following ready before initializing the system:

- AC transformer
- Wire attached to transformer
- Control panel backup battery
- Battery connection harness
- Batteries for WT5500 2-way wireless keypad
- Screwdriver

Summary of Installation Steps

Step 1 – Mounting the PC9155

Step 2 – Apply power to the PC9155

Step 3 – Enroll the first WT5500 wireless keypad

Step 4 – Enroll additional wireless devices and detectors

Step 5 – Test all wireless devices and detectors

Step 6 – Additional installer programming

Step 1

Step 1 – Mounting the PC9155

It's important to ensure that the PC9155 is mounted in a location that will allow for proper transmission of wireless information. Use the following guidelines when finding a location:

- Central location
- Dry
- Within operating temperature range
- Away from sources of interference

Installation

Step 2

Step 2 – Apply power to the PC9155

Connect AC power and battery. During the first 2 minutes of power the 'Ready' and 'AC' indicators will flash

Step 3

Step 3 – Enroll the first WT5500 wireless keypad

Press and hold the [*] and [1] simultaneously within the first 2 minute of applying power to the PC9155 control panel. When successfully enrolled, the keypad will display 'WFKP Enrollment Successful'

Note: this must be performed within the first 2 minutes of applying power to the PC9155. If the 2 minute expires prior to this operation, remove power (AC and battery) from the PC9155 and reconnect.

The PC9155 is now ready for additional keypad, device and detector enrollment

Step 4

Step 4 – Enroll additional wireless devices and detectors

The next series of pages in this section includes instructions on enrolling the following items using the Quick Enroll method:

- Additional WT5500 keypads
- WT4901 and WT4911 sirens
- Wireless detectors
- Wireless key FOBs
- Prox Tags

Installation

Enrolling additional wireless keypads (WT5500)

- Step 1 – Enter Quick Enroll ([*][8] + Installer Code + [898])
 - the display will read 'Wireless Enrollment Mode'
- Step 2 – Press and hold the [1] and [*] keys simultaneously
 - the display will indicate the serial of the keypad
- Step 3 – Press [*] to confirm the correct device
- Step 4 – Enter the slot number of the keypad [1, 2, 3 or 4]
- Step 5 – Repeat Steps 2-4 to enroll additional keypads

Notes:

- if the display does not indicate the serial number of the desired keypad to be enrolled, press [#] and repeat Step 2
- the keypad enrolled during initialization will automatically occupy Slot#1. Do not attempt to enroll another keypad to this slot number unless the initial keypad was deleted.
- if the slot number entered in Step 4 is already occupied with a different serial number, the keypad will prompt to enter [*] to replace with the new serial number or [#] to keep the previous device and return to the slot number entry screen
- up to four WT5500 keypads may be enrolled per PC9155 system

Enrolling Sirens (WT4901, WT4911)

- Step 1 – Enter Quick Enroll ([*][8] + Installer Code + [898])
 - the display will read 'Wireless Enrollment Mode'
- Step 2 – Press and hold the tamper or insert the batteries in the siren
 - the display will indicate the serial of the keypad
- Step 3 – Press [*] to confirm the correct device
- Step 4 – Enter the slot number of the siren [1, 2, 3 or 4]
- Step 5 – Repeat Steps 2-4 to enroll additional sirens

Notes:

- if the display does not indicate the serial number of the desired siren to be enrolled, press [#] and repeat Step 2
- a total of four combined WT4901 and WT4911 may be enrolled per PC9155 system (i.e. WT4901x2 and WT4911x2)
- if the slot number entered in Step 4 is already occupied with a different serial number, the keypad will prompt to enter [*] to replace with the new serial number or [#] to keep the previous device and return to the slot number entry screen

Installation

Enrolling wireless detectors

Step 1 – Enter Quick Enroll ([*][8] + Installer Code + [898])
- the display will read 'Wireless Enrollment Mode'

Step 2 – Trigger the detector

Door/window contact – activate tamper or violate contact

Motion detectors – activate tamper

Smoke Detector – activate tamper

Glassbreak Detector – activate tamper

Panic Pendant – Press and hold button for 2-3 seconds

CO Detector – activate tamper

Flood Sensor – activate tamper

- the display will indicate the serial of the detector triggered

Step 3 – Press [*] to confirm the correct device

Step 4 – The keypad will display the next available zone number, enter [*] to accept. If a different zone is required enter the new 2-digit zone number (01 – 32)

Step 5 – The keypad will display the recommended zone definition, enter [*] to accept. If a different definition is required, enter the new 2-digit zone definition and enter [*] to accept

Step 6 – Repeat Steps 2-5 to enroll additional keypads

Notes:

- if the display does not indicate the serial number of the desired detector to be enrolled, press [#] and repeat Step 2

- if the zone number entered in Step 4 is already occupied with a different serial number, the keypad will prompt to enter [*] to replace with the new serial number or [#] to keep the previous device and return to the zone number entry screen

Common Zone Definitions (refer to installation manual for a complete list)

[01] – Delay 1

[03] – Instant

[05] – Interior Stay/Away

[87] – Delayed 24 Hr Fire

[15] – 24 Hr. Medical

Installation

Enrolling wireless key FOBs (1-way and 2-way)

- Step 1 – Enter Quick Enroll ([*][8] + Installer Code + [898])
 - the display will read 'Wireless Enrollment Mode'
- Step 2 – Press a button on the FOB to be enrolled
 - the display will indicate the FOB
- Step 3 – Press [*] to confirm the correct device
- Step 4 – Enter the 2-digit slot number of the FOB ([01] – [16])

Notes:

- if the display does not indicate the serial number of the desired detector to be enrolled, press [#] and repeat Step 2
- if the slot number entered in Step 4 is already occupied with a different serial number, the keypad will prompt to enter [*] to replace with the new serial number or [#] to keep the previous device and return to the slot number entry screen
- the default programming for the key FOBs are as follows:
 - Button 1 = Stay
 - Button 2 = Away
 - Button 3 = Disarm
 - Button 4 = Panic
 - Button 5 = Command Output#1*
 - Button 6 = Command Output#2*

*WT4989 Only

To change, enter Sections [804], Sub-Section [141 – 156]

Enrolling Prox Tags (WT5500P Only)

- Step 1 – Enter Access Code Programming ([*][5] + [Master or Supervisory Code])
- Step 2 – Select a user code number (01 -16, 40) to be associated with the prox tag
- Step 3 – If no code is programmed for the user, enter a 4 or 6-digit number. If a 4 or 6-digit number already exist, scroll through the code number
- Step 4 – The keypad will prompt to present the prox tag. The message 'Tag Accepted' will be display if correctly enrolled

Installation

Step 5

Step 5 – Test all wireless devices and detectors

Step 1 – Enter Wireless Placement Test ([*][8] + Installer Code + [904])
 - the display will read 'Activate Device For Test'

Step 2 – Activate each wireless device/detector one at a time from the proposed mounting location

- Wireless Keypad** – [*] and [1] simultaneously
- Wireless sirens (WT4901, WT4911)** – activate tamper
- Door/window contact** – activate tamper or violate contact
- Motion detectors** – activate tamper
- Smoke Detector** – activate tamper
- Glassbreak Detector** – activate tamper
- Panic Pendant** – Press and hold button for 2-3 seconds
- CO Detector** – activate tamper
- Flood Sensor** – activate tamper

Step 3 – The test result will be indicated:

	Good Result	Bad Result
Keypad Display	'Location is Good'	'Location is Bad'
Siren*	1 Squawk	3 Squawks

* PC9155 and WT4901

Note:

- the above placement test is when enabled for the 'Global Placement Test'. If "Individual Placement Test", a different section number exits for each type of device:

Installation

Step 6

Step 6 – Additional installer programming

After the PC9155 has been initialized and the wireless devices/detectors have been enrolled and tested, the next step is to program additional system information. Additional programming may be performed using Template Programming covered in Section XX

This includes the following:

Zone Definitions:

System Times

Installer Code

Telephone Number

Communication Format

DLS Options

The following are common template programming entries:

Automatic SIA, DLS Enabled =X212

Automatic SIA, No DLS = X211

Contact ID, DLS Enabled = X612

Contact ID, No DLS = X611

Where 'X' = Zone Definition configuration entry.

Additional Wireless Programming

Replace

There are two methods for replacing wireless devices:

Method#1 – Quick Enroll

Step 1 – Enter Quick Enroll ([*][8] + Installer Code + [898])

Step 2 – Trigger the device or detector

Wireless Keypad – [*] and [1] simultaneously

Wireless sirens (WT4901, WT4911) – activate tamper

Door/window contact – activate tamper or violate contact

Motion detectors – activate tamper

Smoke Detector – activate tamper

Glassbreak Detector – activate tamper

Panic Pendant – Press and hold button for 2-3 seconds

CO Detector – activate tamper

Flood Sensor – activate tamper

Step 3 – Enter the slot number of the device or the zone number of the device/detector to be replaced

Step 4 – Enter [*] to confirm

Method#2 – Manual Programming

Step 1 – Enter Installer Programming ([*][8] + Installer Code)

Step 2 – Enter Section [804]

Step 3 – Enter the 3-digit zone number

Step 4 – The keypad will display the current serial number. Enter the new 8-digit serial number

Delete

Step 1 – Enter Installer Programming ([*][8] + Installer Code)

Step 2 – Enter Section [804]

Step 3 – Enter the 3-digit serial number location*

Step 4 – The keypad will display the current serial number, replace the serial number with 0's

* Zone = Sections [001] – [132]

FOB = Sections [101] – [116]

Keypad = Sections [201] – [204]

Siren = Sections [301] – [304]

I/O Terminals

Overview:

The I/O terminals on the PC9155 may be used as either a hardwired zone input or PGM output.

Note: a combination of zone input and PGM output may be used on the same control panel

Example – O/I 1 = PGM, I/O 2 = Zone or vice versa

Zone Input:

Overview:

The on-board I/O terminals may be used as a zone input.

I/O 1 = Zone#33

I/O 2 = Zone#34

Required Programming:

Zone Definition – Section [009]

Zone Enabled – Section [013]

Toggle#1 ON (I/O 1 = Zone#33)

Toggle#2 ON (I/O 2 = Zone#34)

Supervision Method – I/O 1 – Section [133]

I/O 2 – Section [134]

Toggle#14 = N/C (Normally Closed)

Toggle#15 = SEOL (Single End of Line Resistor)

Toggle#16 = DEOL (Double End of Line Resistor)

PGM Output:

Overview:

The on-board I/O terminals may be used as a PGM output.

I/O 1 = PGM#1

I/O 2 = PGM#2

Required Programming:

PGM Option Type – Section [009]

PGM Enabled – Section [013]

Toggle#1 OFF (I/O 1 = PGM#1)

Toggle#2 OFF (I/O 2 = PGM#2)

[*] Commands

[*][1] – Zone Bypass:

Summary: Zone bypassing allows for a zone or series of zones to be ignored during the next arming. This command is performed when the system is disarmed.

Operation:

Bypass a single zone

- Step 1 – [*][1]
- Step 2 –Enter 2-digit zone number
- Step 3 –Press [#]

Bypass multiple zones

- Step 1 –[*][1]
- Step 2 –Enter 2-digit zone number of first zone to bypass
- Step 3 –Repeat step#2 for additional zones to be bypassed
- Step 4 –Press [#]

Unbypass a zone

Method#1

- Step 1 –[*][1]
- Step 2 –Enter 2-digit zone number of previously bypassed zone or zones
- Step 3 –Press [#]

Method#2

Bypassed zone will automatically unbypass when the system is disarmed

[*][1] – Reactivate Stay/Away Zones:

Summary: This command incorporated previously bypassed zones into the system. This command may be performed when the system is armed in the 'Stay' mode.

Operation:

[*][1] while armed in the 'Stay' mode

Note: when performed, the system will initiate 'Exit Delay' (silent). This will allow for the users to leave the area of the reactivated zone or zones avoiding false alarms.

[*] Commands

[*][2] – System Troubles:

Summary:

This command is used to display system troubles.

Operation:

[*][2]

[*][2] – Troubles

Overview:

This command is used to display system troubles.

[1] - Service Required

- [1] – Low Battery
- [2] – General System Trouble
- [3] – General System Tamper

[2] - AC Trouble

[3] - TLM Trouble (Telephone Line Monitor)

[4] - FTC Trouble (Failure To Communicate)

[5] - Zone Fault Trouble Including Fire Zones

[6] - Zone Tamper Trouble

[7] - Wireless Device Low Battery Trouble

[8] - Loss of Time/Date Trouble

[1] - Service Required

This trouble is generic and requires that the [1] button be entered for specific details. Once selected, the following trouble conditions may appear:

[1] - Low Battery

This trouble indicates that the voltage level on the control panel's backup battery is low or not connected.

The trouble is generated when the battery voltage is below 7.2vdc and restored when the voltage reaches 7.6vdc or higher.

[2] - General System Trouble

A General System Trouble may occur on the system if the system has detected the presence of an RF jam condition.

[3] - General System Tamper

This trouble condition is generated when the cover tamper is tripped.

[2] - AC Trouble

This trouble condition is generated when AC power is removed from the control panel

[3] - TLM Trouble (Telephone Line Monitor)

This trouble condition is generated when the control panel loses the telephone line connection between RING/TIP (less than 3vdc)

[*] Commands

[*][2] – System Troubles (continued):

[4] - FTC Trouble (Failure To Communicate)

This trouble condition is generated when the control panel fails to report a signal to the central station

[5] – Wireless Device/Detector Fault or DEOL Zone Fault

A zone fault condition is generated due to any of the following:

Wireless - If a wireless device fails to report a status or supervisory signal within the wireless supervisory window (Zone, Keypad or Siren)

DEOL (Double End Of Line) - If a short circuit is detected.

[6] - Wireless Device/Detector Tamper or DEOL Zone Tamper

A zone tamper condition is generated due to any of the following:

Wireless - If the tamper on a wireless device is violated (Zone, Keypad or Siren)

DEOL (Double End Of Line) - If an open circuit is detected

[7] - Wireless Device Low Battery Trouble

This trouble is generated when a low battery condition is detected on a wireless device

[8] - Loss of Time/Date Trouble

This trouble condition is generated when the internal clock (time/date) needs to be reset due to a loss of power (AC/DC)

Note: pressing [*] with this trouble is displayed will automatically take the user to time/date programming

For GS2065 and TL265GS trouble conditions, please refer to the respective installation manuals

[*] Commands

[*][3] – Alarm Memory:

Summary:

This command is used to display zones which were in alarm during the last armed state.

Operation:

[*][3]

Notes:

- alarm memory will be cleared when the system is rearmed.
- If the alarm memory has been cleared, the event buffer can be used to display previous alarms
- alarm memory is clear the next time the control panel is armed

[*][4] – Enable/Disable Door Chime:

Summary:

This command is used to enable/disable the door chime feature.

Operation:

[*][4]

Enabled = 3 beeps, 'CHIME ON' is displayed for 2 seconds

Disabled = 1 tone, 'CHIME OFF' is displayed for 2 seconds

[*] Commands

[*][5] – Access Code Programming:

Summary:

This command is used to modify user access codes.

Access Code Breakdown

[01] - [16] - User Codes (default = 'AAAA'), [40] - Master Code (default = '1234')

Operation:

Adding/Editing User Code

Step 1 - Enter [*][5][Master Code]

Step 2 - Enter user code number

Step 3 - Enter new 4 or 6-digit code

Note:

- if using a WT5500P, the user will be prompted to present a prox tag to associate to the user code after Step 3. If no prox tag is to be assigned to user, enter [#]

Deleting User Code

Step 1 - Enter [*][5][Master Code]

Step 2 - Enter user code number

Step 3 - Enter [*]

Note:

- if a prox tag was assigned to the user, both the 4 or 6-digit user code and prox tag will be deleted

Access Code Attributes - Code Options

Operation:

Step 1 - Enter [*][5][Master Code]

Step 2 - Enter [9]

Step 3 - Enter user code number

Step 4 - Enable/disable desired option

Option [1] – Supervisor's Code

This option provides the user code with the ability to enter the [*][5] User Code Programming and [*][6] User Functions.

Option [2] - Duress

This option enabled the user code as a duress code. When entered, the control panel will report a 'Duress Code' to the central station (if programmed)

Option [3] – Bypass

This option is only applicable when the toggle option 'Bypass Requires Code' is enabled (Section [015], Option [5] ON). If enabled, this access code may be used to enter the bypass mode. If this option is enabled (Bypass Requires Code), the user must enter a code with the 'Bypass' attribute enabled after entering [*][1] before the keypad will enter the bypass mode.

Option [7] - Bell Squawk On Access Code Entry

If enabled, a bell squawk will only be performed when an access code is used to arm/disarm.

Option [8] - One-Time User Code

If enabled and this user code performs a disarming, the system will delete the 4-digit user code the next time the control panel is armed. Any of the 16 user codes can be programmed to be one-time use codes. The code number will be restored at midnight.

[*] Commands

[*][6] – User Functions:

[*][6] + [Master Code or Supervisory Code] + [Option]

Option [1] – Program Time/Date

Step 1 – [*][6]+ [Master Code or Supervisory Code]

Step 2 – Press [1]

Step 3 – [HH:MM MM:DD:YY]

The control panel Time/Date needs to be programmed each time AC and backup battery are removed.

Additional Information – when AC and backup battery are removed, the control panel will log a 'Cold Start' to the event buffered when power is restored

Option [4] – System Test

Step 1 – [*][6]+ [Master Code or Supervisory Code]

Step 2 – Press [4]

When initiated, the control panel will test the following:

- Keypad (LED indicators, LCD screen, buzzer)
- Bell output (PC9155 siren and WT4901/WT4911)
- Battery
- Central station communications (reports a 'System Test' reporting code)

Option [5] – User Enabled DLS Window

Step 1 – [*][6]+ [Master Code or Supervisory Code]

Step 2 – Press [5]

When initiated, the control panel will answer an incoming DLS call (Double Call) for the next 6 hours*

* may be programmed to answer for 1 hour when initiated, Section [702], Toggle#7

Option [6] – User Initiated Call-up

Step 1 – [*][6]+ [Master Code or Supervisory Code]

Step 2 – Press [6]

When initiated, the control panel will call the DLS computer

Option [8] – User Walk Test Mode

Step 1 – [*][6]+ [Master Code or Supervisory Code]

Step 2 – Press [8]

[*] Commands

[*][6] – User Functions (Continued):

Option [8] – Late to Open Enable/Disable

When enabled, the control panel will report a 'Late To Open' reporting code to the central station if the system is not disarmed before the time programmed in Option [9] is reached

Option [9] – Late to Open Time of Day

This option is used to specify the 'Late to Open' time

Step 1 – [*][6]+ [Master Code or Supervisory Code]

Step 2 – Press [9]

Step 3 – Press [1 -7] for the required day of the week (1 = Sunday)

Step 4 – Enter HH:MM (24 – hour format)

LCD Options:

Additional LCD options are available when access the 'User Functions'. These options are as following:

- Event Buffer
- Contrast *
- Brightness *
- Buzzer Volume*

* To adjust the options, use the keypad scroll buttons. When the desired option appears on the display press the [*] button to select. Use the scroll buttons to select the desired level. Press [#] to exit

Event Buffer:

Overview:

The event buffer stores the last 500 events generated on the system. These events include:

- Alarms/Restores
- Troubles
- Tests
- [*] Commands

Viewing Events:

Step 1 – [*][6]+ [Master Code or Supervisory Code]

Step 2 – Press [*] when 'View Event Buffer' is displayed

Step 3 – The display will show the most recent event (Event 001)

Each event is display in 2 separate levels:

Level 1 – displays the number of the event (The most recent event is 000), followed by the partition label

Level 2 – displays the description of the events which occurred

Notes:

- pressing [*] at any time will toggle between level 1 and level 2 of an event.
- pressing the arrow keys (right/left) will scroll through events
- when a new event is logged, the oldest event stored will be erased

[*] Commands

[*][7] – Command Outputs:

Summary:

This command provides the ability to activate/deactivate PGM outputs programmed as a 'Command Output' option.

Operation:

[*][7] + [1] or [*][7] + [1] + [Access Code]

[*][7] + [2] or [*][7] + [2] + [Access Code]

[*][8] – Installer Programming:

Summary:

This command allows the user to enter 'Installer Programming'.

Operation:

[*][8] + [Installer Code]

Notes:

- The default installer code is '5555'.
- The system must be disarmed before entering installer programming
- Attempting to enter installer programming while armed, the keypad will emit a long steady tone for 3-seconds after [*][8] is entered and the LCD keypad message 'Function Not Available' will also be displayed

[*][9] – No-Entry Arming:

Summary:

If armed using this method, all 'Delay' type zone will become instant (no entry delay) and all 'Stay/Away' type zone will be automatically bypassed

Operation:

[*][9] + [Access Code]

Note:

- [*][1] may be used after arming in this mode if 'Stay/Away' zones are to be active

[*] Commands

[*][0] – Quick Arm:

Summary:

This command is used to arm the control panel without using a user access code.

Operation:

[*][0]

Note: this feature is performed while the system is disarmed

[*][0] – Quick Exit:

Summary:

When performed, this command will enable a 2 minute window. During this window any one delay type zone (Delay 1 or Delay 2) may be violated and then restored once.

Operation:

[*][0]

Notes:

- this feature is performed when the system is armed
- if the delay zone is not restored when the 2 minute window expires, entry delay will begin

Arming Methods

The PC9155 supports 3 modes of arming:

- Stay Arm
- Away Arm
- Night Arming

Stay Arming

Arming in the 'Stay' mode indicates that all zone on the control panel are active with the except for 'Stay/Away' type zones. It is common to define motion detectors zones as 'Stay/Away' type zones. Arming in the Stay mode is typically performed when the user wishes the stay at home and have the ability to walk freely inside without causing alarms, yet still provided with perimeter protection.

Methods of arming in Stay Mode:

1 – Access Code Entry, Prox Tag or Quick Arm: After arming using any of these methods, the system will arm in the Stay mode if a delay (Delay 1 or Delay 2) type zone is not violated during the exit delay

2 – Stay Function on Keypad or Key FOB*

*Arming with either of these methods will always arm in the 'Stay' mode, even if a delay type zone is violated during exit delay

Away Arming

Arming in the 'Away' mode indicates that all zone on the control panel are active including 'Stay/Away' type zones. Arming in the Away mode is typically performed when the user wishes to arm system when leaving the location.

Methods of arming in Away Mode:

1 – Access Code Entry, Prox Tag or Quick Arm: After arming using any of these methods, the system will arm in the Away mode if a delay type zone is violated during the exit delay

2 – Away Function on Keypad or Key FOB*

*Arming with either of these methods will always arm in the 'Away' mode, even if a delay type zone is not violated during exit delay

Note: If current armed in the Stay mode, the user may enter [*][1] to reactivate all Stay/Away type zones, placing the system in the Away mode.

Night Mode Arming

'Night Mode' arming occurs when a [*][1] (Reactivate Stay/Away Zones) is performed on a system that was initially armed in the 'Stay Mode'. All 'Stay/Away' types zones will become active, however all 'Night' zones will remain bypassed.

Note: Night zones are only active if the system was initially armed in the 'Away Mode'