

## ESCORT(DSC)

### TO ARM SYSTEM:

All doors and windows must be closed. Ready light must be solid green. Enter code.

You will hear one of the following commands when system has been armed.

- 1) "Arming system , exit delay in progress"
- 2) "Quick arming system" by pressing {\*}{0}
- 3) "To clear interior zones bypass, press {\*}{1} When home-away
- 4) "At-home arming ,exit delay in progress{\*}{9}At -home arming
- 5) "System in split arming , zone...{zone numbers armed}

### TO DISARM SYSTEM:

Enter your four digit code. You will hear "Disarming System" If there were no alarms you will also hear "No Alarm In Memory"

### DISCONNECTING FROM YOUR SECURITY SYSTEM:

Pressing {#}{#}{#} will disconnect the telephone from your system when using an in-house or outside phone. You will also disconnect if no key is pressed for two minutes.

### ALARM MEMORY:

Alarm in memory , press {\*}{3} You will hear "Alarm on Zone...." If there are no alarms in memory you will here "Memory is Clear".

Press {#} to exit

### ZONE BYPASSING:

System can be bypass when the is disarmed. You will hear the message "System Disarmed , Enter Code To Arm". Then press {\*}. You will hear the options menu including prompt " To Bypass Zones Press One". Press {1}. If your system is programmed to allow bypassing only with an access code, you will here the message "Enter Access Code". Enter your four digit code. You will here the message "Select Zone(s) To Bypass" . Press zone(s) you wish to bypass. You will here the message " Bypassing Zone"

Press {#} to exit. Bypass will be removed when system is disarmed.

### TROUBLE CONDITIONS:

Press {\*}{2} and you will hear trouble messages.

- 1) Battery Trouble, 2) AC Power Trouble, 3) Day Zone Trouble, 4) Phone Line Trouble, 4) Fail To Communicate Trouble, 5) Bell Or Siren Trouble, 6) Fire Zone Trouble, 7) Reset Clock Time Trouble,
- 8) No System Trouble.

Press {#} to exit.

### KEYPAD FEATURES:

- 1) Press {1} key and hold for two seconds to transmit a fire alarm.
- 2) Press {2} key and hold for two seconds to transmit auxiliary alarm.
- 3) Press {3} key and hold for two seconds to transmit panic alarm.

### QUICK ARM FEATURES:

To enable this feature press {\*}key to the get to the user function menu . Press {6} to select options. Press the {4} key to turn it on/off like a switch. You will here "Quick Arm On". Press {4} key again and you will here "Quick Arm Off"

Press {#} key to return to the stand by mode.

Press {\*}{0} will arm system.