




**BB-17F Battery Box**  
**Product Installation Drawing**

Document # 15736 Rev. A  
P/N 15736:A ECN:93-199 10/5/93

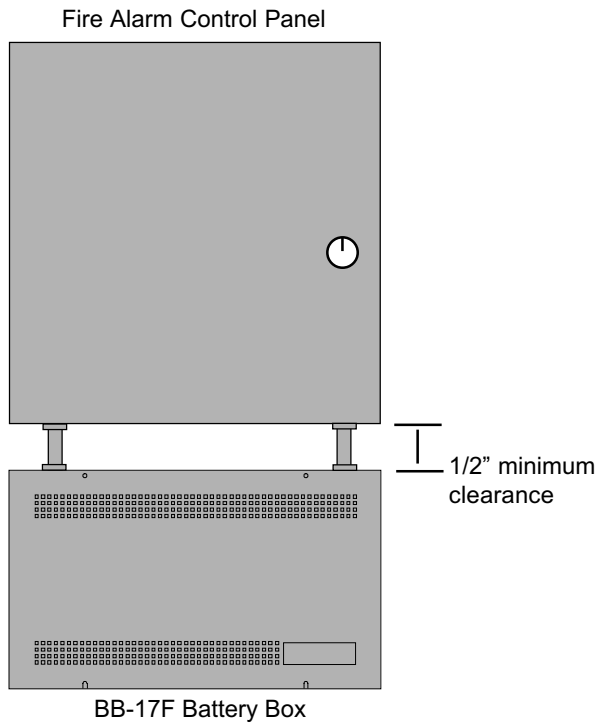

**Overview**

The BB-17F Battery Box may be used to house up to two 17AH batteries. It mounts directly below the FACP cabinet. Knockouts are provided on the top surface of the battery box.

**Parts**

Qty.	Description
1	BB-17F Battery Box Cabinet
1	BB-17F Battery Box Cover
4	Self-Threading Screws

**Installation**

1. Remove knockouts in the bottom of the FACP cabinet and the top of the BB-17F cabinet.
2. Align knockouts in FACP and BB-17F. Anchor the BB-17F to wall using 1/4" diameter holes in back of cabinet.
3. Run conduit between the BB-17F cabinet and the FACP cabinet. Make sure there is at least 1/2" of clearance between the BB-17F and the FACP (see illustration at left).
4. Run battery cable through conduit from FACP into battery box. Connect cable to batteries.
5. Secure the BB-17F cover to cabinet using supplied self-threading screws.

12 Clintonville Road  
Northford CT 06472  
(203) 484-7161  
Fax: (203) 484-7118