

# 4XB SERIES SUPPLEMENT

THIS SUPPLEMENT CONTAINS INFORMATION ABOUT THE SUPV2 JUMPER

# Output Circuits

## Supervisory Appliance Circuit

If Supervisory input is selected (see section 3.7) both Notification Appliance Circuits will activate for supervisory conditions. To activate only one Notification Appliance Circuit (Circuit 2), cut **SUPV1** jumper. To disable both Notification Appliance Circuits, cut **SUPV2** jumper for supervisory conditions. (See figure below for jumper location).

If a 4XZM relay module is used, relay 4 will activate for supervisory conditions.

If a RZA-4X is used, the red LED 4 will annunciate supervisory conditions.

