

Supplement For PK-9200 Manual (Doc.#15677 Rev. A1)

Document 50393 Rev A 11/20/95 ECN 95-519

The following information replaces page 10 of the PK-9200 Programming Manual, Document #15677 Rev. A1, dated 3/9/94. This information reflects a change to Bell Coding (Selection 7) for both NACs (default is March Time coding) and the addition of the LCD-40 programming option (Selection 9) to the System Parameters.

3.1 System Code

From the submenu shown in Figure 3-2, select System Code to bring up the display shown in Figure 3-4.



Figure 3-4: Sample System Code programming screen

From the default screen shown above, eight general system parameters can be programmed. The options are:

<u>Selection</u>	<u>Option</u>	<u>Description</u>
1/	ANNUN	None = No Annunciator 56 Zone = Annunciate status of 56 zones 198 Point = Annunciate status of 198 point addresses
2/	STYLE (4 or 6)	4 = SLC Loop wiring configuration Style 4 6 = SLC Loop wiring configuration Style 6
3/	SILENCE INHIBIT	N = None Y = 60 seconds
4/	AUTO SILENCE	N = None Y = 10 minutes
5/	ALARM VERIFY	N = None Y = 13 second retard time, 107 second verification time
6/	PRESIGNAL	N = None Y = 15 second acknowledge period, 3 minute delay
7/	BELL CODING	S = Steady M = March Time T = Temporal C = California
8/	ALARM/TROUBLE REMINDER	N = No Y = 15 seconds for alarms, 2 minutes for troubles
9/	PRINTER/LCD-40	0 = Printer 1 = LCD-40 2 = None

Use the arrow keys to move the cursor. View options by pressing the space bar or ALT + V. When finished, press Escape key to bring up the submenu options.