

Ferrite Bead Installation

PRODUCT INSTALLATION DRAWING

Document 50404 Rev A
Part Number 50404-A
ECN 95-548 12/14/95


12 Clintonville Road.
Northford, CT 06472


Overview

The Ferrite Bead supplied with this Fire Alarm Control Panel/Power Supply is used for RF filtering. Installation of the Ferrite Bead is required to conform with Compatibility Directive 89/336/EEC for European Communities (EU requirements).

Installation

Install the Ferrite Bead—making sure to wrap the neutral and hot wires twice around the bead—as shown in the illustration.

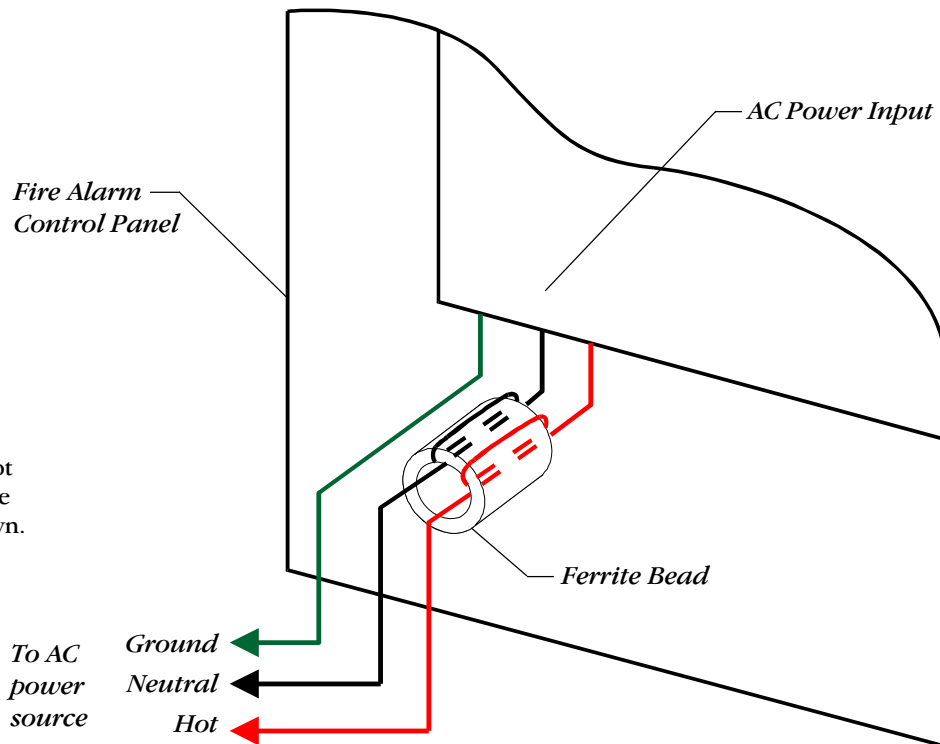

 Wrap the neutral and hot wires through the Ferrite Bead two times as shown.

Installing a Ferrite Bead

