

This document outlines the appropriate placement of the CSFM and MEA labels for the Fire+Lite Universal Digital Alarm Communicator/Transmitter (UDACT-F) when using either the ABS-8RF enclosure, UBS-1F backbox, the CHS-4 chassis, or the MS-9200 panel.

The UDACT-F may be mounted in the MS-9200 panel. When using the UDACT-F with the Sensiscan 2000, the UDACT-F is mounted in the CHS-4 chassis. Alternatively, the UDACT-F may be mounted remotely in the ABS-8RF or UBS-1F enclosures when used with the MS-9200 or Sensiscan 2000. For information on mounting the UDACT-F, refer to your UDACT-F Product Information, Installation, Programming, and Operation Manual, Fire-Lite Document 50049.

Label Placement

The CSFM and MEA labels should be placed on the ABS-8RF, UBS-1F, CHS-4, or MS-9200 as described below:

ABS-8RF

When mounting the UDACT-F in the ABS-8RF enclosure, peel the backing off the provided CSFM and MEA labels and attach to the inside of the ABS-8RF backbox cover.

UBS-1F

When mounting the UDACT-F in the UBS-1F backbox, peel the backing off the provided CSFM and MEA labels and attach them to the inside of the UBS-1F door.

CHS-4

When mounting the UDACT-F in the CHS-4 chassis, peel the backing off the provided CSFM and MEA labels and attach them on top of the chassis.

MS-9200

When mounting the UDACT-F on the MS-9200, peel the backing off the provided CSFM and MEA labels and attach them to the inside the MS-9200 cabinet door.



UDACT-F MEA Label



UDACT-F CSFM Label