

This document outlines the appropriate placement of the CSFM and MEA labels for the ADT UNI•COM Universal Digital Alarm Communicator/Transmitter when using either the ADT-ABS8RF enclosure, ADT-UBS1F backbox, the CHS-4 chassis, or the Unimode 200 panel.



CSFM and MEA Label Placement for the UNI•COM

Document 50434 Rev A 3/12/96 P/N 50434:A ECN 96-068

The UNI•COM may be mounted in the Unimode 200 control panel. When using the UNI•COM with the Unimode II control panel, the UNI•COM is mounted in the CHS-4 chassis. Alternatively, the UNI•COM may be mounted remotely in the ADT-ABS8RF or ADT-UBS1F enclosures when used with the Unimode 200, Unimode II, or Unimode 4-16. *Note: When using the UNI•COM with the Unimode 4-16, the UNI•COM **must** be placed in an ADT-ABS8RF or ADT-UBS1F enclosure.*

For information on mounting the UNI•COM, refer to your *UNI•COM Product Information, Installation, Programming, and Operation Manual*, ADT Document 50075.

Label Placement

The CSFM and MEA labels should be placed on the ADT- ABS8RF, ADT-UBS1F, CHS-4, or Unimode 200 as described below:

ADT-ABS8RF

When mounting the UNI•COM in the ADT-ABS8RF enclosure, peel the backing off the provided CSFM and MEA labels and attach to the inside of the ADT-ABS8RF backbox cover.

ADT-UBS1F


When mounting the UNI•COM in the ADT-UBS1F backbox, peel the backing off the provided CSFM and MEA labels and attach them to the inside of the ADT-UBS1F door.

CHS-4

When mounting the UNI•COM in the CHS-4 chassis, peel the backing off the provided CSFM and MEA labels and attach them on top of the chassis.

Unimode 200

When mounting the UNI•COM on the Unimode 200 panel, peel the backing off the provided CSFM and MEA labels and attach them to the inside the Unimode 200 cabinet door.

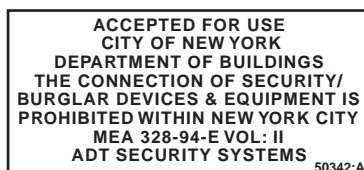

UNI•COM MEA Label



UNI•COM CSFM Label

