

Keltron 95M3158 TTM-RPS

1. Terminals 7 and 8: Remote station alarm/trouble inputs.
2. Terminals 9 and 10: Sprinkler supervisory input.


CAUTION!

For reasons of wiring diagram clarity, terminal designations of Keltron modules are not shown in actual order. Follow Keltron manual and module markings for exact terminal locations to prevent severe module damage!

MPS-400 with Keltron RCVR/XMTR Wiring Diagram

50812 Revision A1
March 5, 1999

ECN 99-107

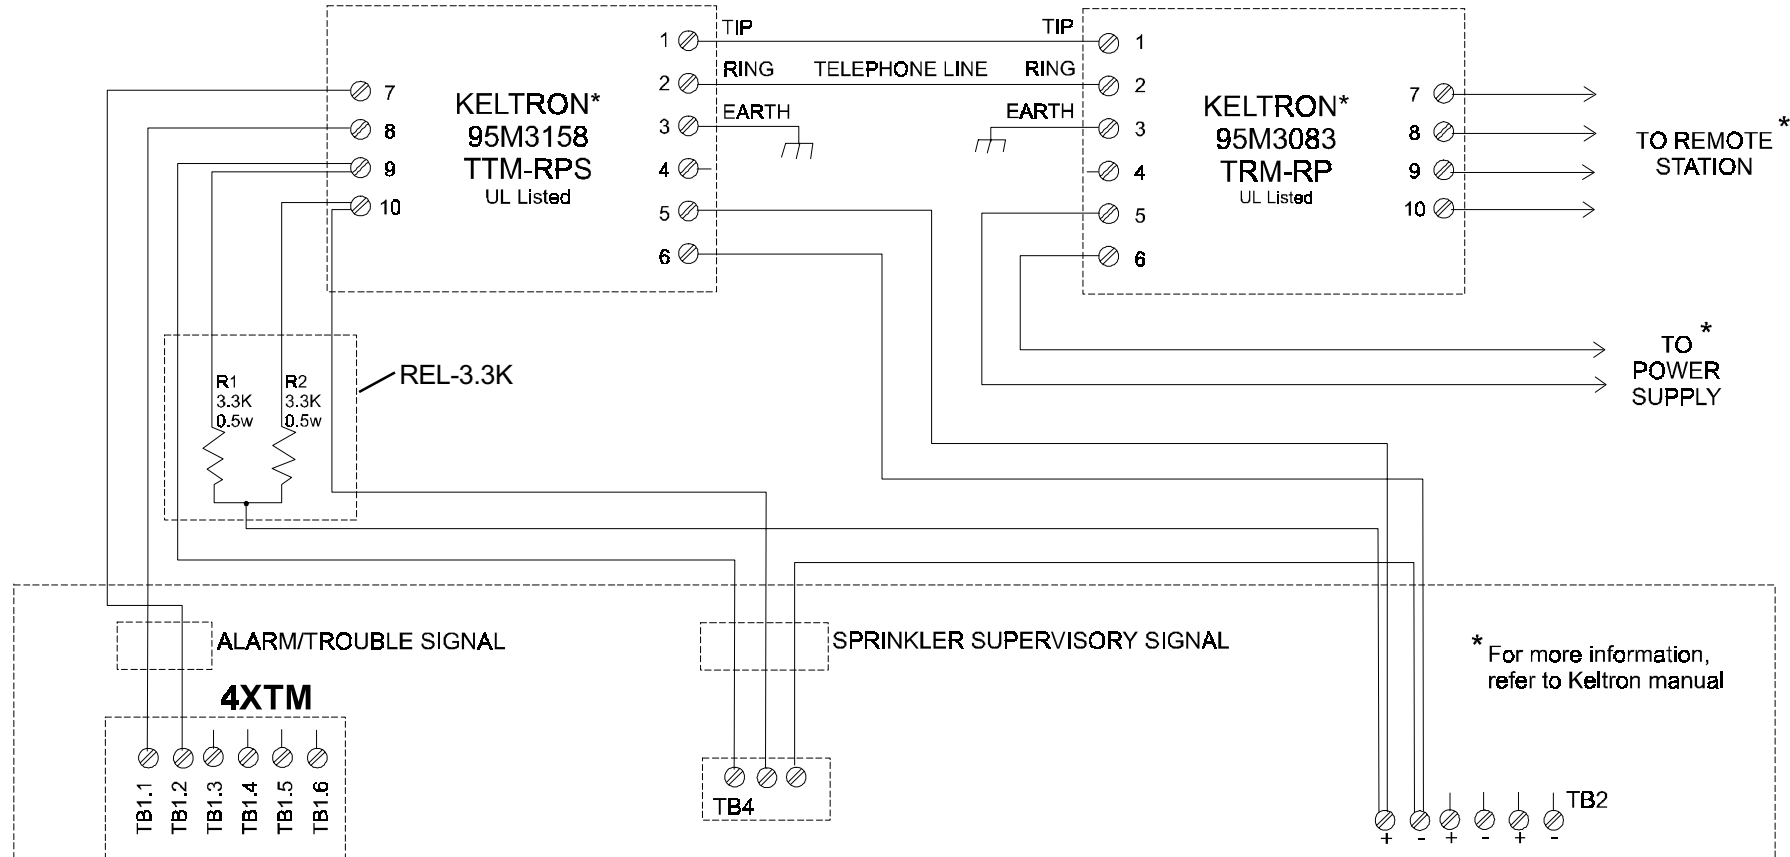

NOTE: Cut TBL Jumper on 4XTMF module to send alarm/trouble signals from the same pair of terminals
TROUBLE = NO SIGNAL

Note: Switch S4 on MPS-400 must be in the **down** position.

* For more information, refer to Keltron manual

MPS-400

PANEL	TB	+	-
AFP-400	2	1	2
AFP-300			