

FC-10C Control Communicator

Operating Instructions

NORMAL - Only the GREEN A.C. POWER LED is on. All other LEDs are off.

PANEL - The key to open the panel can be found at this location.

WHEN AUDIBLE DEVICES ARE SOUNDING - FOR AN ALARM:

- 1) Evacuate the protected area.
- 2) Notify the monitoring service and/or the Fire Department immediately. Tell them briefly what happened and what your current status is.
- 3) If the Fire Department is responding, be prepared to provide directions to arriving firefighters.

FOR TROUBLE ONLY:

- 1) Notify the monitoring service and/or Fire Department if this panel is connected to either one, and tell them what is happening.
- 2) Silence audible devices by pressing the SILENCE key. The yellow SYSTEM TROUBLE LED will remain on. Contact authorized service personnel immediately!

To return to normal after an alarm

- 1) Do not enter the protected area until safe to do so.
- 2) Clear all initiating devices. Smoke detectors will not reset if there is still smoke in the area.
- 3) Reset the control panel (press the RESET key).

Power failure or brownout - AC POWER LED will go out for AC fail or brownout and the TROUBLE LED will come on. SYSTEM TROUBLE LED and the panel buzzer will turn on for either condition and any other audible trouble devices will sound. Contact authorized service personnel immediately. (Refer to Local Service Representative block below).

Alarm Silencing - Alarm Signaling Circuits may be silenced by pressing the SILENCE key. The SILENCE LED will turn on. Subsequent alarms will reactivate circuits. Press the RESET key to clear the silenced condition.

NOTE: ALARM SILENCE may be disallowed for one minute if programmed (see manual).

WARNING!

Do not allow trouble conditions to remain logged in the system. Protection that the system offers has been compromised, or eliminated when a trouble condition exists.

Frame and mount adjacent to the control panel.

DISPLAYS

A n	Alarm Zone # 'n' (n = 1 - 10)
AC	AC Loss
bELn	Notification Appliance Circuit # 'n' Fault (n = 1 - 4)
d bn	Bell 'n' Disabled (n = 1 - 4)
d n	Zone 'n' Disabled (n = 1 - 10)
drLL	Fire Drill
E n	Zone 'n' Enabled (n = 1 - 10)
F BS	Annunciator Bus Fault
F A	Annunciator Fault
F E	Earth Fault
F n	Trouble Zone # 'n' (n = 1 - 10)
F P	Printer Fault
Lo b	Low Battery
no b	No Battery
no 1	Primary Phone Line Voltage Low
no 2	Secondary Phone Line Voltage Low
PH 1	Primary Number Communications Fault
PH 2	Secondary Number Communications Fault
PA n	Processing Monitoring Alarm Zone 'n'
rES	System Reset
Si Ln	NAC # 'n' Silenced (n = 1 - 4)
SU n	Supervisory Alarm Zone # "n" (n = 1 - 10)

INSTRUCTIONS

To clear alarm indications in panel after cause of alarm has been corrected, press:

RESET

To turn off the local panel sounder and silenceable notification appliance circuits, press:

SILENCE

To perform a fire drill, press:

MODE (3) (7) (4) (5) **ENTER STORE**

The RESET key restores the panel to normal.

To test the lamps, press:

MODE (5) (2) (6) (7) **ENTER STORE**

Refer to the FC-10C Technical Manual P/N 51057 for more details.

Local Service Representative

Name: _____

Address: _____

Telephone: _____