

PRN-5 Printer
Transient Protection Instructions
51331 Revision A
3/13/00 ECN 00-122

Connect EDCO Part #SRS-232-25 to the serial port on the back of the PRN-5. Screw it to the printer. Crimp the lug onto the end of the green wire and connect to earth ground.

Screws and lug provided.

