


Keltron 95M3158 TTM-RPS

1. Terminals 7 and 8: Remote station alarm/trouble inputs.
2. Terminals 9 and 10: Sprinkler supervisory input.

CAUTION!

For reasons of wiring diagram clarity, terminal designations of Keltron modules are not shown in actual order. Follow Keltron manual and module markings for exact terminal locations to prevent severe module damage!

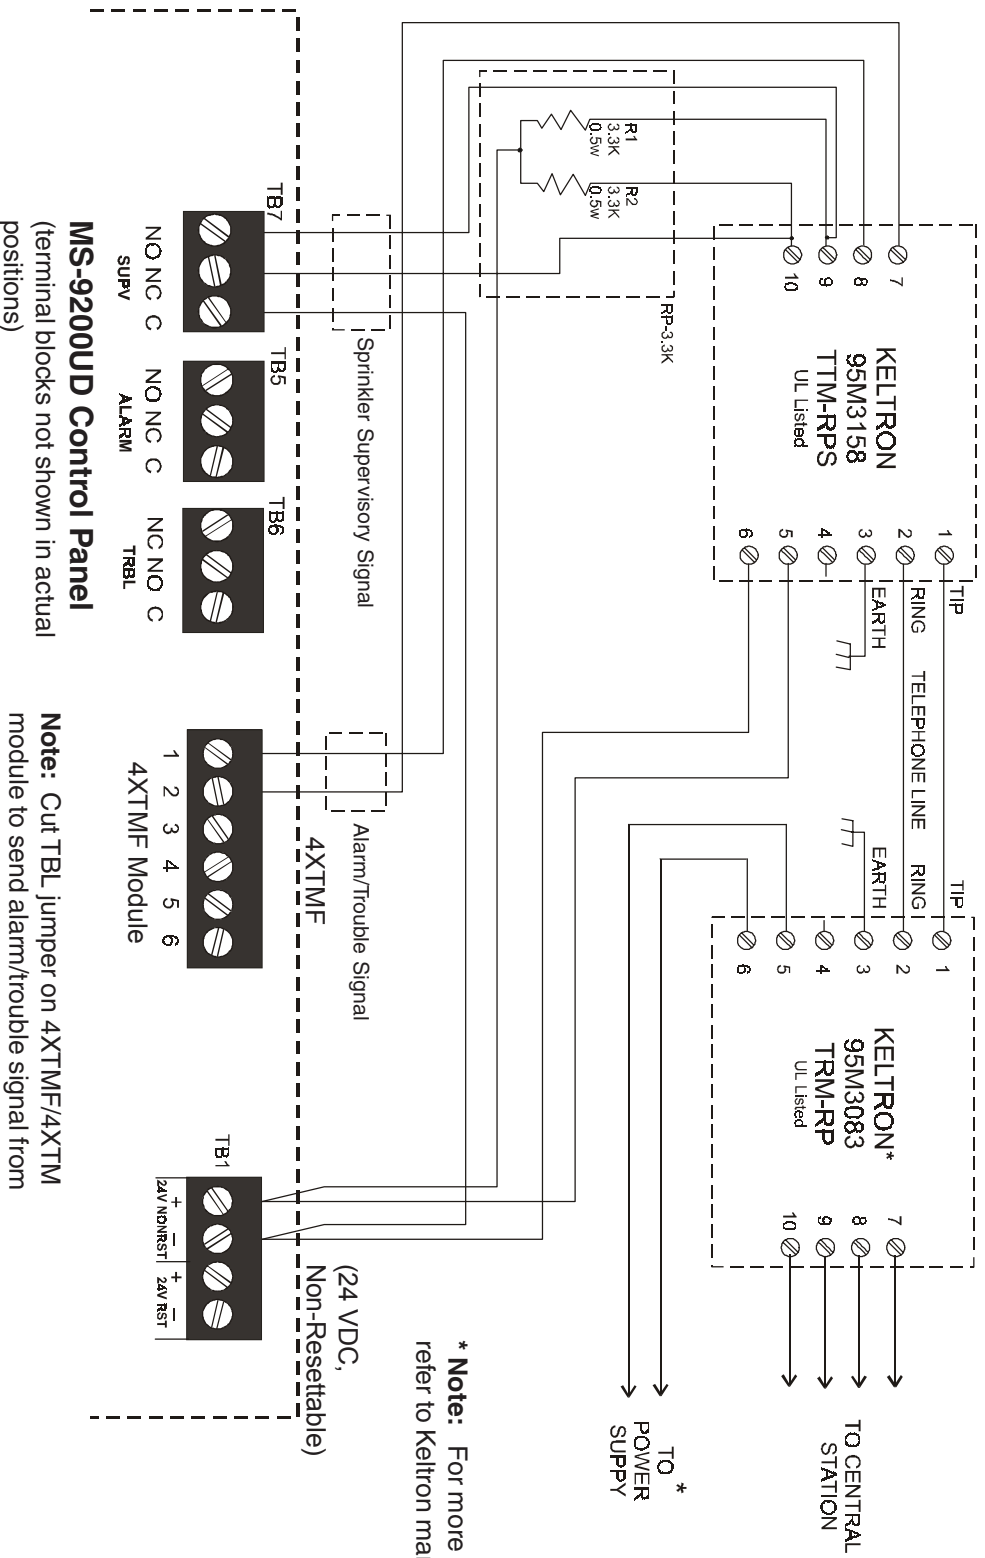

* Note: For more information, refer to Keltron manual.

MS-9200UD Control Panel
(terminal blocks not shown in actual positions)

Note: Cut TBL jumper on 4XTMF/4XTM module to send alarm/trouble signal from the same pair of terminals.

MS-9200UD
with Keltron RCVR/XMTR
Wiring Diagram

52071 Revision A
December 13, 2002

ECN 02-622