

# SUMMARY OF SYSTEM COMMANDS

<b>Event Logging Commands</b> (Alpha keypad only)	Event Log Display = Code+[#] + 60 Event Log Print = Code + [#] +61 (Installer Only) Clear Event Log = Code + # + 62 (Installer Only)
<b>Wireless System Commands</b>	House Id Sniffer Mode=Code + [#] + 2 (Installer Only) Transmitter Id Test= Code + [#] + 3 (Installer Only) Go/No Go Test=Code + 5 (Test Key)
<b>User Code Commands</b> (Alpha keypad only)	Add A User Code=User Code + 8+ New User Number + New User's Code Change A Code=User Code + 8 + User Number + New User's Code Delete A User's Code=Your User Code + 8 + User Number To Be Deleted + Your Code Again View User Capability= User's Code + * + * Set Real-Time Clock (Installer, Master Only)=Code + # +63
<b>Arming Functions</b>	Arming Away                    Enter Code + Away [2]. Arming Stay                    Enter Code + Stay [3]. Arming Instant                Enter Code + Instant [7]. Arming Maximum              Enter Code + Maximum [4]. Quick Arm                      Use # Key Instead Of User Code Followed By Any Of The Above Arming Mode Keys.
(Alpha keypad only)	Global Arming                If Enabled For The User, The Keypad Will Display A Prompt. Answer The Prompted Questions Disarming                      Enter Code + Off [1]. Bypassing Zones              Enter Code + Bypass [6] + Zone Number. To Automatically Bypass All Faulted Zones, Use
(Alpha keypad only)	Quick Bypass                "Quick Bypass" Method: Enter Code + Bypass + [#]. Chime Mode                    Enter Code + Chime [9]. To Turn Chime Mode Off, Enter Code + Chime Again.
(Alpha keypad only)	Partition Goto=              User Code + * + Partition Number 0-8 GOTO Home Partition=User Code + * + 0 Panics                         *+1 Zone 95 (A Key) *+# Zone 99 (B Key) #+3 Zone 96 (C Key)
(Alpha keypad only)	View Downloaded Messages= Press 0 For 5 Seconds Display All Zone Descriptors=Press * For 5 Seconds Display User Self Help= Hold Any Key For 5 Seconds
<b>Programming Commands</b>	Site Initiated Download=User Code + # + 1 Direct Wire Download Enable= User Code + # + 5 Enter Program Mode=Installer Code + 800 Exit Program Mode=*99 Or *98
<b>Scheduling Commands</b> (Alpha keypad only)	Installer Programmed Schedule Events=Installer Code + # + 80 Temporary Schedule Editing=User Code + # + 81 (Installer, Master, Manager Only) Extend Closing Window=User Code + # + 82 (Installer, Master, Manager Only) End User Output Device Programming=User Code + # + 83
<b>Output Device Control</b> (Alpha keypad only)	Activate Output Device As Programmed =User Code + # + 71 Activate Output Device As Programmed =User Code + # + 72 Activate Access Relay For Current Partition=User Code + 0 Activate Output Device Manually=User Code + #70.