

# FA560KP

The FA560KP is an easy-to-operate keypad that uses customized zone descriptions to eliminate confusion. For example, a message such as “Fault 06 John’s Bedroom Window” lets you know that John’s window needs to be closed or bypassed before the system can be armed.

## Features of the FA560KP:

- LCD Window:** This two-line, 32 character Liquid Crystal Display shows all system messages.
- OFF Key:** Disarms the burglary portion of system. It also clears the display after an alarm.
- Maximum:** Arms both perimeter and interior burglary systems and removes entry delay.
- INSTANT Key:** Arms perimeter, but not interior, burglary system and removes entry delay.
- READY Key:** When pressed before arming, all faulted protection zones are displayed.
- Internal Sounder:** Makes sounds to distinguish between burglary, fire, chime, entry and check conditions.
- # Key:** Permits system arming without entering security code.
- CODE Key:** Allows entry of additional codes for alternate users.
- Armed Indicator:** Lights when system is armed.
- Ready Indicator:** Lights when system is ready to arm.
- Keys 0-9:** Used to enter access codes.
- AWAY Key:** Arms both perimeter and interior burglary systems.
- STAY Key:** Arms perimeter burglary system but not interior burglary protection.
- TEST Key:** Tests system and sounder.
- BYPASS Key:** Temporarily removes selected protection points from the system.
- CHIME Key:** Used to enable the system to sound a tone when there is an entry through a perimeter zone.
- Zone Directory:** Slide-out card lists system zones.



*Feel at ease*  
with First Alert Professional

- **Compatible with all mid-range and high-end First Alert Professional systems**
- **Customized phrases to explain system status**
- **Backlit keys and display**
- **Four separate function buttons for one-touch access**
- **Built-in speaker**
- **Built-in “on-screen” user’s manual (on some systems)**