


## User Guide

This document provides Operating Instructions for your keypad's voice features. Refer to your security system User Guide for all other security system functions and operating procedures.

### Message Center

The FA560VKP keypad features a voice message center that lets you record and playback one message.

- The message can be up to 2.5-minutes long
- The message remains in the keypad's memory until a new message is recorded.
- The volume control of the message is adjustable.
- Refer to the procedures below when using the Message Center functions.

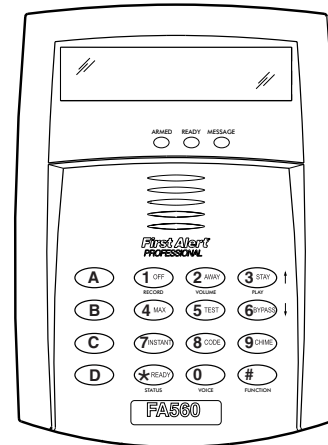

**To record a message:** Press  +  +  keys.  
FUNCTION + VOICE + RECORD

*The red MESSAGE indicator will light, indicating recording in progress.*

**Note:** A message cannot be recorded during the Exit Delay period.

**To end recording:** Press  key.  
RECORD

*The red MESSAGE LED will flash indicating a message waiting to be played. After the message is played once, the MESSAGE LED will go out.*

**To play a message:** Press  +  +  keys.  
FUNCTION + VOICE + PLAY

*The recorded message plays and the red MESSAGE LED turns off. The recorded message will remain in memory until a new message is recorded.*

**To adjust the volume:** Press  +  +  keys,  
FUNCTION + VOICE + VOLUME

then press the desired volume control key [3] ↑ (up) or [6] ↓ (down).

**Note:**

- Adjusting message volume **also** adjusts status volume. **Volume cannot be adjusted while playing a message.**
- Each time you enter the command to adjust the volume, the word "CHECK" will be heard to verify the current setting.

## Chime and Status Features

### Voice Chime

You can set the keypad(s) to announce faulted (opened) entry/exit or perimeter zones whenever the control panel's Chime mode is on by turning on the Voice Chime mode.

**To turn Voice Chime On/Off:** Press the  +  +  +  keys.  
FUNCTION VOICE VOLUME

*When on, any faulted zone(s) causes a voice status announcement, chime, and display. When off, the sounder will still provide chime when the control's Chime mode is on.*

### Voice Status

You can use the STATUS [\*] key to announce system status and display any system and/or zone faults (if they exist) by first turning on the Voice Chime mode (see above). When Voice Chime mode is on, pressing the STATUS [\*] key displays and announces current system status and zone descriptors (programmed by your installer) of faulted zones. If zone descriptors are not programmed, the respective faulted zone numbers are announced.

**To Announce Status:** Press the  +  +  keys once. (Voice Chime mode must be "on"; see above.)  
FUNCTION VOICE STATUS

*The respective system status is announced (e.g. "Disarmed Ready to Arm" or "Disarmed Not Ready to Arm").*

**Note:** Status cannot be announced during the Exit Delay period.

**To Announce Faults:** Press the  key a second time within 10 seconds of the first press.  
STATUS

*Up to 3 faulted zones are announced with their zone descriptors, if programmed. If zone descriptors are not programmed, the respective zone numbers are announced.*



149 Eileen Way, Syosset, N.Y. 11791  
Copyright © 2001 PITTMAY CORPORATION



K0022-2UG 8/02