



FA570RF Keypad/Transceiver

User Guide

KEYPAD DISPLAYS AND LEDS

The FA570RF has the following features:

- Large, 2-line, 32-character alpha-numeric LCD display. Display backlighting turns on after any key press and automatically times out after approximately 30 seconds without a key press. Time out time is dependent on the setting of the control panel.
- 12 Function Keys located behind a decorative door that swings down to provide access plus four Special Function Keys (A, B, C, D) are continuously backlit.
- System numerals, imprinted in large type on the keys for easy identification. System functions appear below the keys on the keypad.

The following table shows the LEDs and their functions:

LED	Function
ARMED (Red)	Lights when the system is armed in any mode.
READY (Green)	Lights when the system is ready to be armed (no zone faults are present).

FUNCTION KEYS AND LABELS

The function keys are continuously backlit for ease of use. (Check the User's Guide that accompanies the control panel for detailed instructions on the use of these keys.)

Function Keys - The function keys include keys for panic alarm activation. The panic alarms are activated by pressing key pairs [1] & [*], [3] & [#], [*] & [#].

How these panic keys function and the type of panic alarms they produce is determined by the control panel's capability and programming. (Check with your installer for the availability and programming of these panic keys.)

SPECIAL FUNCTION KEYS - These are the four keys located to the left of the numeric keys (see Figure 1). The keys may be programmed by your installer for panic alarms or other special functions such as single-button arming. (Check with your installer to see which options are available with your system.)




Each of the four Special Function Keys must be held down for at least two seconds to activate.

A set of adhesive labels with typical panic symbols is provided. Place the appropriate label in the indented area on each key, so that you can easily identify each key's function.

SOUNDER

The built-in speaker has the following functions:

- Produces warning sounds during alarm and trouble conditions, and also during entry/exit delay periods. Provides acknowledgment tones when keys are pressed, and confirmation tones for successful command entries.

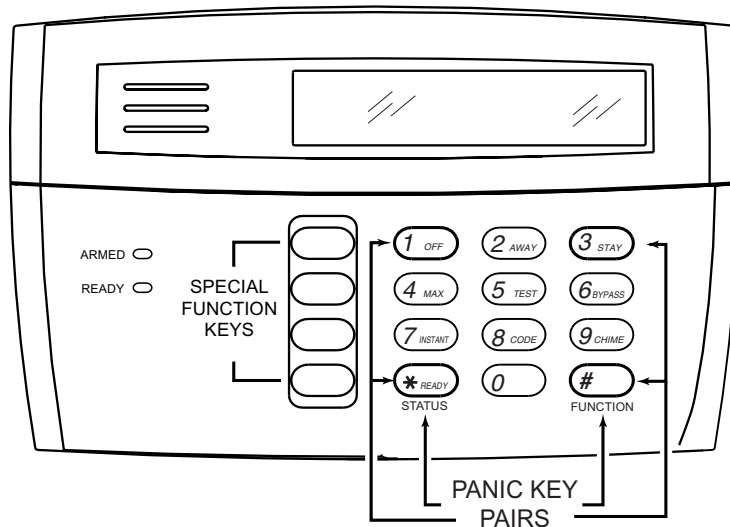

FA570RF-003-V0

Figure 1. FA570RF Keypad/Transceiver (front door removed)

TROUBLESHOOTING

The error messages listed in the following table cause the keypad to produce a single ding tone. The table describes the error messages and the corrective actions.

Display	Corrective Action
Low Bat (with Zone No.)	1. Replace the battery in the wireless transmitter. 2. Replace the transmitter if the wireless transmitter does not have a replaceable battery
Open Ckt	Contact your Installer.
Check 100	Contact your Installer.



149 Eileen Way, Syosset, NY 11791
www.firstalertprofessional.com
Copyright © 2006 Honeywell International Inc.



K14031UGV1 8/06 Rev. A