

..... **FA701CKP**
FA701CVKP
TouchCenter Keypads

User's Guide



Table of Contents

ABOUT THE TOUCHCENTER.....	4
Introduction	4
The TouchCenter Interface	4
Navigating through the TouchCenter	5
About Your Home Screen	5
TouchCenter "Arming" Screen	7
SYSTEM OVERVIEW	9
Introduction to Your System.....	9
Burglary Protection.....	9
<i>Partitions.....</i>	<i>9</i>
<i>Zones.....</i>	<i>9</i>
<i>Entry/Exit Delays.....</i>	<i>10</i>
<i>Alarms.....</i>	<i>10</i>
<i>Memory of Alarm.....</i>	<i>10</i>
Fire Protection.....	10
User Codes.....	11
Extended Functionality.....	11
Safe Mode.....	11
SECURITY SYSTEM OPERATION	13
Introduction to Security System Operation.....	13
How to Arm the System	13
How to Arm Multiple Partitions	15
How to Display Faults.....	16
How to Bypass Zones.....	18
How to Remove Bypassed Zones	21
How to Disarm the System.....	23
How to Check the Status of Other Partitions	26
How to Send Emergency Messages.....	28
How to View the Event Log	29
FIRE ALARM SYSTEM OPERATION.....	31
Introduction to Fire Alarm System Operation.....	31
In Case of Fire Alarm.....	31
Silencing and Clearing a Fire Alarm	31
USER CODE SETUP	33
Introduction to User Code Setup	33

Table of Contents (Cont'd)

Authority Levels.....	33
How to Access User Setup	34
How to Add a User	35
How to Delete a User.....	39
How to Edit a User.....	40
ADVANCED SYSTEM FEATURES	42
Introduction to Advanced System Features.....	42
Console Emulation Mode	42
How to Enter Console Emulation Mode	42
VOICE MESSAGES (FA701CVKP ONLY).....	44
Introduction to Recording and Retrieving Messages.....	44
Recording a Voice Message	45
Retrieving and Deleting a Voice Message	46
SUMMARY OF TOUCHCENTER LED OPERATION	47
TouchCenter LED Operation.....	47
TOUCHCENTER SETUP	48
How to Access TouchCenter Setup Options	48
How to Access Setup.....	48
How to Adjust the Touch Screen Contrast	50
How to Adjust the Volume.....	51
How to Select Screen Backlight Off Activation Time.....	52
How to Select Homepage After Time.....	54
How to Set the Time and Date	56
TOUCHCENTER OPERATING MODES	61
Operating Modes (Chime, Voice, and Voice Chime).....	61
How to Access Operating Modes	61
MAINTAINING YOUR SYSTEM	63
How to Clean your TouchCenter	63
Routine Care.....	64
GLOSSARY.....	65

About the TouchCenter

Introduction

Congratulations on your ownership of a First Alert Professional Security System. You've made a wise decision in choosing it, for it represents the latest in security protection technology today.

This security system offers you burglary protection and may provide fire and emergency protection. To realize the full potential of the system, it is important that you feel comfortable operating it. Your system may consist of:

- One or more FA701CKP (Color) and/or FA701CVKP (Color and Voice) TouchCenter Keypads
 - One or more other keypads for system control
 - Various sensors for perimeter and interior burglary protection, plus a selected number of strategically placed smoke or combustion detectors
 - Lighting/switching devices.
-

UL The home lighting feature has not been evaluated by UL.

The system uses microcomputer technology to monitor all zones, and provides appropriate information for display on the TouchCenter and/or other keypads used with the system. Your system may also have been programmed to automatically transmit alarm or status messages over the phone lines to a central alarm monitoring station.

The TouchCenter Interface

The TouchCenter is an intuitive, graphical interface that combines security and optionally, home lighting control. With clear, simple controls on a touch-screen interface, the entire family will find the TouchCenter both easy to learn and easy to use.

As a security and home-automation interface, the TouchCenter may be used for:

- Quick and easy security system operation
 - Message storage and retrieval (FA701CVKP ONLY)
 - Home lighting control
-
-

About the TouchCenter (Cont'd)

Navigating through the TouchCenter

Navigation through the TouchCenter typically begins from the "Home" screen. This is the TouchCenter's main default screen (starting screen) and is the first screen you will see when the TouchCenter is powered up and initialized. It is from this screen that you will select from the main menu. Once you have made your selection, you will navigate through various sub-menus by touching buttons or icons to perform the function you desire.

About Your Home Screen

Your "Home" screen is the gateway to your TouchCenter Keypad. From this screen you can:

- control your security system, and optionally,
- control your message center (FA701CVKP ONLY), and
- control the premises lighting.

UL The home lighting feature has not been evaluated by UL.

Your "Home" screen is displayed most of the time, except when you select another screen option.









- The background and buttons shown on the "Home" screen in this manual are for example only. Your system installer may have changed the actual background and buttons shown on your "Home" screen.
 - The Message button applies to the FA701CVKP. This button is not on the FA701CKP.
-

About the TouchCenter (cont'd)

Navigation Icon Descriptions

To aid in the navigation of the TouchCenter, a set of user-friendly icons has been provided. The appearance, function, and location of these icons is described below:


ICON	LOCATION	FUNCTION
	"Home" screen	Allows you to record and retrieve voice messages. (FA701CVKP Only)
	"Home" screen	Allows you to turn certain devices on and off (if installed and programmed by your installer.)
	"Home" screen	Accesses "Arming" screen. Note: The lock symbol and lock color in the button indicates security system status. Unlocked and green – system disarmed Unlocked and yellow – system disarmed and a system trouble exists Locked and red – system armed
	Upper left corner of most screens	Returns you to the TouchCenter "Home" screen. This icon is called the Home button within the text of this document.
	Upper right corner of most screens	Reverts to the last screen viewed. This icon is called the Back button within the text of this document.
	Lower right corner of screen	Displays Emergency functions (as programmed by your installer). This icon is called the Panic button within the text of this document. Note: This icon is displayed and active on all screens except while in the Clean Screen mode and during an LCD Display test in Diagnostics.

About the TouchCenter (Cont'd)

TouchCenter "Arming" Screen

From the "Home" screen, press **SECURITY** to access the TouchCenter "Arming" screen. Use this picture and the table that follows to become familiar with the TouchCenter security functions.



Note: The Voice Status Icon () shown in the above illustration indicates that the TouchCenter is a FA701CVKP. This button causes the TouchCenter to announce system status if depressed at least 10 seconds following its last depression. Note that Voice must be enabled for this button to function correctly during an alarm condition.






 



ITEM	FUNCTION
AWAY	Press this button to arm when no one will be staying on the premises. When armed in AWAY , the system will sound an alarm if a protected door or window is opened, or if any movement is detected inside the premises. You may leave through the entrance door during the exit delay period without causing an alarm. You may also re-enter through the entrance door, but must disarm the system with your User Code within the entry delay period or an alarm will occur.
STAY	Press this button to arm when you are staying home, but might expect someone to use the entrance door later. When armed in STAY , the system will sound an alarm if a protected door or window is opened, but you may otherwise move freely throughout the premises. Late arrivals can enter through the entrance door without causing an alarm, but they must disarm the system within the entry delay period or an alarm will occur. NOTE (FA701CVKP only): On some residential systems, if you press the Voice Status Icon while armed in the Stay Mode, the exit delay time will restart (if the feature was enabled by your installer).

About the TouchCenter (cont'd)

ITEM	FUNCTION
NIGHT	Press this button to arm when you are staying home and do not expect anyone to use the entrance door. <i>Your installer may have configured NIGHT Mode differently; have him/her describe the actual settings of this mode.</i>
Multi-Partitions	Check this circle when you want to arm more than one partition. When Multi-Partitions is checked, all partitions within the system can be armed at one time (if the user is so authorized). When the Arm Multi-Partitions circle does not contain a check mark, each partition must be armed individually. Note: This option may not be shown for some single partition systems.
MORE CHOICES	Press this button for more Security, Lighting, and TouchCenter setup features.

System Troubles

The “Arming” screen also displays an Icon(s) if a system trouble(s) occurs. The system trouble Icon is displayed to the left of the Panic button. If a trouble Icon is shown, contact your alarm company. The following Icons may be shown as applicable to your system:

ICON	MEANING
	AC Loss – The system is not receiving AC power.
	Bell Failure – The system bell or siren has a problem. Note: This Icon will be displayed when interfacing with residential panels only.
	Expander Failure – The system has a failure in an expansion module.
	Low Battery – The system battery, that powers the system during an AC power loss, is low.
	LRR Supervision Failure – The Long Range Radio or Alarmnet –I used to communicate with the central station has a supervision failure. Note: This Icon will be displayed when interfacing with residential panels only.
	Pager Failure – The system cannot communicate with an assigned pager.
	Phone Line 1 Failure – The system is not able to communicate with the central monitoring station over the primary phone line.
	Phone Line 2 Failure – The system is not able to communicate with the central monitoring station over the secondary phone line.
	Wireless Failure – The system is not able to communicate with its wireless devices.

System Overview

Introduction to Your System

This system offers you burglary protection and may offer fire and emergency protection. Monitoring is accomplished with various contact and motion sensors for perimeter and interior burglary protection, plus the system may have strategically placed smoke, heat, or combustion detectors.

Burglary Protection

The burglary protection portion of your system must be turned on or "armed" before it will sense burglary alarm conditions. Your system provides three modes of burglary protection: Away, Stay, and Night, and even allows you to "bypass" selected zones of protection while leaving the rest of the system armed (e.g. this enables you to arm the system but leave upper-story windows open.)

The system also provides a Chime mode (FA701CKP and FA701CVKP) and Voice mode (FA701CVKP), for alerting users to the opening and closing of doors and windows even while the system is disarmed.

Partitions

This system may be configured to arm and disarm more than one area, each as if it had its own control. These areas are called partitions. Partitions are used when the user wants to disarm certain areas while leaving other areas armed, or to limit access to certain areas to specific individuals. Each user of the system can be authorized to operate all or only some partitions, and can be given different privileges in each. Information about Partitions is presented later in this document.

Zones

Your system's sensing devices have been assigned to various "zones." For example, the sensing device on your Entry/Exit door may have been assigned to zone 01, sensing devices on windows in the master bedroom to zone 02, and so on. These numbers will appear on the display, along with an alpha descriptor for that zone (if programmed), when an alarm or trouble condition occurs.

System Overview (cont'd)

Entry/Exit Delays

Your system has preset time delays, referred to as exit delay and entry delay. Whenever you arm your system, exit delay gives you time to leave through the designated exit door without setting off an alarm. Exit delay begins immediately after entering any arming command, and applies to all modes of arming protection. If programmed, a slow beeping will sound throughout the exit delay period. Additionally if programmed, a rapid beeping may sound during the final 10 seconds of the exit delay period.

Note: FA701CVKP Only – On some systems, pressing the Voice Status Icon restarts the exit delay. Refer to your control panel User Guide to see if this is applicable on your system.

Entry delay gives you time to disarm the system when you reenter through the designated entrance door. But the system must be disarmed before the entry delay period ends, or an alarm will occur. The keypad will beep during the entry delay period, reminding you to disarm the system. Ask your installer about the delay times programmed into your system.

Alarms

When an alarm occurs, the TouchCenter (and any other keypads) and external sounders will sound, and the zone(s) causing the alarm are displayed. If your system is connected to a central monitoring station, an alarm message will also be sent. To stop the alarm sounding, simply disarm the system.

Memory of Alarm

When an alarm condition occurs, the number(s) of the zone(s) that caused the problem are displayed, along with the type of alarm. These remain displayed until cleared.

Note: If you change screens, the alarm in memory can be viewed and cleared by selecting the Display Faults button on the Arming Screen.

Fire Protection

The optional fire protection portion of your security system (if used) is always on and will sound an alarm if a fire condition is detected.

Note: If a fire or smoke detector develops a low battery, a “Fire Maintenance” message is displayed. To determine which zone is causing the problem, go to “Display Faults” to determine which zone has the low battery indication.

System Overview (Cont'd)

User Codes

Each user must be assigned a name with a corresponding 4-digit user code in order to gain access to various features and functions. Users for the system are programmed in a central user setup location that provides the specific questions for authorization level, partition assignment, and RF button assignment.

Extended Functionality

Extended functions are advanced functions that can be accessed through a standard alpha keypad or through the console emulation mode on your TouchCenter touch screen. Refer to your Control Panel User Guide for these features.

Safe Mode

The TouchCenter contains a Safe Mode of operation. In the rare event that the TouchCenter cannot successfully communicate in its graphic mode with the control panel, the Safe Mode is a backup mode that ensures that you can communicate with your system. In this mode, the TouchCenter operates much like a standard non-graphic keypad so that you can control your system until the problem is corrected.

If this situation occurs, the TouchCenter presents you with a message of “Problems detected. Start Keypad in Safe Mode?” and requests a “Yes” or “No” response. If you answer with “Yes”, the TouchCenter will go into the Safe Mode. If you answer with “No”, the TouchCenter will try communicating with the panel again. After 5 consecutive times of receiving no response, the TouchCenter will enter the Safe Mode automatically.

Note: Use care when providing the “Yes” or “No” response. Touching the screen outside the prescribed area may cause the background to come to the front. If this occurs, the Yes/No message that disappeared will time out in 30 seconds even though it is not visible. Then the keypad will reset into the Normal Mode (or Safe Mode if this is the third time that the warning message appeared).

While in the Safe Mode, the Home screen will display the Security button, Panic Button, and a message at the bottom of the screen as shown below:



! SAFE MODE !

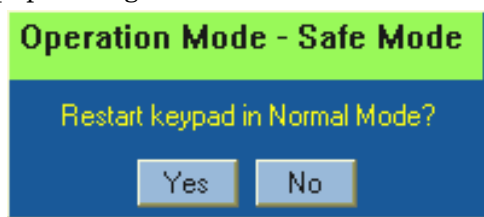
System Overview (cont'd)

Note that this is a limited mode of operation. While in this mode:

- You can use the Security button to access the Console Emulation Mode of operation to try to clear your faults, disarm the system, or enter additional Alpha Keypad commands specified in you panel User Guide. You can perform almost all functions that you can perform from a standard non-graphic alpha keypad.
- You can depress the “Panic” key and generate Emergency Messages as defined in the panels home partition for this TouchCenter.
- The Armed and Ready LEDs on the front of the TouchCenter will indicate the TouchCenter’s home partition status. The Message (FA701CVKP) or Trouble (FA701CKP) LED is not active in the Safe Mode.
- The Chime mode will function in the Safe Mode: however, you will not have Voice, Voice Chime, or Message capability if using the FA701CVKP.
- When in Safe Mode, the lock on the Security button on the Home screen will always be shown in the unlocked position. Refer to the Armed LED for the true armed status of your system.
- When an alarm occurs in the Safe Mode, it is displayed on the Console mode screen only. It will not be shown on the Home screen and the lock on the Home screen will not change color – it will always be shown in yellow.

To Exit the Safe Mode:

1. Press the ! SAFE MODE ! bar. You will be presented with the following popup message:



2. Select “Yes” to return to the Normal Mode of operation. The TouchCenter will reset and normal operation will return as long as the original conditions that caused the entry into Safe Mode do not still exist.

Security System Operation

Introduction to Security System Operation

You can arm your system in one of three arming modes: Away, Stay, and Night. The following table lists the three different arming modes and the results of each.

FEATURES FOR EACH ARMING MODE				
Arming Mode	Exit Delay	Entry Delay	Perimeter Armed	Interior Armed
Away	Yes	Yes	Yes	Yes
Stay	Yes	Yes	Yes	No
Night*	Yes	Yes (set for Away or Stay Mode) No (set for Instant or Maximum Mode)	Yes	Yes (set for Away or Maximum Mode) No (set for Stay or Instant Mode)

*Your installer may have configured Night Mode differently; have your installer write the actual zone settings above.




How to Arm the System

Arming the system in any mode is performed in the same way, as described below.

Note: Close all perimeter windows and doors before arming.

1. From the "Home" screen, press the **SECURITY** button. The "Arming" screen is displayed.

Security System Operation (cont'd)

SCREEN	ACTION
 <p>Ready To Arm</p> <p>AWAY STAY NIGHT MORE CHOICES</p> <p>Arm Multi-Partitions</p> <p>Sat 01/01/00 12:17 AM MAIN H</p>	<p>2. On the "Arming" screen, press the selected arming button.</p> <p>Note: If Quick Arm is Not enabled in your system, you will receive a message to enter your User Code.</p> <ul style="list-style-type: none"> ○ The TouchCenter beeps twice (Away and Night Maximum Modes) or 3 times (Stay and Night Instant Modes) ○ a DISARM button appears ○ a text message appears stating which zones are arming and whether or not there is an entry delay ○ the screen changes to display the remaining exit delay time, and ○ an "open lock" appears next the the arming buttons as follows: Away – Next to the Away button Stay – Next to the Stay button Instant – Next to the Night button Night – Next to the Night button ○ The exit delay time continues to decrement to one. <p>When exit delay time expires, the screen automatically changes to indicate the system is "Armed" and the "lock" next to the button changes color and to a closed lock. The system is now armed in the selected mode.</p>
 <p>44 Secs Remaining</p> <p>AWAY STAY NIGHT MORE CHOICES</p> <p>Perimeter Zones Only Entry Delay Active</p> <p>Arm Multi-Partitions</p> <p>Fri 10/06/00 01:30 AM MAIN H</p> <p>Arming (typical)</p>	
 <p>Armed Stay</p> <p>AWAY STAY NIGHT MORE CHOICES</p> <p>Perimeter Zones Only Entry Delay Active</p> <p>Arm Multi-Partitions</p> <p>Fri 10/06/00 01:27 AM MAIN H</p> <p>Armed (typical)</p>	


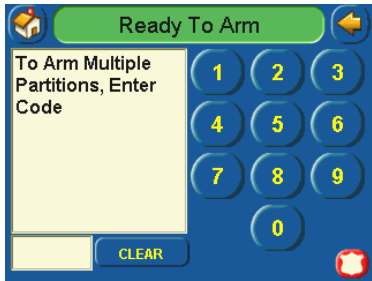
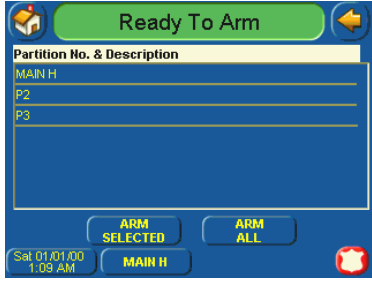
Security System Operation (Cont'd)

How to Arm Multiple Partitions

Note: Some systems may not have multiple partitions and the “Arm Multi-Partitions” button may not be displayed.

To arm multiple partitions:

1. From the "Home" screen, press the **SECURITY** button. The "Arming" screen is displayed.

SCREEN	ACTION
	<ol style="list-style-type: none"> 2. Make certain the Multi-Partitions button is checked. <p><input checked="" type="checkbox"/> Arm Multi-Partitions</p> <ol style="list-style-type: none"> 3. Press the appropriate arming mode button. <p>Note: If any zones are bypassed, a Display Faults button will also be displayed on this screen.</p>
	<ol style="list-style-type: none"> 4. When prompted, enter the user code authorized to access other partition(s).
	<p>If the user code is accepted, the system displays the partitions that the user has access to.</p> <p>Note: A user may have access to some or all of the available partitions! You have two arming options:</p> <p>To arm one or more partitions, highlight the partition(s) to be armed by touching it on the screen, then press ARM SELECTED.</p> <p>Press ARM ALL to arm all available partitions.</p>







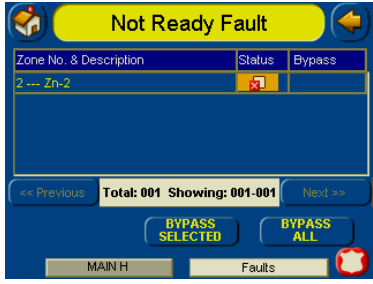
Security System Operation (cont'd)

How to Display Faults

The Display Faults function is used when you see a Not Ready Fault message and want to determine where the fault is and what type of fault it is.

To display faults do the following:

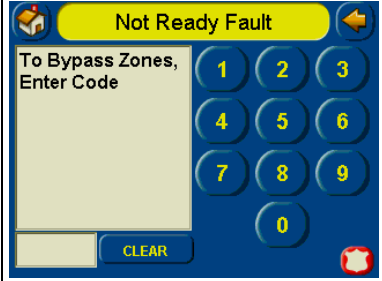

1. From the "Home" screen, press the **SECURITY** button. The "Arming" screen is displayed.

SCREEN	ACTION
	<p>2. From the "Arming" screen, press the DISPLAY FAULTS button. The "Display Faults" screen is displayed showing a listing of faulted and/or bypassed zones. The following symbols may be displayed on the "Display Faults" screen.</p> <ul style="list-style-type: none">  Zone in alarm  Zone has trouble  Zone is faulted  Zone has low battery  Zone is bypassed
	<p>3. As applicable, take corrective action such as closing a window or door to correct the fault. If the fault cannot be corrected, you may choose to bypass a zone by touching the zone to select it and depressing the BYPASS SELECTED button or bypass all faulted zones by depressing the BYPASS ALL button. The "User Authorization" screen is displayed with the instructions "To Bypass Zones, Enter Code".</p>



- Residential systems will not allow you to bypass fire or emergency zones. On commercial systems, a specified user may be allowed to bypass fire and system zones if the user was enabled by your system installer.
- To bypass zones the system must be disarmed first.
- Limits apply as to how many zones can be bypassed at one time. These limits are ten zones on residential and five zones on commercial systems.

Security System Operation (Cont'd)

 <p>The screenshot shows a blue interface with a yellow header 'Not Ready Fault'. Below the header is a text box 'To Bypass Zones, Enter Code' and a numeric keypad with buttons 1-9 and 0. A 'CLEAR' button is at the bottom left, and a red shield icon is at the bottom right.</p>	<p>4. Enter your 4-digit user code. The "Arming" screen is displayed showing the system status as Ready-Bypass</p>
 <p>The screenshot shows a blue interface with a yellow header 'Ready Bypass'. It features several buttons: 'AWAY', 'STAY', 'NIGHT', 'DISPLAY FAULTS', and 'MORE CHOICES'. There is also an 'Arm Multi-Partitions' option with a radio button. At the bottom, it shows the date and time 'Sat 01/01/00 6:01 AM', a 'MAIN H' button, a speaker icon, and a red shield icon.</p>	

Security System Operation (cont'd)

How to Bypass Zones

The Bypass function is used when you want to arm your system with one or more zones left open. Bypassed zones are unprotected and will not cause an alarm when violated while your system is armed.



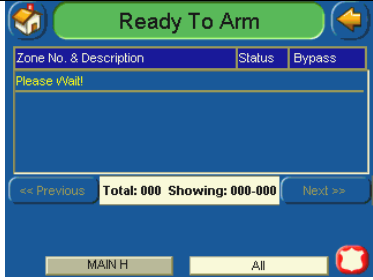
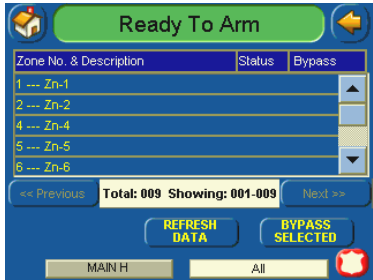
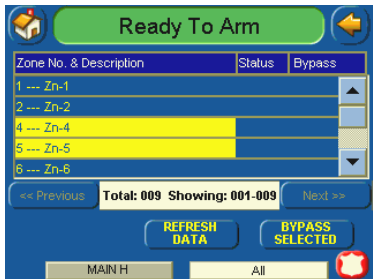
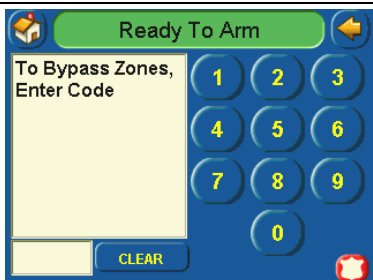
- Residential systems will not allow you to bypass fire or emergency zones. On commercial systems, a specified user may be allowed to bypass fire and system zones if the user was enabled by your system installer.
- To bypass zones, the system must be disarmed first.
- Limits apply as to how many zones can be bypassed at one time. These limits are ten zones on residential systems and five zones on commercial systems.

To bypass zones do the following:


- From the "Home" screen, press the **SECURITY** button. The "Arming" screen is displayed.

SCREEN	ACTION
	<ol style="list-style-type: none"> From the "Arming" screen, press the MORE CHOICES button. The "More Choices" screen is displayed. Note: If any zones are bypassed or faulted, a Display Faults button will also be displayed on this screen.
	<ol style="list-style-type: none"> Press the SHOW ZONES button on the "More Choices" screen. While the TouchCenter is requesting and receiving the zone data from the control panel, the screen displays "Please Wait!". Then the zones, along with their current status, are displayed.

Security System Operation (Cont'd)

SCREEN	ACTION
	
	<p>4. Highlight the zone(s) to be bypassed by touching it on the screen when the zones are displayed.</p>
	<p>5. Press the BYPASS SELECTED button. The "User Authorization" screen is displayed with the instructions "To Bypass Zones, Enter Code". Note: If zones have already been bypassed, the top of this screen will indicate "Ready Bypass" and the screen will contain a Clear Bypasses button.</p>
	<p>6. Enter your 4-digit user code. The "More Choices" screen is displayed showing the system status as Ready-Bypass</p>


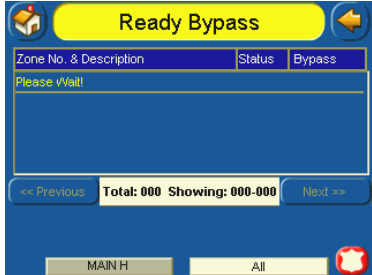
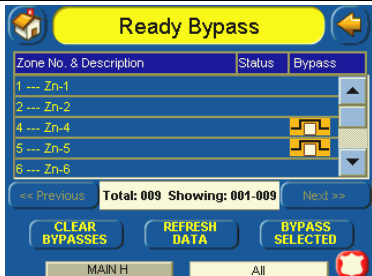

Security System Operation (cont'd)

SCREEN	ACTION
	7. Press the BACK button to return to the “Arming” screen.

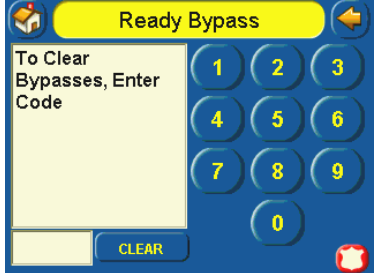

Security System Operation (Cont'd)

How to Remove Bypassed Zones

A bypassed zone will automatically be unbypassed when you disarm the system. If a zone is bypassed, you can remove the bypass as follows:

SCREEN	ACTION
	<p>1. View bypassed zones by pressing the SHOW ZONES button.</p> <p>While the TouchCenter is requesting and receiving the zone data from the control panel, the screen displays "Please Wait!". Then the zones, along with their current status, are displayed.</p>
	
	<p>2. Remove zone bypasses by pressing the CLEAR BYPASSES button.</p> <p>Note: Bypassed zones are indicated by the Bypass icon .</p>

Security System Operation (cont'd)

SCREEN	ACTION
	<p>3. The "User Authorization" screen is displayed with the instructions To Clear Bypasses, Enter Code.</p> <p>Note: If the system is armed and you unbyypass a zone, it will disarm the system.</p> <p>Enter your 4-digit user code. The "More Choices" screen is displayed showing the system as Ready to Arm.</p> <p>Note: This will not occur if any zone(s) is open (not ready).</p>
	

Security System Operation (Cont'd)

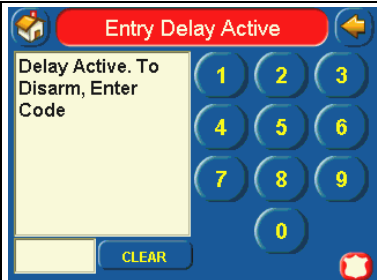

How to Disarm the System

IMPORTANT: If you return and the main burglary sounder is on, DO NOT enter the premises, but call the police from a nearby safe location. If you return after an alarm has occurred and the main sounder has shut itself off, the TouchCenter will beep rapidly upon entering, indicating that an alarm has occurred during your absence. **LEAVE IMMEDIATELY and CONTACT THE POLICE** from a nearby safe location.

The system may be disarmed using either of two methods. One method is employed when you enter the premises and the other is when you have been in the premises with the system armed (i.e., Stay and Night arming modes).


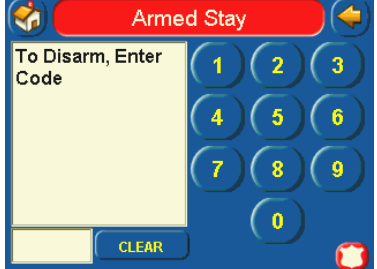

To disarm the system when entering the premises:

The TouchCenter will automatically display the Entry Delay Active screen when you enter the premises:


	<p>Enter your Code. The partition will be disarmed and the "Arming" screen is displayed showing the system as Ready to Arm.</p> <p>Note: If you have a commercial system and a time window has been defined for when you may disarm the system, the system will not disarm if you are outside that time window.</p>
	

Security System Operation (cont'd)

To disarm the system when already in the premises:

SCREEN	ACTION
	<p>1. Press the DISARM button on the "Armed" screen. The "User Authorization" screen is displayed with the instructions "To Disarm, Enter Code".</p>
	<p>2. Enter your 4-digit user code. If the Arm Multi-Partitions button on the "Armed" screen is not checked, the TouchCenter beeps once, the system will disarm, and the "Arming" screen is displayed showing the system as Ready to Arm or Not Ready Fault if any zone is faulted (open). If the Arm Multi-Partitions button on the "Armed" screen is checked, the Partition No. & Description screen is displayed listing the partitions to which you have access.</p>
	<p>3. Press the DISARM ALL button if you wish to disarm the system. The TouchCenter beeps once and the "Arming" screen is displayed showing the system as Ready to Arm or not ready if any zone is faulted (open). Note: If you wish to disarm only selected partitions, you must first highlight the partition(s) to be disarmed, then press the DISARM SELECTED button. The TouchCenter beeps once and the "Arming" screen is displayed showing the system as Ready to Arm or not ready if any zone is faulted (open).</p>

Security System Operation (Cont'd)

SCREEN	ACTION
	<p>Note: Once the system is disarmed, the TouchCenter will return to the "Home" screen after the selected "To Home Page After" time has expired. This time is selected on the "Setup" screen.</p>

Security System Operation (cont'd)

How to Check the Status of Other Partitions

Partitioning enables a single physical alarm system to control up to eight areas of protection (partitions) depending on the system you have purchased. Each TouchCenter and other keypad is assigned a default partition for display purposes, and will show only that partition's information.


Note: A letter “H” following the partition name or number indicates that this is the default partition for the TouchCenter.

For example, if your physical site is a four-apartment housing unit, your alarm system may be configured with four partitions. Each apartment's zones (door, windows, smoke detectors, etc.) are assigned to separate partitions, giving each apartment independent arming/disarming control of its own partition (area). A landlord or manager may be granted access to all partitions, so he/she can control the entire system.

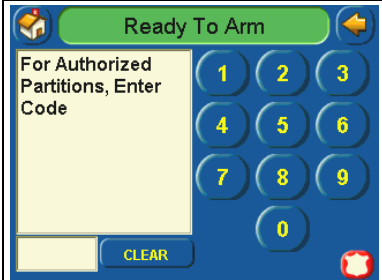
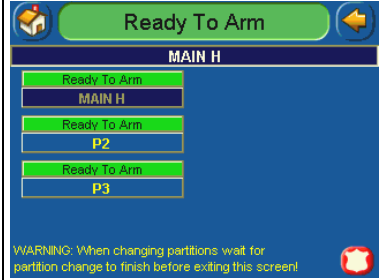
If a user is so authorized, a TouchCenter or other keypad in one partition can be used to perform system functions in another partition. (Note that only those partitions authorized and programmed by the installer can be accessed in this manner.)

To check the status of other partitions perform the following:

1. From the "Home" screen, press the **SECURITY** button. The "Arming" screen is displayed.

SCREEN	ACTION
	<ol style="list-style-type: none">2. Press the "Current Partition" tab (lower edge of the screen; in this case it displays Main H). The "User Authorization" screen is displayed with the instructions "For Authorized Partitions, Enter Code".

Security System Operation (Cont'd)

SCREEN	ACTION
 <p>The screenshot shows a blue interface with a green header 'Ready To Arm' and a back arrow. Below the header is a yellow box with the text 'For Authorized Partitions, Enter Code'. To the right of this box is a numeric keypad with buttons for digits 1-9 and 0. Below the keypad is a 'CLEAR' button and a red alarm bell icon.</p>	<p>3. Enter the code authorized to access other partition(s). If the code is accepted, the system displays the partitions that user has access to. Note: A code may have access to some or all of the available partitions.</p>
 <p>The screenshot shows the same blue interface with the green header 'Ready To Arm' and back arrow. Below the header is a list of partitions: 'MAIN H', 'P2', and 'P3'. Each partition name is preceded by a green bar with the text 'Ready To Arm'. At the bottom left, there is a warning message: 'WARNING: When changing partitions wait for partition change to finish before exiting this screen!'. A red alarm bell icon is at the bottom right.</p>	<p>This screen displays the available partitions (in this case, Partitions 1 (Main), 2, and 3), and their current status. The current partition is shown at the top of the display (in this example, the device is attached to Partition 1 (Main H). To change this assignment, select the appropriate button (e.g. press P2 to switch control to Partition 2). Note: After leaving this screen when using a residential panel, the selected partition in the TouchCenter will automatically revert back to the TouchCenter's home partition after two minutes. When using commercial panels, you must select the TouchCenter's home partition to return to it.</p>

Security System Operation (cont'd)

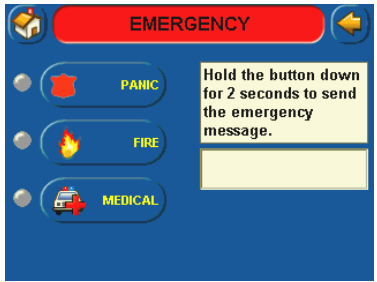
How to Send Emergency Messages



- Emergency messages are optional and may not be available on your system. Ask your system installer if emergency messages are available on your system.
 - The **Emergency** screen cannot be accessed while running a screen diagnostic test or while in the clean screen mode.
-

An emergency message for fire, panic, or medical can be sent to the central monitoring station from the **Emergency** screen. The **Emergency** screen can be accessed by activating the "PANIC" Icon located on the lower right corner of the screen.

Once the **Emergency** screen is accessed, perform the following to send an emergency message.

SCREEN	ACTION
	On the Emergency screen press and hold (for at least 2 seconds) the associated alarm button for the type of emergency message you want to send (FIRE , PANIC , or MEDICAL). When the message is sent, the associated "Message Sent" statement is displayed in the text box to the right of the buttons. You are immediately returned to the screen from which you pressed the "PANIC" Icon.




Security System Operation (Cont'd)

How to View the Event Log

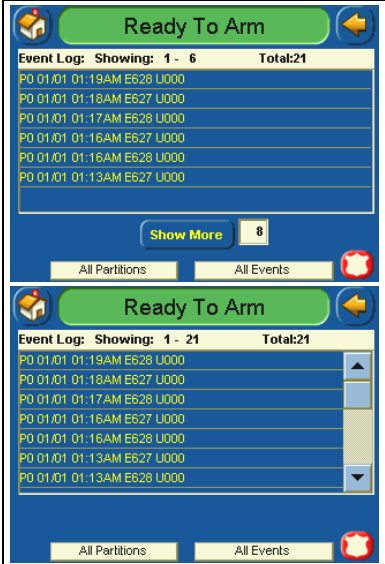
Your system has the ability to record various events in a history log wherein each event is recorded with the time and date of its occurrence. The control panel must be programmed to record various system events in installer programming mode.

To view the Event Log, perform the following:

1. From the "Home" screen, press the **SECURITY** button. The "Arming" screen is displayed.

SCREEN	ACTION
	<ol style="list-style-type: none"> 2. From the "Arming" screen press the MORE CHOICES button. The "More Choices" screen is displayed.
	<ol style="list-style-type: none"> 3. Press the EVENT LOGS button on the "More Choices" screen. The "Event Log" screen is displayed. Note: While TouchCenter is requesting and receiving the event log data from the control panel, the "Event Log" screen displays "Please Wait!".
	

Security System Operation (cont'd)

SCREEN	ACTION
 <p>The top screenshot shows the 'Ready To Arm' screen with an event log. The log header indicates 'Showing: 1 - 6' and 'Total: 21'. The log contains six entries, each starting with 'PO 01/01' followed by a time and 'U000'. Below the log is a 'Show More' button with a small box containing the number '8'. At the bottom, there are two buttons: 'All Partitions' and 'All Events', and a red alarm icon.</p> <p>The bottom screenshot shows the same 'Ready To Arm' screen. The event log header now indicates 'Showing: 1 - 21' and 'Total: 21'. The log contains 21 entries. A vertical scroll bar is visible on the right side of the event log list. The 'Show More' button and bottom navigation elements are also present.</p>	<p>The first six events will be displayed. To view all items, press the Show More button and press the up/down arrows to scroll through the event log.</p> <p>Notes:</p> <ul style="list-style-type: none"> • When All Partitions or All Events button is pressed, and more than 100 events exist, the Show More button text will change to read Next>>. If you press the Next>> button, a <<Previous button will be shown. The Next>> and <<Previous buttons will show the next 100 or previous 100 events. • The Next>> and <<Previous buttons will be shown for commercial panels only when 100 or more events are in the log. They will not be shown for residential panels.

Fire Alarm System Operation

Introduction to Fire Alarm System Operation

Your fire alarm system (if installed) is on 24 hours a day, providing continuous protection. In the event of an emergency, the installed smoke and heat detectors will automatically send signals to your Control/Communicator, triggering a loud interrupting sound from the keypad. An interrupted sound will also be produced by optional exterior sounders. A FIRE message will appear at your keypad and remain on until you silence the alarm.

In Case of Fire Alarm

1. Should you become aware of a fire emergency before your detectors sense the problem, go to your nearest keypad and manually initiate an alarm by pressing the panic key assigned as FIRE emergency (if programmed by the installer) and hold down for at least 2 seconds.
2. Evacuate all occupants from the premises.
3. If flames and/or smoke are present, leave the premises and notify your local Fire Department immediately.

Silencing and Clearing a Fire Alarm

1. Silence, acknowledge, and clear the alarm by:

Residential systems –

- a. Press “Touch here to Silence” on the display to silence the alarm.
- b. Press the **CLEAR** button followed by your code. This will acknowledge the alarm and disarm the system (if armed).
- c. Press the **DISPLAY FAULTS** button on the Arming screen. The faulted fire zone will be displayed.
- d. Press the **CLEAR** button and then enter your code. This will clear the Fire Alarm from the system.

Commercial systems –

- a. Enter your code. This will silence and acknowledge the alarm and disarm the system (if armed).
- b. Press the **DISPLAY FAULTS** button on the Arming Screen. The faulted zones will be displayed.

Fire Alarm System Operation (cont'd)

- c. Press the **CLEAR** button and then enter your code. This will clear the Fire Alarm from the system.
2. If the keypad does not indicate a **READY** condition after the second sequence, press the **DISPLAY FAULTS** key on the Arming screen to display the zone(s) that are faulted. Be sure to check that smoke detectors are not responding to smoke or heat producing objects in their vicinity. In this case, eliminate the source of heat or smoke.
3. If this does not remedy the problem, there may still be smoke in the detector. Clear it by fanning the detector for about 30 seconds.
4. When the problem has been corrected, clear the display by entering the **DISPLAY FAULTS** button on the Arming screen, selecting the fire zone, pressing the **CLEAR** button and then entering you user code.

Note: Contact your Security Company for servicing if you have further problems with your fire system.

User Code Setup

Introduction to User Code Setup

Each user must be assigned a name with a corresponding 4-digit user code in order to gain access to various features and functions. The TouchCenter can hold the identity for 10 Users in its memory. If additional Users are needed, define the additional Users using the Console Emulation Mode.

Users for the system are programmed in a central user setup location that provides the specific questions for authorization levels assigned to different users. You may want these users to be the same, but there are situations in which you may want a user to have limited capabilities. These capabilities are defined by the Authority Level assigned each user.

Authority Levels

Authority levels define the system functions a particular user can perform. Depending on the authority assigned to you, there are certain system functions you may be prohibited from performing. The following information describes the authority levels that can be assigned through the TouchCenter and provides the equivalent authority level name that you will find if you are reading your alarm system manuals. The authority levels that can be assigned through the TouchCenter are as follows:

Touch-Center Authority Level	Functions	Equivalent System Name	
		Residential Systems	Commercial Systems
Master	Can perform all security functions, add/delete users in assigned partition, program scheduled events, and change partition master code	Partition Master	Level 1 Master
Normal	Perform security functions (arm, disarm)	Standard User	Level 3 Operator A



User Code Setup (cont'd)

Guest	Can arm the system in assigned partitions, but cannot disarm the system unless the system was armed with this code. Note: Do not assign this level if Quick Arm is enabled in your system.	Guest	Level 4 Operator B
No Access	Used to restrict access from a partition.	N/A	N/A

How to Access User Setup

Access User Setup as follows:

1. From the "Home" screen, press the **SECURITY** button. The "Arming" screen is displayed.

SCREEN	ACTION
	2. Press the MORE CHOICES button. The "More Choices" screen is displayed.
	3. Press the SETUP button on the "More Choices" screen. The "Setup" screen is displayed.

User Code Setup (Cont'd)

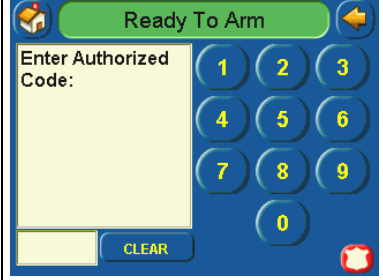
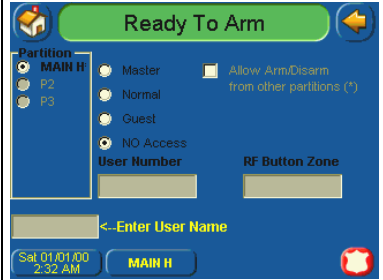


SCREEN	ACTION
	<p>4. Press the USER SETUP button on the "Setup" screen. The User Setup screen is displayed.</p>

How to Add a User

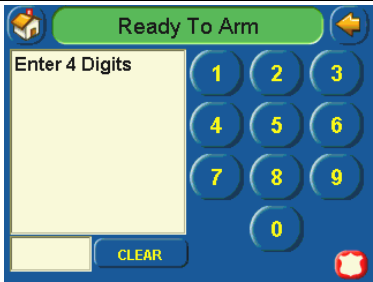
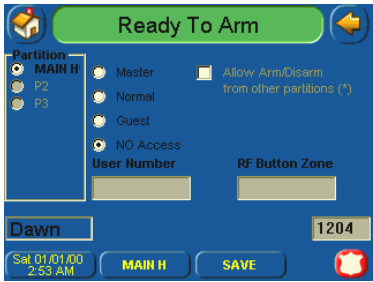

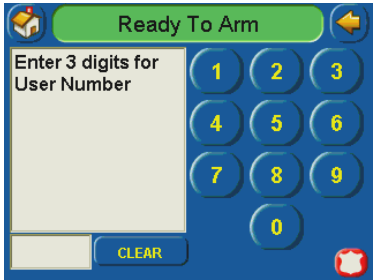
Add a user as follows:

SCREEN	ACTION
	<p>Note: Three selections are available: add a user, edit a user, or delete a user.</p> <p>1. To add a user, press the ADD USER button. The "User Authorization" screen is displayed with the instructions "Enter Authorized Code".</p>


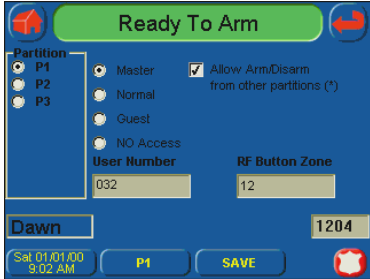

User Code Setup (cont'd)

SCREEN	ACTION
	<p>2. Enter your Authorized code. The "User Options" screen is displayed.</p> <p>Note: The authorized code for adding users is dependent upon the system you have. Check with your system installer to determine who can add users.</p>
	<p>3. Press the box next to Enter User Name. The Enter Data keyboard screen is displayed.</p>
	<p>4. Type in the user name (6 characters max.) and press the OK button. The "User Options" screen is displayed with Enter User Code... displayed.</p> <p>Notes:</p> <ul style="list-style-type: none"> • Use the Shift button for capital letters. • Use the BS (Backspace) button to make corrections. • The @#& button is not available for use at this time. These characters cannot be saved to the control panel.
	<p>5. Touch the box next to Enter User Code... The "User Authorization" screen is displayed with the instructions Enter 4 Digits.</p>

User Code Setup (Cont'd)

SCREEN	ACTION
	<p>6. Enter the 4-digit code for this user. The "User Options" screen is displayed with the user's name and code displayed.</p>
	<p>7. Select the partitions and access level for this user. After the access level is selected, the Allow Arm/Disarm from other partitions box becomes available when interfacing with commercial panels. (On residential panels, this box is automatically selected and can not be deselected.)</p> <p>If this user is to be able to Arm and Disarm from other partitions in commercial panels, touch this box.</p>
	<p>8. Touch the box below the User Number. The "User Number" screen is displayed with the instructions to Enter 3 Digits.</p> <p>Note:When assigning User Numbers for residential panels, enter 0 as the first of the three digits.</p>
	<p>9. Enter the 3-digit user number for this user. The "User Options" screen is displayed with the user's name, number, and code displayed.</p>


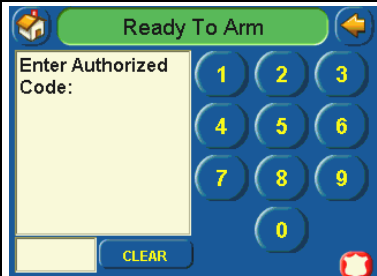

User Code Setup (cont'd)

SCREEN	ACTION
	<p>10. If this user is assigned an RF button zone, touch the box below the RF Button Zone. The "RF Button Zone " screen is displayed with the instructions to enter 3 digits. If interfacing to a residential panel, enter 0 as the first digit. Enter the RF Button Zone number that was previously programmed in the control panel. Note that the RF Button Zone does not appear for every user. The User Options screen will be redisplayed.</p>
	<p>11. Press the SAVE button. The system will save the configuration. When the save is complete, the User Setup screen is displayed with the new user's name shown.</p>
	


User Code Setup (Cont'd)

How to Delete a User

Delete a User as follows:

SCREEN	ACTION
	<p>1. From the User Setup screen, touch the circle next to the user to be deleted and press the DELETE USER button. The "User Authorization" screen is displayed with the instructions "Enter Authorized Code:".</p>
	<p>2. Enter your Authorized code. The "Delete Confirmation" screen is displayed. Note: The authorized code for deleting users is dependent upon the system you have. Check with your system installer to determine who can delete users.</p>
	<p>3. Press the appropriate button. The User Setup screen is displayed.</p>

User Code Setup (cont'd)


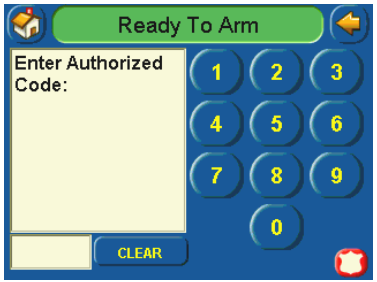
SCREEN	ACTION
	

How to Edit a User

Note: You can not edit a User's name. To modify a User name, you must delete the User and re-enter User.

Edit a user as follows:

Note: You can not edit a User's name. To modify a User name, you must delete the User and re-enter User.

SCREEN	ACTION
	<p>1. From the User Setup screen, touch the circle next to the user to be edited and press the EDIT USER button. The "User Authorization" screen is displayed with the instructions "Enter Authorized Code:".</p>
	<p>2. Enter your Authorized code. The "User Options" screen is displayed.</p> <p>Note: The authorized code for editing users is dependent upon the system you have. Check with your system installer to determine who can edit users.</p>

User Code Setup (Cont'd)

SCREEN	ACTION
	<p>3. Select the options needed for this user and press the SAVE button. The configuration changes are saved and you are returned to the User Setup screen.</p>

Advanced System Features

Introduction to Advanced System Features

While most of the commonly used security functions are available from the TouchCenter's advanced user interface, there are some less used, advanced features that can either be accessed through Console Emulation mode on the TouchCenter or a standard alpha keypad. To use features not supported by the TouchCenter, refer to your Control Panel User Guide.

Console Emulation Mode

Console Emulation Mode allows you to use a TouchCenter interface just as you would a regular system keypad. All commands shown in Console Emulation mode can also be executed from a standard alpha keypad.

Notes:




- It is recommended that you **do not** use the Console Emulation Mode to enter GOTO commands. Unsatisfactory operation may result from issuing GOTO commands in Console Emulation.
- Two button panics (1 & *, 3 & #, and * & #) **do not** function in the Console Emulation Mode. The A, B, C, and D buttons do function if programmed as panic keys. Check with your system installer for details.
- Commercial systems with Alpha keypads have a feature where if you depress a key for 5 seconds, you will receive self help messages about the pressed key or holding the * key for 5 seconds will provide zone descriptors. These features do not function in the TouchCenter as all key presses are instantaneous.

How to Enter Console Emulation Mode

To access the TouchCenter "Keypad," do the following:

Advanced System Features (Cont'd)

1. From the "Home" screen, press the **SECURITY** button. The "Arming" screen is displayed.

SCREEN	ACTION
	<p>2. Press the MORE CHOICES button. The "More Choices" screen is displayed.</p>
	<p>3. Press the CONSOLE MODE button on the "More Choices" screen. The "Keypad" screen is displayed.</p>
	<p>4. Perform functions as you would from a regular alpha keypad.</p>

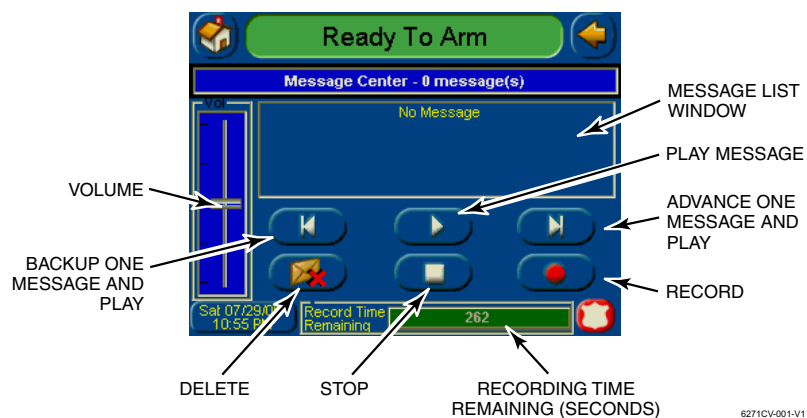
Voice Messages (FA701CVKP Only)

Introduction to Recording and Retrieving Messages

The FA701CVKP provides the capability of recording voices messages for others on the premises. The number of messages is not limited however; the total time of all messages added together cannot exceed 262 seconds.

Note: The voice messages are stored in the memory of the FA701CVKP. *All messages will be lost* if the FA701CVKP loses power or if it is reset.

Voice messages are recorded and retrieved using the “Message Center” screen. The below illustration identifies the various areas and buttons on the “Message Center” screen.




Message Center Screen

Voice Messages (Cont'd)

Recording a Voice Message

To record a voice message, do the following:

1. From the "Home" screen, press the **Message** button. The "Message Center" screen is displayed.




SCREEN	ACTION
	<ol style="list-style-type: none">2. Press the Record button and record your message while staying within approximately one foot of the TouchCenter and speaking at a normal voice volume. As you are recording your message, the remaining time counter counts down to indicate the total remaining time available and a "Recording New Memo..." message is displayed above the message list window.3. Press the Stop button when you are done recording the message. The message indicator will be flashing and the message will be listed in the message list window.4. To record additional messages, repeat steps 2 and 3 above or to exit, depress the BACK or HOME button and the "Home" screen will be displayed.

Voice Messages (Cont'd)

Retrieving and Deleting a Voice Message

To retrieve a voice message, do the following:

1. From the "Home" screen, press the MESSAGE button. The "Message Center" screen is displayed.

SCREEN	ACTION
	<p>2. Select the message you wish to listen to by touching it in the message list and then pressing the Play Message button. As the message is being played, a "Play (x): Voice Memo..." message is displayed above the message list window. When the end of the message is reached, the playback will stop.</p> <p>3. To listen to the next message, press the Advance One Message and Play button.</p>
	<p>Note: At anytime you may highlight a message you want to listen to and press the Play Message button as described in step 2 above.</p> <p>4. If you wish to delete messages, press the Delete button. The "Delete Memo" screen will be displayed. You can press the Del Selected button to delete only the currently selected message and return to the "Message Center" screen, Del All button to delete all messages and return to the "Message Center" screen, or the Cancel button to return to the "Message Center" screen without deleting any messages.</p>
	<p>5. To exit, depress the BACK or HOME button and the "Home" screen will be displayed.</p>

Summary of TouchCenter LED Operation

TouchCenter LED Operation

The TouchCenter has three LEDs labeled - ARMED, READY and TROUBLE (FA701CKP) or MESSAGE (FA701CVKP). The ARMED LED is red, READY LED is green and TROUBLE or MESSAGE LED is yellow. Each LED's on and off state has different meanings as described below.

LED	DESCRIPTION
ARMED	ON – Security system is armed. OFF – Security system is not armed.
READY	ON – Security system is disarmed and ready to arm. OFF – Security system is armed or disarmed but not ready. If disarmed, faults or troubles are present.
MESSAGE (FA701CVKP)	FLASHING – The FA701CVKP contains new message(s) for the User OFF – No new messages.
TROUBLE (FA701CKP)	ON – The Security System has one or more Trouble(s). OFF – No Trouble.

TouchCenter Setup

How to Access TouchCenter Setup Options

Setup allows you to make changes to the way your TouchCenter is operating. The options that can be changed are:

- Adjust the touch screen contrast
- Adjust the TouchCenter sounder volume
- Change the time interval that must pass prior to the TouchCenter turning off the touch screen backlight
- Change the time interval that must pass prior to the TouchCenter returning to the "Home" screen

Additionally, you may enter the **User Setup** screen, **Advanced Setup** screen (if enabled by your system installer), or **Clean Screen** (maintenance mode) from the "Setup" screen by pressing the corresponding button.



The "Advanced Setup" button may provide access to additional options if enabled by your system installer. Ask your system installer to explain any options accessible with this button.


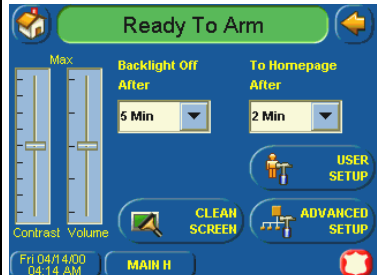
How to Access Setup

Access the "Setup" features as follows:

1. From the "Home" screen, press the **SECURITY** button. The "Arming" screen is displayed.

SCREEN	ACTION
	<ol style="list-style-type: none">2. Press the MORE CHOICES button. The "More Choices" screen is displayed.

TouchCenter Setup (Cont'd)

SCREEN	ACTION
	<p>3. Press the SETUP button on the "More Choices" screen. The "Setup" screen is displayed.</p>
	

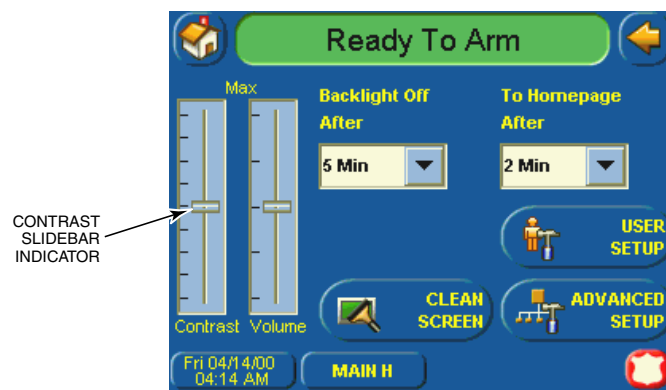
TouchCenter Setup (Cont'd)

How to Adjust the Touch Screen Contrast

You may adjust the touch screen contrast as follows:

If...	Then...
you want to increase contrast	move the slide bar above the current contrast setting.
you want to decrease contrast	move the slide bar below the current contrast setting.

If you have made any changes in the contrast settings, when you exit this screen you will be presented with a pop-up asking if you want to remember the new settings.



Touch Screen Contrast Control

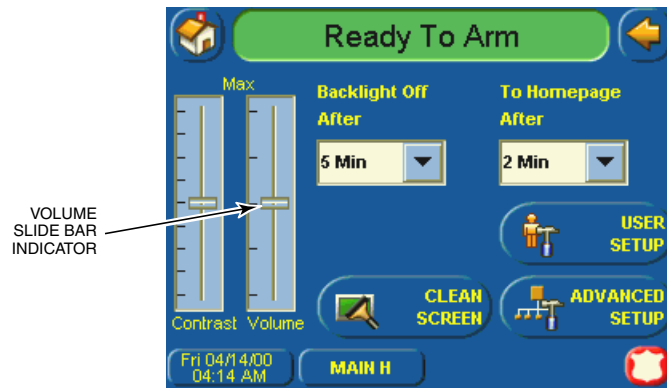
TouchCenter Setup (Cont'd)

How to Adjust the Volume

You may adjust the TouchCenter sounder volume by pressing your finger on the TouchCenter slide bar associated with the "Volume" scale and doing the following:

If...	Then...
you want to increase volume	move the slide bar above the current volume setting..
you want to decrease volume	move the slide bar below the current volume setting.

If you have made any changes in the volume settings, when you exit this screen you will be presented with a pop-up asking if you want to remember the new settings.


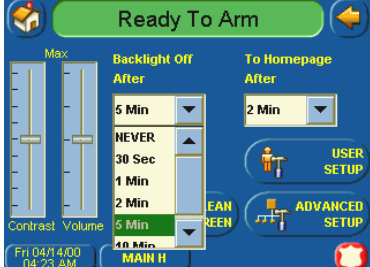


TouchCenter Volume Control

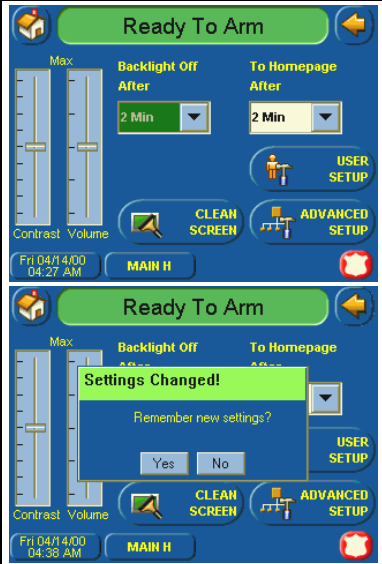
TouchCenter Setup (Cont'd)

How to Select Screen Backlight Off Activation Time

When the TouchCenter is not active, it will automatically turn the backlight off after the selected backlight off time has expired (unless "Never" option is selected). To select the screen backlight time, do the following:

SCREEN	ACTION
 <p>The screenshot shows the 'Ready To Arm' screen. On the left, there are sliders for 'Contrast' and 'Volume'. In the center, the 'Backlight Off After' dropdown menu is open, showing '5 Min' selected. To the right, there is a 'To Homepage After' dropdown menu set to '2 Min'. At the bottom, there are buttons for 'USER SETUP', 'CLEAN SCREEN', 'ADVANCED SETUP', and 'MAIN H'. The status bar at the bottom shows 'Fri 04/14/00 04:14 AM'.</p>	<p>1. On the "Setup" screen, press the Backlight Off After: "arrow" button. A drop-down list displaying the time period options is displayed.</p>
 <p>The screenshot shows the 'Ready To Arm' screen with the 'Backlight Off After' dropdown menu open. The menu is scrolled down to show options: '5 Min', 'NEVER', '30 Sec', '1 Min', '2 Min', '5 Min', and '40 Min'. The '5 Min' option is highlighted. The rest of the screen elements are the same as in the previous screenshot.</p>	<p>2. Select the time period option you want by pressing it. The drop-down list closes automatically and the selection is displayed. Note: Additional options can be viewed by using the up/down "arrows" to scroll through the time period options.</p>

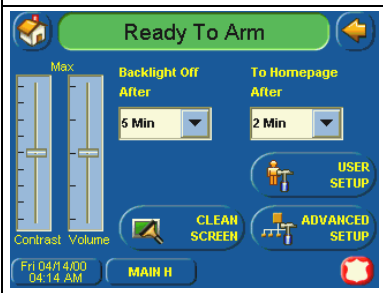

TouchCenter Setup (Cont'd)

SCREEN	ACTION
 <p>The first screenshot shows the 'Ready To Arm' screen with 'Backlight Off After' and 'To Homepage After' both set to '2 Min'. The second screenshot shows the same screen with a 'Settings Changed!' pop-up window asking 'Remember new settings?' with 'Yes' and 'No' buttons.</p>	<p>3. Press either the "Home" or "Back" button. A Settings Changed! pop-up window is displayed asking "Remember New Settings?" Select Yes to save the change or No to discard the change.</p> <p>When the Update is complete the TouchCenter goes to the "Home" screen or "More Choices" screen depending on whether you pressed the "Home" or "Back" button, respectively.</p>

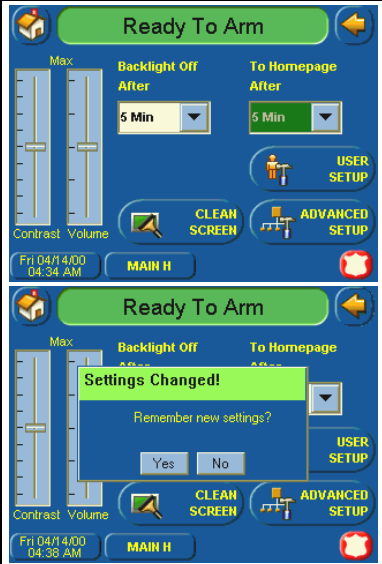
TouchCenter Setup (Cont'd)

How to Select Homepage After Time

When the TouchCenter is not active, it will automatically return to the "Home" screen after the selected To Homepage After time has expired (unless "Never" option is selected). To select the To Homepage After time, do the following:

SCREEN	ACTION
	<p>1. On the "Setup" screen, press the To Homepage After "arrow" button. A drop-down list displaying the time period options is displayed.</p>
	<p>2. Select the time period option you want by pressing it. The drop-down list closes automatically and the selection is displayed.</p>

TouchCenter Setup (Cont'd)

SCREEN	ACTION
 <p>The first screenshot shows the 'Ready To Arm' screen with 'Backlight Off After' and 'To Homepage After' both set to '5 Min'. The second screenshot shows a 'Settings Changed!' pop-up window with the question 'Remember new settings?' and 'Yes' and 'No' buttons.</p>	<p>3. Press either the "Home" or "Back" button. A Settings Changed! pop-up window is displayed asking "Remember New Settings?" Select Yes to save the change or No to discard the change.</p> <p>When the Update is complete the TouchCenter goes to the "Home" screen or "More Choices" screen depending on whether you pressed the "Home" or "Back" button, respectively.</p>

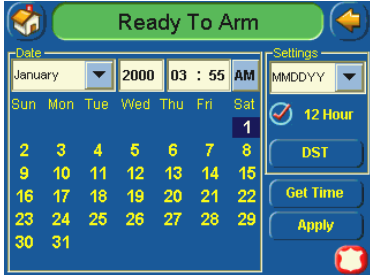
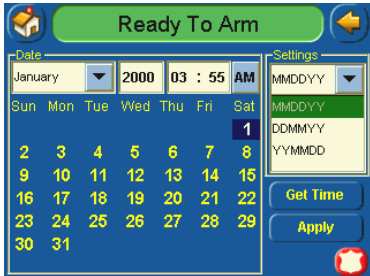
TouchCenter Setup (Cont'd)

How to Set the Time and Date

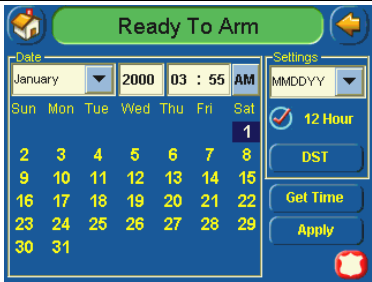
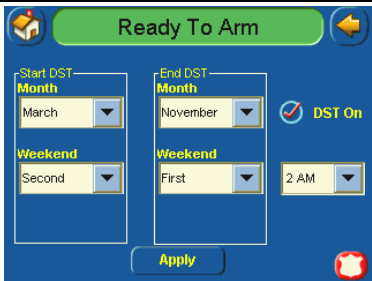
You can set the time and date from the **Set Time & Date** screen. Pressing the Time and Date button located at the bottom of the TouchCenter screen displays the **Set Time & Date** screen.

- When the time is set it will be stored in the TouchCenter and sent to the control panel when you press the **Apply** button and answer **Yes** to the following prompt. Additionally, when using the TouchCenter with a residential panel, the panel will download its time into the TouchCenter once an hour after the clock is set.
- If **Get Time** is pressed, the TouchCenter will download the time and date from the control panel and exit the Set Time & Date screen. **Note:** This button appears with residential panels only.
- If **DST On** (Daylight Savings Time) is selected, the TouchCenter will adjust for Daylight Savings time at the month, week and time chosen.

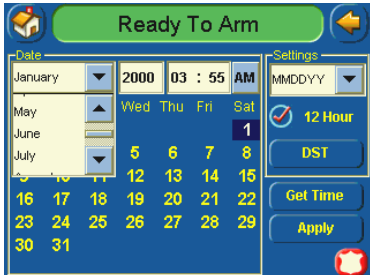
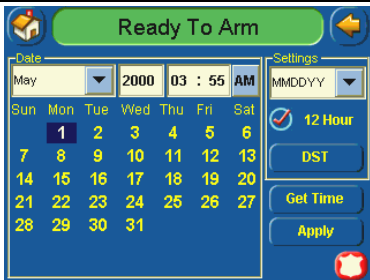
To set the time and date, press the Time and Date button located at the bottom of the screen and do the following:

SCREEN	ACTION
 <p>The screenshot shows the 'Set Time & Date' screen. At the top, it says 'Ready To Arm'. Below that, there's a 'Date' section with a dropdown for 'January', '2000', '03 : 55 AM', and a 'Settings' dropdown set to 'MMDDYY'. A calendar grid shows the month of January with the 1st highlighted. On the right, there are buttons for '12 Hour', 'DST', 'Get Time', and 'Apply'.</p>	<p>1. On the "Time and Date" screen, press the Month/Day/Year "arrow" button in the "Settings" area of the screen. A drop-down list displaying the Month/Day/Year display formats is displayed.</p>
 <p>This screenshot is identical to the one above, but the 'Settings' dropdown menu is open, showing a list of display formats: 'MMDDYY', 'DDMMYY', and 'YYMMDD'. The 'MMDDYY' option is currently selected.</p>	<p>2. Select the display format you want by pressing it. The drop-down list closes automatically and the selection is displayed.</p>

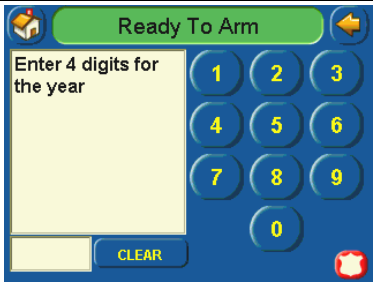
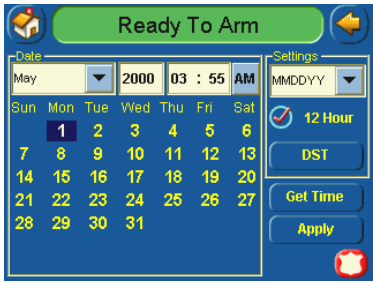
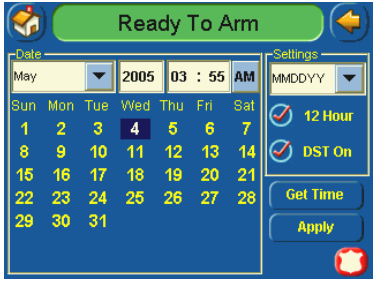
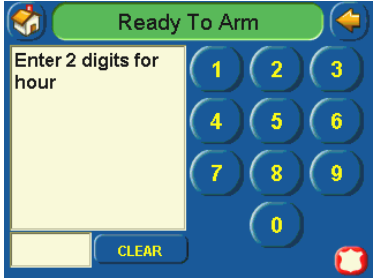
TouchCenter Setup (Cont'd)

SCREEN	ACTION
 <p>The screenshot shows the 'Ready To Arm' screen. At the top, there's a green bar with a house icon and the text 'Ready To Arm'. Below it, there's a 'Date' section with a dropdown for 'January', '2000', '03 : 55', and 'AM'. To the right is a 'Settings' section with a dropdown for 'MMDDYY'. Below the date is a calendar grid with days of the week (Sun-Sat) and numbers 1-31. A red circle with a checkmark is next to the number '1'. To the right of the calendar are buttons for '12 Hour', 'DST', 'Get Time', and 'Apply'. A red house icon is in the bottom right corner.</p>	<p>3. Select if you want a 12-hour or 24-hour format for your time display by touching the circle to the left of the 12 Hour display in the "Settings" area of the screen. A check mark in the circle indicates a 12-hour display format.</p> <p>4. Select if you want Daylight Savings Time to affect your system clock by pressing the DST button in the "Settings" area of the screen. The Daylight Savings Screen will be displayed.</p>
 <p>The screenshot shows the 'Ready To Arm' screen with DST settings. It has a green bar at the top with 'Ready To Arm'. Below it, there are two sections: 'Start DST' and 'End DST'. Each has a 'Month' dropdown (set to 'March' and 'November' respectively) and a 'Weekend' dropdown (set to 'Second' and 'First' respectively). To the right of these is a 'DST On' checkbox with a checkmark and a '2 AM' dropdown. An 'Apply' button is at the bottom. A red house icon is in the bottom right corner.</p>	<p>5. Select if you want Daylight Savings Time to affect your system clock by touching the circle to the left of the DST On display. A check mark in the circle indicates that Daylight Savings Time is applicable.</p> <p>6. On the "Daylight Savings" screen, press the Month "arrow" button in the "Start DST" area of the screen. A drop-down list displaying the Months is displayed.</p> <p>7. Select the month you want by pressing it. The drop-down list closes automatically and the selection is displayed.</p> <p>8. On the "Daylight Savings" screen, press the Weekend "arrow" button in the "Start DST" area of the screen. A drop-down list displaying the weeks is displayed.</p> <p>9. Select the week you want by pressing it. The drop-down list closes automatically and the selection is displayed.</p> <p>10. On the "Daylight Savings" screen, press the Month "arrow" button in the "End DST" area of the screen. A drop-down list displaying the Months is displayed.</p> <p>11. Select the month you want by pressing it. The drop-down list closes automatically and the selection is displayed.</p>

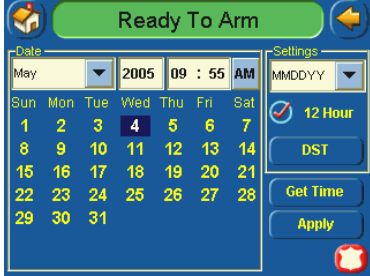
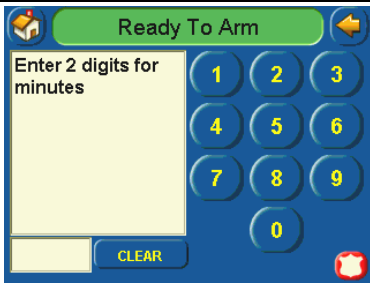
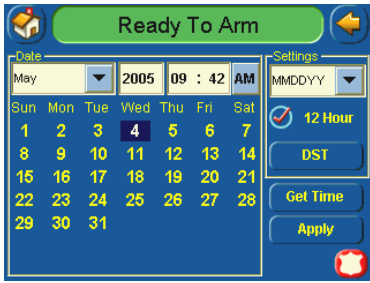
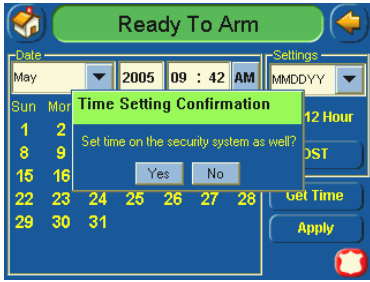
TouchCenter Setup (Cont'd)

SCREEN	ACTION
	<p>12. On the "Daylight Savings" screen, press the Weekend "arrow" button in the "End DST" area of the screen. A drop-down list displaying the weeks is displayed.</p> <p>13. Select the week you want by pressing it. The drop-down list closes automatically and the selection is displayed.</p> <p>14. On the "Daylight Savings" screen, press the "arrow" button to the right of the time (1 AM or 2 AM) on the screen. A drop-down list displaying 1 AM and 2AM is displayed.</p> <p>15. Select the time you want by pressing it. The drop-down list closes automatically and the selection is displayed.</p> <p>16. Press the APPLY button to save your Daylight Savings Time setup. The "Time and Date" screen is displayed.</p> <p>17. On the "Time and Date" screen, press the Month "arrow" button. A drop-down list displaying the months is displayed.</p>
	<p>18. Select the current month by pressing it. The drop-down list closes automatically and the selection is displayed.</p>
	<p>19. On the "Time and Date" screen, press the Year that is being displayed. A Year screen is displayed with the instructions to Enter 4 digits for the year.</p>

TouchCenter Setup (Cont'd)

SCREEN	ACTION
 <p>The screenshot shows a blue interface titled 'Ready To Arm'. On the left, a yellow box contains the text 'Enter 4 digits for the year'. To the right is a numeric keypad with buttons for digits 0-9. Below the keypad is a 'CLEAR' button and a red alarm icon in the bottom right corner.</p>	<p>20. Enter the four digits for the current year. The window closes automatically and the selection is displayed.</p>
 <p>The screenshot shows the 'Ready To Arm' screen with a date selection interface. At the top, it says 'Date' and shows 'May', '2000', '03 : 55', and 'AM'. Below this is a calendar grid for the month of May. The date '1' is highlighted. To the right of the calendar are settings for '12 Hour', 'DST', and buttons for 'Get Time' and 'Apply'. A red alarm icon is in the bottom right corner.</p>	<p>21. Select if it is AM or PM by pressing on the AM or PM display on the screen. Each depression switches the AM/PM display.</p> <p>22. Select the day of the month by touching the proper day in the display. The selected date will be highlighted on the screen.</p>
 <p>The screenshot shows the 'Ready To Arm' screen with a date selection interface. At the top, it says 'Date' and shows 'May', '2005', '03 : 55', and 'AM'. Below this is a calendar grid for the month of May. The number '4' is highlighted. To the right of the calendar are settings for '12 Hour', 'DST On', and buttons for 'Get Time' and 'Apply'. A red alarm icon is in the bottom right corner.</p>	<p>23. On the "Time and Date" screen, press the Hour that is being displayed. An hour screen is displayed with the instructions to Enter 2 digits for the hour.</p>
 <p>The screenshot shows a blue interface titled 'Ready To Arm'. On the left, a yellow box contains the text 'Enter 2 digits for the hour'. To the right is a numeric keypad with buttons for digits 0-9. Below the keypad is a 'CLEAR' button and a red alarm icon in the bottom right corner.</p>	<p>24. Enter the two digits for the current hour. The window closes automatically and the selection is displayed.</p>

TouchCenter Setup (Cont'd)

SCREEN	ACTION
	<p>25. On the "Time and Date" screen, press the Minutes that is being displayed. An minute screen is displayed with the instructions to Enter 2 digits for the minutes.</p>
	<p>26. Enter the two digits for the current minute. The window closes automatically and the selection is displayed.</p>
	<p>27. On the "Time and Date" screen, press the Apply button. A confirmation screen is displayed.</p>
	<p>28. Press the Yes button to save the time changes in your security system or press the No button to have the changes affect the TouchCenter only. Note: A Yes response is recommended.</p>

TouchCenter Operating Modes

Operating Modes (Chime, Voice, and Voice Chime)


Operating modes allows you to turn the TouchCenter chime mode on or off. Additionally, when using the FA701CVKP you may also turn the voice mode on or off. The operating modes provide the following features:

- **Chime Mode** – When selected, a request is sent to the alarm panel requesting that the panel chime the TouchCenter whenever a change in zone status occurs.
- **Voice Mode (FA701CVKP Only)** – When selected, a request is sent to the alarm panel requesting that the panel initiate TouchCenter voice enunciation whenever a change in system status occurs such as Armed, Disarmed, or Alarms.
- **Voice Chime Mode (FA701CVKP Only)** – The chime mode and voice more are in effect with the chime followed by voice enunciation.


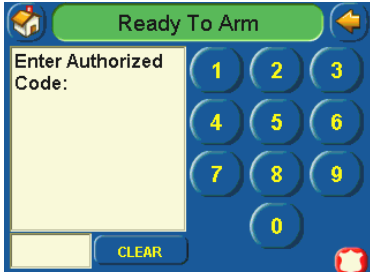
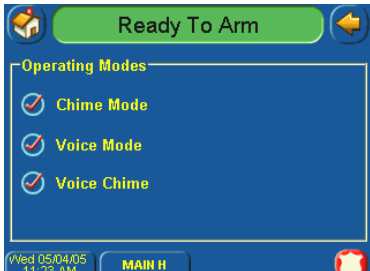
How to Access Operating Modes

Access the "Operating Modes" feature as follows:

1. From the "Home" screen, press the **SECURITY** button. The "Arming" screen is displayed.

SCREEN	ACTION
	<ol style="list-style-type: none"> 2. Press the MORE CHOICES button. The "More Choices" screen is displayed.

TouchCenter Operating Modes (cont'd)

SCREEN	ACTION
	<p>3. Press the OPERATING MODES button on the "More Choices" screen. The "User Authorization" screen is displayed with the instructions "Enter Authorized Code".</p>
	<p>4. Enter your "Master" code. The "Operating Modes" screen is displayed.</p>
	<p>5. Touch the Chime Mode button to turn the Chime Mode on or off. A checkmark appears in the button when the Chime Mode is "ON". Note that it may take a few seconds for the Chime Mode to take effect.</p> <p>6. (FA701CVKP Only) Touch the Voice Mode button to turn the Voice Mode on or off. A checkmark appears in the button with the Voice Mode is "ON" Note that if the Chime Mode and Voice Mode are both selected, the Voice Chime button will automatically be selected.</p>
	<p>Press the "HOME" or "BACK" button after making your selection. When the TouchCenter exits the "Operating Modes" screen, your selection is saved.</p>

Maintaining Your System

How to Clean your TouchCenter

IMPORTANT: Do not use an abrasive cleaning agent or abrasive cloth when cleaning your TouchCenter or damage to the TouchCenter may occur.



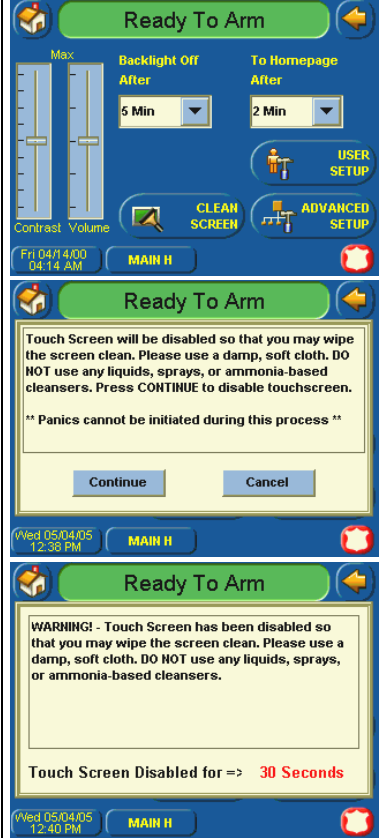
The **Emergency** screen cannot be accessed while running in the clean screen mode.

Clean the TouchCenter as follows:

1. From the "Home" screen, press the **SECURITY** button. The "Arming" screen is displayed.

SCREEN	ACTION
	<ol style="list-style-type: none"> 2. Press the MORE CHOICES button. The "More Choices" screen is displayed.
	<ol style="list-style-type: none"> 3. Press the SETUP button on the "More Choices" screen. The "Setup" screen is displayed.

Maintaining Your System (cont'd)

SCREEN	ACTION
 <p>The first screenshot shows the 'Ready To Arm' screen with options for 'Backlight OFF After' (5 Min) and 'To Homepage After' (2 Min), and a 'CLEAN SCREEN' button. The second screenshot shows a warning message: 'Touch Screen will be disabled so that you may wipe the screen clean. Please use a damp, soft cloth. DO NOT use any liquids, sprays, or ammonia-based cleansers. Press CONTINUE to disable touchscreen.' with 'Continue' and 'Cancel' buttons. The third screenshot shows the message: 'WARNING! - Touch Screen has been disabled so that you may wipe the screen clean. Please use a damp, soft cloth. DO NOT use any liquids, sprays, or ammonia-based cleansers. Touch Screen Disabled for => 30 Seconds'.</p>	<p>4. Press the CLEAN SCREEN button. A pop-up window displaying “Touch Screen will be disabled so that you may wipe the screen clean. Please use a damp, soft cloth. DO NOT use any liquids, sprays, or ammonia-based cleansers. Press CONTINUE to disable touchscreen.”</p> <p>When the Continue button is pressed the “Touch Screen Disabled for => 30 Seconds” message is displayed. During these 30 seconds the touch screen should be wiped clean of fingerprints using a mild soap solution and a soft cloth. When the counter reaches zero, the window automatically closes and the touch screen is active.</p> <p>Note: Do not spray cleaning agent directly on the screen, spray it on cloth then wipe surface area.</p>

Routine Care

- Treat the components of your security system as you would any other electrical equipment. Do not slam sensor-protected doors or windows.
- Keep dust from accumulating on the keypad and all protective sensors, particularly on motion sensors and smoke detectors.

The keypad case and sensors should be carefully dusted with a dry soft cloth. **Do not spray water or any other fluid on the units.**

Glossary

The following terms are used throughout the guide.

Arm/Disarm: “Armed” simply means that the burglary portion of your system is turned ON and is in a state of readiness. “Disarmed” means that the burglary system is turned OFF, and must be rearmed to become operational. However, even in a “disarmed” state, “emergency” and “fire” portions of your system are still operational.

Bypass: To intentionally leave a specific zone unprotected while the rest of the system is armed.

Console Emulation: Console Emulation Mode allows you to use a TouchCenter interface just as you would a regular system keypad. All commands shown in Console Emulation mode can also be executed from a standard alpha keypad.

Day/Night Zone: An area of protection whose violation causes a trouble indication during the disarmed (DAY) mode and an alarm during the armed (NIGHT) mode.

Delay Zone: An area of protection containing doors most frequently used to enter or exit (typically, a front door, back door, or door from the garage into the building). The delay zone allows sufficient time for authorized entry or exit without causing an alarm. Consult your installer for the entry and exit delay times that have been set for your system during installation and record them on the separate sheet provided in this guide.

Home Screen: The screen that is normally displayed on the TouchCenter when entries are not being made. The TouchCenter will return to this screen with the “Home” button is pressed or when an entry is not received for a pre-set period of time.

Keypad: This is the device through which you operate your system. It contains numbered pushbuttons similar to those on telephones or calculators. These keys control the arming or disarming of the system, and perform other functions that were previously described in this manual.

Lighting Button: A button on the Home screen that allows you to control lights or other devices if so programmed by your system installer.

Glossary (Cont'd)

Master Code: A 4-digit code that gives users access to all of the system's functions, including the ability to program other users in the system. See also "User Code."

Message Button: A button on the Home screen that allows you to record and retrieve voice messages. (FA701CVKP Only)

Night: An arming mode for the system. Your system installer set the type of arming and the zones armed when using this mode.

Partition: An independent group of zones that can be armed and disarmed without affecting other zones or users.

User Code: A 4-digit code that gives users access to the system's basic functions. See also "Master Code."

Zone: A specific protection point (e.g., door or window).

NOTES

NOTES

NOTES

NOTES

NOTES

ONE YEAR LIMITED WARRANTY

Honeywell International Inc., acting through its First Alert Professional Security Systems business ("Seller"), 2 Corporate Center Drive, Melville, NY 11747, warrants its security equipment (the "product") to be free from defects in materials and workmanship for one year from date of original purchase, under normal use and service. Seller's obligation is limited to repairing or replacing, at its option, free of charge for parts, labor, or transportation, any product proven to be defective in materials or workmanship under normal use and service. Seller shall have no obligation under this warranty or otherwise if the product is altered or improperly repaired or serviced by anyone other than the Seller. In case of defect, contact the security professional who installed and maintains your security equipment or the Seller for product repair.

This one year Limited Warranty is in lieu of all other express warranties, obligations or liabilities. THERE ARE NO EXPRESS WARRANTIES, WHICH EXTEND BEYOND THE FACE HEREOF. ANY IMPLIED WARRANTIES, OBLIGATIONS OR LIABILITIES MADE BY SELLER IN CONNECTION WITH THIS PRODUCT, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE OR OTHERWISE, ARE LIMITED IN DURATION TO A PERIOD OF ONE YEAR FROM THE DATE OF ORIGINAL PURCHASE. ANY ACTION FOR BREACH OF ANY WARRANTY, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY, MUST BE BROUGHT WITHIN 12 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL SELLER BE LIABLE TO ANYONE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, OR UPON ANY OTHER BASIS OF LIABILITY WHATSOEVER, EVEN IF THE LOSS OR DAMAGE IS CAUSED BY THE SELLER'S OWN NEGLIGENCE OR FAULT. Some states do not allow limitation on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Seller does not represent that the product may not be compromised or circumvented; that the product will prevent any personal injury or property loss by burglary, robbery, fire or otherwise; or that the product will in all cases provide adequate warning or protection. Buyer understands that a properly installed and maintained alarm may only reduce the risk of a burglary, robbery, fire or other events occurring without providing an alarm, but it is not insurance or a guarantee that such will not occur or that there will be no personal injury or property loss as a result. CONSEQUENTLY, SELLER SHALL HAVE NO LIABILITY FOR ANY PERSONAL INJURY, PROPERTY DAMAGE OR OTHER LOSS BASED ON A CLAIM THE PRODUCT FAILED TO GIVE WARNING. HOWEVER, IF SELLER IS HELD LIABLE, WHETHER DIRECTLY OR INDIRECTLY, FOR ANY LOSS OR DAMAGE ARISING UNDER THIS LIMITED WARRANTY OR OTHERWISE, REGARDLESS OF CAUSE OR ORIGIN, SELLER'S MAXIMUM LIABILITY SHALL NOT IN ANY CASE EXCEED THE PURCHASE PRICE OF THE PRODUCT, WHICH SHALL BE THE COMPLETE AND EXCLUSIVE REMEDY AGAINST SELLER. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. No increase or alteration, written or verbal, to this warranty is authorized.



K6249-2V1 6/07 Rev. A

2 Corporate Center Drive, Melville, Ny 11747
www.firstalertprofessional.com

Copyright © 2007 Honeywell International Inc.