First Alert K14121-1 4/06 Rev. A

## 

149 Eileen Way, Syosset, New York 11791 Copyright@ 2006 Honeywell International Inc.

> Disam: User Code + [1] Pisam: User Code + [1] Arm Away: User Code + [3] Arm Away: User Code + [3] Turn on 1-6; [#] + [4] - Dev. No. Turn on 1-6; [#] + [7] - Dev. No. Turn off 7 & 8: User Code + [#] + [4] - Dev. No. Turn off 7 & 8: User Code + [#] + [7] + Dev. No. Turn off 7 & 8: User Code + [#] + [7] + Dev. No. Turn off 7 & 8: User Code + [#] + [7] + Dev. No. Turn off 7 & 8: User Code + [#] + [7] + Dev. No. Turn off 7 & 9: User Code + [6] + 200 -

# **READYGUARD SERIES**

### SYSTEM FUNCTIONS REFERENCE CARD

This card lists the most common user functions. For further information, refer to User Guide.

#### Security Functions

Check system: STATUS Arm Stay: Press and hold [STAY] or User Code + [STAY] Restart exit delay: [STAY] Arm Away: Press and hold [AWAY] or User Code + [AWAY] Arm No Delay: Press and hold [AWAY] or [STAY] + [NO DELAY] or User Code + [AWAY] or [STAY] + [NO DELAY] Disarm & silence alarms: User Code + [OFF] Bypass a zone(s): User Code + [BYPASS] + Zone No. Chime mode on or off: [FUNCTION] + [CHIME]

#### Message Center

Record a message: FUNCTION + RECORD Stop recording: [OFF] Play back a message: FUNCTION + PLAY Adjust volume: FUNCTION + VOLUME + [3] or [6] Mute announcements: FUNCTION + VOLUME + OFF Restore announcements: FUNCTION + VOLUME + [3] Delete all messages: FUNCTION + DELETE (During message replay)

#### Speaker Phone Operation

To place or answer a call using the speaker phone: [#] + AUX Flash (switch between two calls using call waiting): AUX To hang up: OFF Enable/disable (toggle) ringer: [#] + VOLUME + AUX Return keypad to telephone mode: [#] + AUX

#### Other Functions

Set the time and date: User Code + [FUNCTION] + [63] Add a user code: Master Code + [CODE] + User No. + User Code Delete a user code: Master Code + [CODE] + User No. Test mode on: User Code + [TEST] Test mode off: User Code + [OFF] Use the AUX function: Press and hold <u>AUX</u> key 2 secs. + User Code Send message to pager: Press and hold <u>AUX</u> key 2 secs. (if programmed) Turn ON/OFF 1-6: [FUNCTION] + LIGHTS ON] + Dev No. or [LIGHTS OFF] + Dev No. Turn ON/OFF 7-8: [FUNCTION] + LIGHTS ON] + Dev No. or [LIGHTS OFF] + Dev No.

More Information on other side

K14121-1 4/06 Rev. A

TEXT: BLACK