

# INSTALLATION INSTRUCTIONS

## ***FA147C Security System***



# RECOMMENDATIONS FOR PROPER PROTECTION

The following recommendations for the location of fire and burglary detection devices help provide proper coverage for the protected premises.

## Recommendations For Smoke And Heat Detectors



With regard to the number and placement of smoke/heat detectors, we subscribe to the recommendations contained in the National Fire Protection Association's (NFPA) Standard #72 noted below.

Early warning fire detection is best achieved by the installation of fire detection equipment in all rooms and areas of the household as follows: For minimum protection a smoke detector should be installed outside of each separate sleeping area, and on each additional floor of a multi-floor family living unit, including basements. The installation of **smoke detectors** in kitchens, attics (finished or unfinished), or in garages is not normally recommended.

For maximum protection the NFPA recommends that you install **heat** or **smoke detectors** in the living room, dining room, bedroom(s), kitchen, hallway(s), attic, furnace room, utility and storage rooms, basements and attached garages.

In addition, we recommend the following:

- Install a smoke detector inside every bedroom where a smoker sleeps.
- Install a smoke detector inside every bedroom where someone sleeps with the door partly or completely closed. Smoke could be blocked by the closed door. Also, an alarm in the hallway outside may not wake up the sleeper if the door is closed.
- Install a smoke detector inside bedrooms where electrical appliances (such as portable heaters, air conditioners or humidifiers) are used.
- Install a smoke detector at both ends of a hallway if the hallway is more than 40 feet (12 meters) long.
- Install smoke detectors in any room where an alarm control is located, or in any room where alarm control connections to an AC source or phone lines are made. If detectors are not so located, a fire within the room could prevent the control from reporting a fire or an intrusion.



**THIS CONTROL COMPLIES WITH NFPA REQUIREMENTS FOR TEMPORAL PULSE SOUNDING FOR FIRE NOTIFICATION APPLIANCES.**

## Recommendations For Proper Intrusion Protection

For proper intrusion coverage, sensors should be located at every possible point of entry to a home or commercial premises. This would include any skylights that may be present, and the upper windows in a multi-level building.

In addition, we recommend that radio backup be used in a security system so that alarm signals can still be sent to the alarm monitoring station in the event that the telephone lines are out of order (alarm signals are normally sent over the phone lines, if connected to an alarm monitoring station).

# Table Of Contents

<b>Section 1.</b>	<b>General Description</b> .....	1-1
<b>Section 2.</b>	<b>Installing The Control</b> .....	2-1
	Mounting the Cabinet .....	2-1
	Installing the Lock (if used) .....	2-1
	Installing the Control's Circuit Board Alone or (if used), With a 4204, 4219, or 4229 Module .....	2-2
	Installing Control and RF Receiver Circuit Boards Together in the Cabinet .....	2-3
	Standard Phone Line Connections .....	2-4
	Wiring the AC Transformer .....	2-4
	Installing the Back-Up Battery .....	2-5
	Earth Ground Connections .....	2-5
<b>Section 3.</b>	<b>Installing Remote Keypads</b> .....	3-1
	General Information .....	3-1
	Keypads that May Be Used .....	3-1
	Wiring to the Keypads .....	3-1
	Wiring Run Chart for Devices Drawing AUX Power From the Control .....	3-2
	Mounting the Keypads .....	3-2
	Using A Supplementary Power Supply To Power Additional Keypads .....	3-2
	Preliminary Check-Out Procedure .....	3-3
<b>Section 4.</b>	<b>Basic Hard-Wired Zones 1-6</b> .....	4-1
	Installing the Hard-Wired Zones .....	4-1
	Common Characteristics For Zones 1-6 .....	4-1
	Wiring Burglary and Panic Devices to Zones 1-6 .....	4-1
	Wiring 4-Wire Smoke/Combustion Detectors .....	4-1
	Compatible 4-Wire Smoke/Combustion Detectors .....	4-2
	Programming Hard-Wired Zones .....	4-2
	Programming Panic Keys .....	4-4
	Check-Out Procedure for Hard-Wired Zones .....	4-5
<b>Section 5.</b>	<b>Wired Zone Expansion (4219, 4229)</b> .....	5-1
	General Information .....	5-1
	Installing Zone Expansion Units .....	5-1
	Connections and Set-Up .....	5-1
	Programming Wired Expansion Zones .....	5-2
	Check-Out Procedure for Wired Expansion Zones .....	5-3
<b>Section 6.</b>	<b>Wireless (RF) Zone Expansion (5800 RF Systems)</b> .....	6-1
	Wireless Systems Available .....	6-1
	Wireless System Operation and Transmitter Supervision .....	6-1
	Transmitter Battery Life .....	6-2
	Receiver Supervision .....	6-2
	Wireless System Installation Advisories .....	6-2
	Installation and Setup of the 5881 Series Wireless Receiver .....	6-2
	Installing the 5800TM Module .....	6-2
	Programming the Control For Wireless .....	6-3
	Enrolling 5800 Series Transmitters .....	6-4
	5800 Series Transmitter Input Loops .....	6-4
	5800 Series Transmitter Input Types .....	6-4
	Compatible 5800 Series Transmitters .....	6-5

**Table of Contents (Continued)**

**Section 6. Wireless (RF) Zone Expansion (5800 RF Systems), Continued**

- Programming the Receiver and Transmitters (5800 RF System) ..... 6-6
- Enrolling Transmitters into the System ..... 6-7
  - Enrolling Through Zone Programming (\*56) ..... 6-7
- Check-out Procedure for Wireless Zones ..... 6-11
  - Go/No Go Test ..... 6-11
- To Either Temporarily or Permanently Remove a Zone in \*56 Mode ..... 6-11
- Deleting a Transmitter Serial Number From a Zone in \*56 Mode ..... 6-12

**Section 7 Relay Outputs (and X10 Type Module Usage) ..... 7-1**

- Relay Device Basics ..... 7-1
- 4204 and 4229 Relay Module Connections ..... 7-1
  - 4204/4229 Setup ..... 7-1
  - Supervision ..... 7-2
- Using an X10 Type Module (PF284) ..... 7-2
- Programming Options Defined ..... 7-3
- Programming Output Relays ..... 7-5
  - Example of Output Relay Programming ..... 7-6
- Programming For an X10 Type Module (PF284) ..... 7-7
- Programming For “Chime By Zone” ..... 7-10

**Section 8. FA4285 Phone Module ..... 8-1**

- Mounting the FA4285 Phone Module ..... 8-1
  - General Information ..... 8-1
  - Phone Module Wiring ..... 8-2
  - Caller ID Units ..... 8-2
- Programming The Control For Phone Access ..... 8-4
- Checking the Operation of the FA4285 Phone Module ..... 8-5

**Section 9. External Sounders ..... 9-1**

- Compatible Sounders ..... 9-1
- Sounder Connections ..... 9-2
- Sounder Supervision ..... 9-2
- Programming For External Sounders ..... 9-2
- Testing the Sounder ..... 9-3
- Using the Memory of Alarm Trigger for a Strobe ..... 9-3

**Section 10. Long Range Radio ..... 10-1**

- General Information ..... 10-1
- Wiring Connections ..... 10-1
- Programming for Long Range Radio ..... 10-2

**Section 11. Audio Alarm Verification (AAV) Unit ..... 11-1**

- General Information ..... 11-1
- Wiring Connections for a Non-Ademco AAV Unit ..... 11-1
- Programming ..... 11-2

**Section 12. Final Power Up ..... 12-1**

- General Information ..... 12-1
- Earth Ground Connections ..... 12-1
- AC Power-Up ..... 12-1
- Connecting the Back-Up Battery ..... 12-1
  - Calculating the Battery Size Needed ..... 12-1
  - Making the Battery Connections ..... 12-2
- Auxiliary Device Current Draw Worksheet ..... 12-2

## Table of Contents (Continued)

<b>Section 13. Alpha Descriptor Programming</b> .....	13-1
General Information .....	13-1
Assigning Zone Descriptors .....	13-1
Entering Zone Descriptors (in program Menu Mode *82).....	13-1
Programming the Descriptors .....	13-1
Adding Custom Words.....	13-3
Alpha Vocabulary List (For Entering Zone Descriptors) .....	13-5
Character (ASCII) Chart .....	13-5
<b>Section 14. Sequential Mode (For 5800 Transmitters)</b> .....	14-1
<b>Section 15. System Communication</b> .....	15-1
Report Code Formats .....	15-1
Table of Contact ID Event Codes .....	15-3
Communication Programming.....	15-3
<b>Section 16. Testing The System</b> .....	16-1
Test Procedure .....	16-1
To the Installer .....	16-1
<b>Section 17. System Operation</b> .....	17-1
Security Codes .....	17-1
Installer Code .....	17-1
Assigning the Master Code .....	17-1
Changing the Master Code .....	17-1
User Codes .....	17-1
Duress Code.....	17-2
Keypad Functions .....	17-2
General Information .....	17-2
Arming, Disarming Functions, etc. ....	17-3
Panic Keys .....	17-3
FA4285 Phone Module (if used).....	17-4
Relays Outputs (if used) .....	17-4
Exit Alarm Displays (if programmed).....	17-4
Trouble Conditions .....	17-4
General Information .....	17-4
"Check" and "Battery" Displays.....	17-5
Power Failure .....	17-5
Other Displays .....	17-5
<b>Section 18. Troubleshooting Guide</b> .....	18-1
General Information .....	18-1
Troubleshooting Chart .....	18-1
Contacting Technical Support.....	18-3
<b>Section 19. Specifications &amp; Accessories</b> .....	19-1
Specifications .....	19-1
Accessories (Compatible Devices) .....	19-3
<b>Section 20. Regulatory Agency Statements</b> .....	20-1
<b>Appendix A. Limitations Of This Alarm System</b> .....	A-1
<b>Appendix B. FA147C Summary Of Connections Diagram</b> .....	(Inside Back Cover) B-1
<b>Limited Warranty</b> .....	Back Cover

*Note: A Programming Guide is supplied in addition to this manual.*

# **List Of Figures**

Figure 2-1.	Installing the Cabinet Lock .....	2-1
Figure 2-2.	Installing The PC Board Alone, or (if used), With a 4204, 4219, or 4229 .....	2-2
Figure 2-3.	Installing the PC Board & RF Receiver (if used) Together in the Cabinet .....	2-3
Figure 2-4.	Standard Telephone Line Connections .....	2-4
Figure 3-1.	Keypad Connections to the Control Board .....	3-2
Figure 3-2.	Using a Supplementary Power Supply for Keypads .....	3-3
Figure 4-1.	4-Wire Smoke Detector Connections .....	4-2
Figure 5-1.	Wiring Connections, 4219 and 4229 .....	5-1
Figure 6-1.	5881, and 5882 Wireless Receivers (cover removed) .....	6-3
Figure 7-1 .	4204 Connections To Control .....	7-2
Figure 7-2.	4229 Connections To Control .....	7-2
Figure 7-3.	Connecting an X10 Type Module (PF284).....	7-3
Figure 8-1	FA4285 Phone Module Wiring Connections.....	8-3
Figure 9-1	Sounder Wiring.....	9-2
Figure 9-2	Using the Memory of Alarm Trigger for a Strobe .....	9-3
Figure 10-1	Long Range Radio Connections .....	10-1
Figure 10-2	Using the Memory of Alarm Voltage Trigger With Long Range Radio .....	10-1
Appendix B.	FA147C Summary of Connections Diagram .....	Inside Back Cover, B-1

## ***How To Use This Manual***

This manual is written to accommodate both the new and the experienced installer of ***First Alert Professional*** products. A general description of the entire system is located in the first section of this manual. This includes the various features available and the optional peripheral devices that the system can support.

This manual is divided into separate sections. A section covering the hardwired zones (1–6) provides complete information on the capabilities of each basic hardwired zone, including its usage, programming, and a checkout procedure. Separate sections are also provided for each peripheral device that can be used in the system and includes wiring setup, programming requirements, and a checkout procedure for that device. The checkout procedures ensure that the specific device is operational in the system before proceeding to the next section. This “sectional” arrangement is also particularly useful if you are making an addition to the system at a later time (e.g., adding Wireless zones, adding an FA4285 Phone Module, etc.).

Without an understanding of the programming method for this system, you will not be able to successfully perform the required programming. Before any programming is attempted, we therefore urge you to read the “Mechanics of Programming” and the “Data Field Descriptions” in the separate **Programming Guide** that has been supplied.

If you are an experienced user of *First Alert Professional* products, you may choose to wire and then program the entire system at one time. If so, refer to “Mechanics of Programming” and “Data Field Descriptions” in the separate Programming Guide after the hardware setup is complete. The Programming Guide contains all of the information you will need to program the system (including a blank Programming Form), except for detailed programming for hardwired zones 1–6, wired expansion zones, and wireless zones. These are contained in the following sections in this manual:

*Section 4. Basic Hardwired Zones 1–6, Section 5. Wired Expansion Zones, and Section 6. Wireless (RF) Zone Expansion (5800 RF Systems).*

This manual uses various icons to denote critical notes and technical tips to assist you with the installation of this system (see next page).


# CONVENTIONS USED IN THIS MANUAL



---

These notes include specific information which must be followed if you are installing this system for a UL Listed application.

---



---

These notes include information that you should be aware of before continuing with the installation, and which, if not observed, could result in operational difficulties.


---



---

This symbol indicates the presence of critical information that, if not observed, could seriously affect the operation of the system, or could cause damage to the system. Please read each warning carefully. This symbol also denotes warnings about physical harm to the installer.

---



Many system options are programmed in an interactive menu mode by responding to Alpha keypad display prompts. These prompts are shown in a double-line box.

★20 When programming the system, data fields are indicated by a “star” [★] followed by the data field number.

**PRODUCT MODEL NUMBERS:** Unless noted otherwise, references to specific model numbers represent *First Alert Professional* products.

# General Description

## In This Section

### ◆ General Information

## General Information

The FA147C is a control that supports up to 36 zones, using basic hard-wired, wired expansion, and/or wireless, plus remote keypads.

## Basic Hardwired Zones

Provides 6 basic hardwired zones having the following characteristics:

- Zones 1–6 response time is 300–500 milliseconds.
- Zone 3 – programmable for fast response time (10 milliseconds).
- EOLR supervision supporting N.O. or N.C. sensors
- Zones 1–6 can be programmed for fire and will support as many 4-wire smoke or heat detectors as can be powered from the control.
- Zones, 95, 96 and 99 – keypad Panics.
- Zone 8 – Duress.
- Zone 9 – Expansion Module Failure/Trouble.

## Optional Expansion Zones (up to 30 total, wired and wireless zones)

### **Wired Expansion:**

- Supports up to 8 additional wired zones using a 4219 expansion module or 4229 expansion/relay module. Zones will have the following characteristics:
- EOLR supervision supporting N.O. or N.C. sensors
- 300–500 msec normal response with an option for fast (10–15 msec) response on loop A (first expansion zone).

### **Wireless Expansion:**

- Supports up to 30 wireless zones (less, if using wired expansion zones).
- Requires the use of a 5881 (5882 in Canada) type RF Receiver (with 5800 series wireless transmitters), as shown below.

<b>Receiver Model</b>	<b>No. of Zones</b>	<b>Transmitter Type</b>
5881L/5882L*	Up to 8	5800
5881M	Up to 16	5800
5881H/5882H*	Up to 30	5800

\* Only 5882L or 5882H available for use in Canada.

## Remote Keypads

Up to 4 of any of the following keypads may be used:

*Fixed-Word Keypads:* **FA210KP**, **FA245KP**, and **FA250KP** (Fixed-word displays).

*Alpha Keypad:* **FA550KP** (2-line alphanumeric display).

## Programming

- Programmed options are stored in electrically erasable, non-volatile EEROM memory (information can be reprogrammed at any time and will not be lost in the event of a power loss).
- Upon exiting the programming mode after programming at the system site, all programmed data is automatically uploaded to the central station; if the upload was successful, a message to that effect will be displayed at the keypads.



For programming from a keypad, an FA550KP 2-line Alpha keypad must be connected (but need not necessarily stay in the system).

---

## Security Codes

- One Master code for entire system (user 2). Installer code is user 1.
- Up to 5 secondary user codes (for users 3–7). If **not** using a Duress code, user code 8 is available for an additional user.
- One duress code (user 8) which, when used to disarm or arm the system, will send a silent duress message to the central station.

## Keypad Panic Keys

- Up to 3 programmable panic key functions are provided, designated as Zones 95, 96 and 99.
- Activated by wired and wireless keypads.

## Paging Feature

If the paging feature has been programmed for your system, a pager will respond to certain conditions as they occur in your system, and display code numbers on the pager indicating the type of condition that has occurred.

## Quick Arm Feature

“Quick Arm” may be programmed, allowing use of the [#] key in place of the security code for arming (Quick Arm will not work unless the Master code has been programmed into the system).

## Optional Output Relays

- Up to 4 relays using one Ademco **4204 Relay Module**
- Up to 2 relays using one Ademco **4229 Zone Expansion/Relay Module**
- Actions programmable to respond to zone activity or manual keypad entries

## Optional Phone Module

- Supports the **FA4285 Phone Module**.
- Provides access to the system via on premises or off-premises phones for arming, disarming, etc., plus control of relay outputs.

## Optional Long Range Radio

- Allows all messages that have been programmed to go to the primary telephone number to be reported additionally to an Ademco **7720 PLUS** or **7820** radio.

## Alarm Output

- Provides a 12VDC, 2 AMP output that can drive the compatible sounders listed in the *External Sounders* section (assumes a fully charged battery is connected).
- Steady output for Burglary/Panic, or temporal pulse sounding output for Fire notification, as required by UL.
- Uses current limiting circuitry for protection.
- Provision for Bell supervision.

## Voltage Trigger for X10 Type Module

4-pin header serves as voltage trigger for an optional X10 type module (PF284 or equivalent). Keyed connector with flying leads is supplied for connection from header to X10 type module. Requires use of relay module (4204 or 4229), which must be programmed appropriately, as indicated in the instructions.

## Memory of Alarm Voltage Trigger

A 3-pin header serves as a voltage trigger for connection to an optional strobe light, etc. Will remain activated following any alarm that activates the external sounder, until the system is disarmed.

## Chime/Chime by Zone

Chime, when on, will normally sound when *any* entry/exit or perimeter zone is faulted. However, a “chime by zone” option, when programmed, allows only *specific zones* to chime if they are faulted when the system is in the chime mode.

## Quick Chime Feature

The [#] key can be used in place of the security code when turning Chime on and off.

## Optional Bell Supervision

Red jumper on control board, when cut, will provide supervision of bell wiring (when bell is wired with EOL resistor, as indicated in the instructions).

## Auxiliary Power Output

- Provides 12VDC, 500mA maximum. Uses current limiting circuitry for protection.
- This output interrupts for smoke detector reset if 4-wire smoke detectors are used on basic wired zones 1–6 (if programmed for fire).
- The system can be uploaded, downloaded, or controlled via an IBM compatible computer, Windows downloading software and a HAYES modem specified by First Alert.

*Keypad programming consists of:*

- Data field programming
- Interactive (menu) mode programming



For programming from a keypad, an FA550KP 2-line Alpha keypad must be connected (but need not necessarily stay in the system).

---

## Communication Formats Supported

- 4+2 Ademco Low Speed (Standard).
- 4+2 Radionics (Standard).
- 4+2 Ademco Express.
- Ademco Contact ID.

## Zone Descriptors

You can assign Alpha descriptors to all zones (useful only when using Alpha keypads and/or the FA4285 Phone Module).

## AC Power Supply

Uses 1317 120VAC plug-in transformer with 16.5VAC 25VA output.

## Back-Up Battery

Rechargeable (Gel type) 12VDC, 4AH minimum.



# Installing The Control

## In This Section

- ◆ *Mounting the Cabinet*
- ◆ *Installing the Lock*
- ◆ *Installing the Control's Circuit Board Alone, or (if used), with a 4204, 4219 or 4229 Module*
- ◆ *Installing the Control and RF Receiver Circuit Boards Together in the Cabinet*
- ◆ *Standard Phone Line Connections*
- ◆ *Wiring The AC Transformer*
- ◆ *Installing The Back-Up Battery*
- ◆ *Earth Ground Connections*

## Mounting the Cabinet

Mount the control cabinet to a sturdy wall using fasteners or anchors (not supplied), in a clean, dry area which is not readily accessible to the general public. Four mounting holes are provided at the back of the cabinet.


If an RF Receiver is being used and you intend to mount its PC board within the cabinet, note the following:

- Do not mount the cabinet on or near metal objects. This will decrease RF range and/or block RF transmissions from wireless transmitters.
- Do not locate the cabinet in an area of high RF interference (revealed by frequent or prolonged lighting of the LED in the receiver after it is operational). Random flicker is OK.

## Installing the Lock (if used)


Use an Ademco No. N6277 Cam Lock and No. N6277-1 Push-On Clip (Retainer Clip).

**Note:** The cabinet can be closed and secured *without* a lock by using 2 screws in the cover's edge.



1. Remove the cabinet door. *It is easily removable for servicing and is easily re-installed.*
2. Remove the lock knockout from the control cabinet door. Insert the key into the lock. Position the lock in the hole, making certain that the latch will make contact with the latch bracket when the door is closed.
3. Hold the lock steady, and insert the retainer clip into the retainer slots. Position the clip as illustrated in order to permit easy removal.

Figure 2-1. Installing the Lock



Before installing the cabinet's contents, remove the metal cabinet knock-outs required for wiring entry. Do not attempt to remove the knockouts after the circuit board has been installed.

## Installing the Control's Circuit Board Alone, or (if used), with a 4204, 4219 or 4229 Module

### Installing the Control's Circuit Board in the Cabinet (See Figure 2-2)

1. Hang two *short* mounting clips provided (natural color) on the raised cabinet tabs (see Detail B below).
2. Insert the top of the circuit board into the slots at the top of the cabinet. Make sure that the board rests on the correct row (see Detail A).
3. Swing the base of the board into the mounting clips and secure the board to the cabinet with the accompanying screws (see Detail B).

**Important Note:**

The two *short* mounting clips (natural color) are to be used on the circuit board even when the RF receiver is mounted above it

### Installing the 4204, 4219 or 4229 Module in the Cabinet (See Figure 2-2)

Any one of these units can be mounted in the cabinet with the main control board, if used.

1. Insert self-tapping screws (provided) in two adjacent raised cabinet tabs. Leave the heads projecting 1/8".
2. Hang the unit on the screw heads via two of the slotted holes at the rear of its housing, as shown in Figure 2-2.
3. The 4204's cover can be left off if the unit's DIP switch is set with its position 1 "ON" (to the right) as shown in its instructions. The 4219's or 4229's cover can be left off if the cover tamper jumper is placed in its upper (not tampered) position (see Detail C).

The tampered cover is necessary for installations outside of the control's cabinet.





Figure 2-2.

Installing the PC Board in the Cabinet Alone, or (if used), with a 4204, 4219, or 4229


## Installing the Control and RF Receiver Circuit Boards Together in the Cabinet (Figure 2-3)

1. Hang two *short* (black) mounting clips (provided with receiver) on the raised cabinet tabs, as shown in Detail B in Figure 2-3.
2. Insert the top of the receiver board (removed from its own case as described in its instructions) into the slots at the top of the cabinet, as shown in Detail A in Figure 2-3. Make sure that the board rests on the correct row of tabs, as shown.
3. Swing the base of the board into the mounting clips and secure it to the cabinet with the accompanying screws (see Detail B in Fig. 2-3).
4. Insert the top of the control's board into the slot in the clips and position two *long* (red) clips at the lower edge of the board (see Detail C).
5. Swing this board into place and secure it with two additional screws.
6. Insert grounding lugs (supplied with the receiver) through the top of the cabinet into the *left-hand* terminals of the antenna blocks (at the upper edge of the receiver board) and secure them to the cabinet top with the screws provided, as shown in Detail D.
7. Insert the receiver's antennas through the top of the cabinet, into the blocks' *right-hand* terminals, and tighten the screws.
8. Setup and wiring of the receiver is contained in the *Wireless (RF) Zone Expansion (5800 RF Systems)* section.



**Figure 2-3.**  
Installing The PC Board  
And RF Receiver (if used)  
Together In The Cabinet

## Standard Phone Line Connections



The wiring connections shown here are not applicable if the FA4285 Phone Module is used. Refer to the *FA4285 Phone Module* section for information regarding phone line connections, which are different than those shown here.

Incoming phone line and handset wiring is connected to the main terminal block via a RJ31X jack (CA38A jack in Canada), as indicated below and shown in Figure 2-4.

- Term. 17: Local Handset (TIP – Brown\*).
- Term. 18: Local Handset (RING – Gray\*).
- Term. 19: Incoming Phone Line (TIP – Green\*).
- Term. 20: Incoming Phone Line (RING – Red\*).

\* Colors of wires in Direct Connect Cord.




Figure 2-4. Standard Telephone Line Connections

## Wiring The AC Transformer

### 1317 Transformer

Wire the transformer to terminals 1 and 2 on the control board. See the wiring table below for wire gauge to use.

WIRING TABLE	
Distance of Transformer From the Control Panel	Wire Gauge To Use
Up to 50 feet	# 20
50–100 feet	# 18
100–250 feet	# 16



- Wiring to the AC Transformer must not exceed 250 feet using 16 gauge wire.
- Do not plug the transformer into the AC outlet until you are instructed to do so. As a general rule, the control should be de-powered while making any connections to it.

## Installing The Back-Up Battery

1. Place the 12-volt back-up battery in the control cabinet. To calculate the correct battery size for an installation, refer temporarily to “Calculating the Battery Size Needed” in the *Final Power Up* section.



---

Use a 4AH battery or larger for UL installations.

---

2. Attach Red and Black wires on the battery connector cable to the control board as follows:
  - a. Red to the positive (+) battery tab **on the control board**<sup>†</sup> (see Summary of Connections Diagram for location, if necessary).
  - b. Black to the negative (-) battery tab **on the control board**<sup>†</sup>.

<sup>†</sup>These wires may have already been connected to the battery tabs on the control board. If so, disregard steps a. and b.



---

**Do not attach the connector cable to the terminals on the battery until you are instructed to do so later in the manual.**

---

## Earth Ground Connections

This product has been designed and laboratory-tested to ensure its resistance to damage from generally expected levels of lightning and electrical discharge, and does not normally require an earth ground. If an earth ground is desired for additional protection in areas of severe electrical activity, **terminal 21** on the control board, or the cabinet, may be used as the ground connection point. The following are examples of good earth grounds available at most installations:

### **Metal Cold Water Pipe:**

Use a non-corrosive metal strap (copper is recommended) firmly secured to the pipe to which the ground lead is electrically connected and secured.

### **AC Power Outlet Ground:**

Available from 3-prong, 120VAC, power outlets only. To test the integrity of the ground terminal, use a three-wire circuit tester with neon lamp indicators, such as the UL-Listed Ideal Model 61-035, or equivalent, available at most electrical supply stores.



# Installing Remote Keypads

## In This Section

- ◆ *General Information*
- ◆ *Keypads That May Be Used*
- ◆ *Wiring to the Keypads*
- ◆ *Mounting the Keypads*
- ◆ *Using a Supplementary Power Supply to Power Additional Keypads*
- ◆ *Preliminary Check-out Procedure*


## General Information

This section lists the wired keypads that may be used and provides instructions for wiring and mounting the keypads.

A preliminary check-out procedure is also provided to ensure that the connected keypads are functioning properly in the system.

## Keypads That May Be Used

- Fixed-Word Display: FA210KP, FA250KP, FA245KP
- Alpha Display: FA550KP
- Up to 4 keypads, independent of auxiliary power considerations (you may need to use an auxiliary power supply if the 500mA aux. output is exceeded).



Be sure the keypads are set to the non-addressable mode (address 31).

## Wiring To The Keypads

1. Determine wire gauge by referring to the wiring length/gauge chart below. For devices (Keypads, RF Receivers, Expansion/Relay units, etc.) connected to a single 4-wire run, determine the current drawn by all units connected to the single wire run, then refer to the Wiring Run chart to determine the maximum wire length that can be safely used for each wire size. Current draw for all devices can be found in the *Specifications and Accessories* section.

**Note:** Refer to “Auxiliary Device Current Draw Worksheet” in the *Final Power Up* section for current draw for all keypads.



Maximum wire lengths for any device that is homerun to the control can also be determined from the chart, based on the current draw of that device alone.

2. Make sure the control is not powered up while making the following connections.
3. Run field wiring from the control to the keypads (using standard 4-conductor twisted wire cable using the wire gauge determined in step 1).
4. Connect remote Keypads to terminals 4, 5, 6, and 7 on the control board.


**Wiring Run Chart For Devices\* Drawing Aux Power From The Control (12V+ & 12V-)**

Wire Size	TOTAL CURRENT DRAWN BY ALL DEVICES CONNECTED TO A SINGLE WIRE RUN			
	50mA or less	100mA	300mA	500mA
#22	500 ft (152m)	250 ft (76m)	80 ft (24m)	50 ft (15m)
#20	750 ft (228.6m)	380 ft (116m)	130 ft (39.6m)	80 ft (24m)
#18	1300 ft (396m)	650 ft (198m)	220 ft (67m)	130 ft (39.6m)
#16	1500 ft (457m)	1000 ft (305m)	330 ft (100.5m)	200 ft (70m)

\* Includes Keypads, RF Receivers, Expansion/ Relay Units, or the FA4285 Phone Module.



The length of all wire runs must not exceed 1500 feet (457m) when unshielded quad conductor cable is used (750 feet if shielded cable is used). This restriction is due to the capacitive effect *on the data lines* when quad cable is used.



**Figure 3-1. Keypad Connections To The Control Board**

**Mounting the Keypads**

1. **Make sure keypads** are set to non-addressable mode (address 31), which is the factory default setting. Refer to the instructions provided with the keypad for address setting procedure.
2. **Mount the keypads** at a height that is convenient for the user. Refer to the instructions provided with the keypad for mounting procedure.

You can either surface mount or flush mount keypads (using an appropriate Trim Ring Kit: FA550TRK (except FA210KP, FA245KP). Refer to the mounting instructions and template included with the keypad and/or trim ring kit for specific information.

**Using a Supplementary Power Supply to Power Additional Keypads**

The control provides 500mA for powering keypads (up to a maximum of 4) and other devices from the auxiliary power output. The backup battery will supply power to these keypads in the event that AC power is lost.

When the control's auxiliary power load for all devices exceeds 500mA, you can power additional keypads from a regulated, 12VDC power supply (e.g., 487-12 supplies 12V, 250mA; 488-12 supplies 12V, 500mA). Use a UL Listed, battery-backed supply for UL installations.

The 487-12/488-12 power supplies have a backup battery which can power these keypads in the event of AC power loss.




Keypads powered from supplies which do not have a backup battery **will not function** when AC power is lost. Therefore, be sure to power at least one keypad from the Control's auxiliary power output.

Connect the additional keypads as shown in Figure 3–2, using the keypad wire colors shown. Be sure to observe the current ratings for the power supply used.



Make connections directly to the screw terminals as shown in Figure 3–2. Make no connection to the keypad blue wire (if present).

Be sure to connect the negative (–) terminal on the Power Supply unit to terminal 4 (AUX –) on the control.



**Figure 3–2. Using A Supplementary Power Supply For Keypads**

### Preliminary Check-out Procedure

If you want to check that the system is working before connecting field wiring from zones and devices, do the following:

1. Temporarily connect a 1000 ohm end-of-line resistor across each of the basic hard-wire zones 1–6, as shown in the Summary of Connections diagram.

Without actual zone wiring or EOL resistors connected, the keypads in the system will not display the “Ready” message.

2. Power up the system by plugging the AC transformer (previously wired to the control) into an unswitched 120VAC outlet.
3. **Busy – Standby** (Alpha keypads) or **dI** (Fixed-word keypads) will be displayed.

**After approximately 1 minute\***, the green “READY” LED should light, and the word READY (Fixed-word keypads), or DISARMED...READY TO ARM (Alpha keypads) should be displayed.

\* To bypass the 1-minute delay, press # plus 0.

If the “Ready” display does not appear on any of the keypads in the system, or a “Not Ready” message is displayed, check the keypad wiring connections, and make sure each of the 6 basic hard-wired zones has a 1000 ohm resistor connected across its terminals.



If an OC or OPEN CIRCUIT is present on the keypad, data from the control is not reaching the keypad. Check the wiring.

4. When you get the proper “Ready” displays on the keypad(s), the system is functioning properly at this point. Do not remove the EOL resistors until you are ready to make connections to the hard-wired zones, to allow for testing later in the manual.
5. Unplug the AC transformer to de-power the control while other connections are being made to the control (e.g., for hard-wired zones, etc.).



# Basic Hard-Wired Zones 1–6

## In This Section

- ◆ *General Information*
- ◆ *Installing the Hard-Wired Zones*
- ◆ *Wiring Burglary and Panic Devices To Zones 1–6*
- ◆ *Wiring 4-Wire Smoke / Combustion Detectors*
- ◆ *Programming Hard-Wired Zones*
- ◆ *Check-Out Procedure For Basic Hard-Wired Zones (1–6)*

## General Information

This section provides general information for the hard-wired zones in the system, plus specific instructions for installing 4-wire smoke/combustion detectors. Also included is a procedure for programming the hard-wired zones. Make sure the control is not powered up while making connections.

## Installing the Hard-Wired Zones

### Common Characteristics for Zones 1–6

- Response time from 400 milliseconds, nominal.
- Zone 3 can be programmed (in field \*52) for normally closed sensor fast response (10 msec max) to an open (suitable for vibration type contacts). Default response is 400 msec nominal, which should be used for most standard contacts.
- EOLR supervised zones supporting both open circuit and closed circuit devices.
- As many 4-wire smoke detectors as can be powered from AUX POWER on the control using zones 1–6 (if programmed for fire).

### Wiring Burglary and Panic Devices To Zones 1–6

1. Connect sensors/contacts to the hard-wired zone terminals 8–16 (zones 1–6). See the Summary of Connections diagram .
2. Connect closed circuit devices in series in the high (+) side the loop. The EOL resistor must be connected in series with the devices, following the last device. See the Summary of Connections diagram.
3. Connect open circuit devices in parallel across the loop. The 1,000 ohm EOLR must be connected across the loop wires *at the last device*.




If the EOLR is not at the end of the loop, the zone will not be properly supervised, and the system may not respond to an open circuit on the zone.

### Wiring 4-Wire Smoke/Combustion Detector To Zones 1–6


The system will support as many 4-wire detectors as can be powered from the Auxiliary Power terminals on the control. Refer to the detector's instructions for complete details regarding its proper installation and operation.

1. Connect 12 volt power for the detectors from Auxiliary Power terminals **4** and **5**, (which will interrupt power for fire alarm reset). Observe proper polarity when connecting detectors. See Figure 4–1.
2. Connect detectors (including heat detectors, if used) across the terminals of the selected zone(s). All detectors must be wired in parallel. Zones using heat or smoke detectors must be programmed for Fire.



Remove 1000 ohm EOL resistor if connected across zone terminals. You must connect the EOL resistor across the loop wires at the last detector.

- You must use a supervisory module to supervise power (e.g., System Sensor No. A77-716B Relay module) to meet NFPA 72 requirements.



**Figure 4-1. 4-wire Smoke Detector Connections**

Compatible System Sensor 4-Wire Smoke/Combustion Detectors	
<b>1412</b>	4-wire ionization products of combustion detector.
<b>2412</b>	4-wire photoelectric smoke detector.
<b>2412TH</b>	4-wire photoelectric smoke detector w/135° F (57° C) heat detector.
<b>A77-716B</b>	EOL relay module (supervisory module for wired 4-wire fire zone).
<b>2112/24T</b>	Low-profile 4-wire photoelectric smoke detector w/135° F (57° C) heat detector.

### Programming Hard-Wired Zones

- At least one 2-line Alpha keypad (FA550KP) must be connected to the keypad terminals on the control, and the system powered up.
- Enter the programming mode by keying the following on the Alpha keypad:

**INSTALLER code (3 5 1 9) + 8 + 0.**



Data fields \*22 RF SYSTEM, and \*25 WIRED EXPANSION/RELAY USED, must be programmed as required before continuing.

- Press \*56.** Note that this is an interactive programming mode. You will use it to program zone numbers, zone types, and alarm report codes for hard-wired zones.

If you enabled the 5800 wireless system in field \*22 (a "1" entry), the first screen prompt will be:

**"Program Tool?..**  
**0 = No    1 = Yes"**

Enter "0" (No). The next prompt will ask you to enter zone number.

Enter Zn Num.  
(00 = Quit) 01

Default Zone Number ≠  
after entering \*56

Typical summary display

Zn ZT - RC In L  
04 03 - 00 HW:-

04 Zone Type  
Perimeter 03

Zone Type ≠

Enter the first zone number that you wish to program (or [0][0] to exit zone programming). If you are starting with zone 1, leave as is **and press [\*] to continue.**

If programming another zone, enter the desired zone number, 02, 03, etc. (zone 04 is shown in the next display). **Press [\*] to continue.**

A summary display will appear, showing the present status of that zone's programming.

**Zn** = zone number.

**ZT** = zone type.

**RC** = report code for that zone.

**In** = input type of zone (HW will be displayed).

Values displayed are currently programmed values. The summary display at the left shows the default values (except for zone number 4 shown entered, its default zone type being 03).

If programmed satisfactorily, press [#] to back up one step and enter the next zone number.

If you want to change a zone's programming, press [\*]. A prompt for Zone Type will appear.

Each zone must be assigned a zone type, which defines the way in which the system responds to faults in that zone. See "Response Type Definitions" section in the separate **Programming Guide** for an explanation of each zone type.

Enter the desired zone type code, from the list below

The example on the left shows zone type "03" (Perimeter) entered (this is the default for zone 4).

**Zone Types**

- |                              |  |
|------------------------------|--|
| 00 = Zone Not Used           | 08 = 24 Hr Aux                         |
| 01 = Entry/Exit #1           | 09 = Fire                              |
| 02 = Entry/Exit # 2          | 10 = Interior w/Delay                  |
| 03 = Perimeter               | 15 = 24-Hr Medical/Personal Emergency* |
| 04 = Interior Follower       | 20 = Arm Stay ← 5800                   |
| 05 = Trouble Day/Alarm Night | 21 = Arm-Away ← RF                     |
| 06 = 24 Hr Silent            | 22 = Disarm ← Only                     |
| 07 = 24 Hr Audible           | 23 = No Alarm Response                 |

\* Do not use in UL installations



You must enter "00" as the **zone type** for any hard-wired zones that are not used.

When the display shows the zone type you want, press [\*] to continue.

04 Report Code  
1st 03 2nd 12 3C

The report code consists of 2 hexadecimal digits, each in turn consisting of 2 numerical digits. For example, for a report code of "3C", enter [0][3] for "3" and [1][2] for "C". Refer to the *System Communication* section for complete information on report codes, if necessary.

Enter the desired report code and then press [\*] to continue.

Typical summary display

Zn	ZT	-	RC	In	L
04	03	-	3C	HW:	-

Program Alpha?		
0 = No	1 = Yes	0

Enter Zn Num.	
(00 = Quit)	05

Enter next zone number ≠

A summary display will appear, showing the data for the zone that was just programmed.

If it is programmed satisfactorily, press [\*] to continue.

The next request is to enter Alpha descriptors for the zones. The entry may be done now (enter 1), or may be done at a later time using \*82 CUSTOM ALPHA EDITING (enter 0). See the *Alpha Descriptor Programming* section for specific procedure.

If “0” (no) was entered above, the system will return to the “Enter Zone Number” prompt. Proceed with the programming for the next zone, i.e., [\*] and zone number.

## Programming Panic Keys

When programming panic zones, note the following:

### The defaults for panic key pairs or individual panic keys are:

Zone 95. [1] & [\*], or A: zone type 08 (24-Hr Aux).

Zone 96. [3] & [#], or C: zone type 09 (Fire).

Zone 99. [\*] & [#], or B: zone type 07 (24-hrAudible).

Panic keys are programmed (or re-programmed) by keying the zone number, e.g., 95, 96, or 99, and then entering the desired zone type that will provide the desired panic function for each of these keys, using the list of zone types below.

06 = 24 Hr Silent

07 = 24 Hr Audible

08 = 24 Hr Aux

09 = Fire

15 = 24-Hr Medical/Personal Emergency\*

\* Do not use in UL installations

When you have programmed all the hard-wired zones and Panic keys satisfactorily, exit \*56 interactive mode at the **Enter Zn Num.** prompt by entering [0][0] as the next zone number.

Then exit the programming mode by keying \*99.

See the special notes below, then proceed to the check-out procedure that follows.

### Special Notes on Zone Programming:

- In field \*56, at the summary line for each zone, the entered values can be checked. If you wish to change anything, press [#] to move to the previous entry. Press [#] a number of times to move to earlier entries. Press [\*] to move to later entries again.
- Zone entries can be reviewed by pressing [#][5][6]. Changes cannot be made here, so this is safer for review. Enter the first zone number to be viewed and press [#]. To view each zone, press [#] and the zone number will advance to the next programmed zone. When the end of the list is reached, press [0][0] to exit. This method of exiting may also be done at any time during the review.

- To either temporarily or permanently remove a zone from the system, go into programming mode and press [\*][5][6]. Enter the zone number and press[\*]. At the “Zone Type” prompt, enter [0][0] and [\*]. This sets the type of the zone to Not Used. The next prompt will be "Delete Zone?". "Yes" will permanently remove the zone from the system while "No" will disable it but retain all data except the original zone type. You can then go back to this zone later and put back an active Zone Type to re-enable it.

### Check-Out Procedure For Basic Hard-Wired Zones (1–6)

After installation and wiring of all basic hard-wired devices is completed, the system should be checked, as follows.

1. Make certain that all devices and sensors connected to the hard-wired zones are not in a faulted state. Doors and windows with contacts should be closed, PIRs should be covered (use a cloth to mask them temporarily if necessary).
2. Power up the system by plugging in the AC transformer.
3. With all hard-wired zones intact, the Alpha keypad connected to the system should display:

\*\*\* DISARMED \*\*\*  
READY TO ARM

If the following is displayed,

DISARMED Press \*  
to show faults

press the [\*] key to display the faulted zone(s). Restore any faulted zone(s) as necessary (also make sure that you have connected a 1000 ohm EOL resistor across the terminals of any unused hard-wired zones).

When the DISARMED/READY TO ARM message is displayed, you can proceed to the next step.

4. Fault and then restore every contact or sensor on each zone individually to ensure that it is being monitored by the system. Each time a zone is faulted, the keypad should display the number of the faulted zone. When each zone is restored, the READY TO ARM message should appear again.
5. When you get the proper displays on the keypad(s), the hard-wired zones in the system are functioning properly.
6. Unplug the AC transformer if other connections are going to be made to the control.



# Wired Zone Expansion

## In This Section

- ◆ General Information
- ◆ Installing Zone Expansion Units
- ◆ Programming Wired Expansion Zones
- ◆ Check-Out Procedure For Wired Expansion Zones

## General Information

This section provides information regarding the use of expansion modules (**4219** or **4229**) for expanding the number of wired zones in the system, describes the modules that can be used and their wiring connections, plus a procedure for programming the wired expansion zones.


## Installing Zone Expansion Units

You can add an additional 8 wired expansion EOLR zones to the basic control's 8 hardwired zones, for a total of 14 wired zones, by using a **No. 4219 Wired Expansion Unit**, or **4229 Wired Expansion/Relay Unit**.

- Location**
- You can mount an expansion unit within the control cabinet if space permits. Otherwise, mount the unit outside the cabinet.
- Supervision**
- Units are supervised against removal. Keypads will display **CHECK** and zone **09** if a zone expander is disconnected.
  - Units have tamper protection for security when mounted outside of the cabinet.
- Zone Information**
- Assign zone numbers 10–17 for the eight wired expansion loops (designated A to H). You can program these zones individually (in \*56 interactive mode, as indicated in “Programming Wired Expansion Zones” later in this section.

## Connections and Set-Up


1. Connect the 4219 or 4229 module to the control's keypad terminals (see Figure 5–1).
2. **Set the 4219 or 4229's DIP switch for device address "1"** (switch 2 "OFF" and switches 3, 4, 5 "ON"). Switch 1 determines expansion zone A's response time ("ON" = normal response, "OFF" = fast response). For location of the DIP switch in the unit, see Figure 5–1 (location of DIP switch for both units is in the same location). For additional information, see the instructions supplied with the 4219 and 4229.



## Programming Wired Expansion Zones

- At least one 2-line Alpha keypad (FA550KP) must be connected to the keypad terminals on the control, and the system powered up.
- Enter the programming mode by keying the following on the Alpha keypad:

**Installer code (3 5 1 9) + 8 + 0.**



If RF zones, or wired expansion is used, data fields \*22 RF SYSTEM TYPE , and \*25 WIRED EXPANSION/RELAY USED must be programmed as required before continuing. See the Programming Form in the separate **Programming Guide**.

- Press \*56.** Note that this is an interactive programming mode. It is used to program zone numbers, zone types, and alarm report codes for all zones that are going to be used.

If you enabled the 5800 wireless system in field \*22 (a "1" entry), the first screen prompt will be :

<b>"Program Tool?..</b> <b>0 = No    1 = Yes"</b>
--

Enter "0" (No). The next prompt will ask you to enter zone number.

<b>Enter Zn Num.</b> <b>(00 = Quit)                      10</b>
--

Zone Number ≠

Enter the first zone number that you wish to program (or [0][0] to exit zone programming). Normally, you will be starting with zone 10 (this is the default).

Press [\*] to continue.

<table style="width: 100%; border-collapse: collapse;"> <tr> <td style="text-align: left;">Zn</td> <td style="text-align: left;">ZT</td> <td style="text-align: left;">RC</td> <td style="text-align: left;">In</td> <td style="text-align: left;">L</td> </tr> <tr> <td style="text-align: left;">10</td> <td style="text-align: left;">00</td> <td style="text-align: left;">-</td> <td style="text-align: left;">00</td> <td style="text-align: left;">RF: 1</td> </tr> </table>	Zn	ZT	RC	In	L	10	00	-	00	RF: 1
Zn	ZT	RC	In	L						
10	00	-	00	RF: 1						

A summary display will appear, showing the present status of that zone's programming.

**Zn** = zone number.

**ZT** = zone type.

**RC** = report code for that zone.

**In** = input type of zone (AW for Aux Wired).

**L** = Loop (not used for wired expansion zones)

Values in the summary display are the currently programmed values.

To start programming zone 10, press [\*]. A prompt for Zone Type will appear.

∅ Zone Number

<b>10 Zone Type</b> <b>Perimeter                      03</b>
---

Zone Type 03 entry shown ≠

Each zone must be assigned a zone type, which defines the way in which the system responds to faults in that zone. A detailed explanation of each zone type is provided in "Response Type Definitions" in the separate **Programming Guide**.

Enter the desired zone type from the list below.

00 = Zone Not Used	07 = 24 Hr Audible
01 = Entry/Exit #1	08 = 24 Hr Aux
02 = Entry/Exit #2	09 = Fire
03 = Perimeter	10 = Interior w/Delay
04 = Interior Follower	15 = 24 Hr Medical/
05 = Trouble Day/Alarm Night	Personal Emergency*
06 = 24 Hr Silent	23 = No Alarm Response

\* Do not use in UL installations

When the display shows the zone type you want, press [\*] to continue.

```

10 Report Code
1st 03 2nd 12 3C
    
```

The report code consists of 2 hexadecimal digits, each in turn consisting of 2 numerical digits. For example, for a report code of "3C", enter [0][3] for "3" and [1][2] for "C". Refer to the *System Communication* section for complete information on report codes, if necessary.

Enter the report code and then press [\*] to continue.

```

10 Input Dev:      LP#
AUX WIRED AW:    01
    
```

At the "Input Dev" prompt, enter "2" (AUX Wired) as the input device. The display on the left will appear.

Press [\*] to continue.

Typical summary display

```

Zn  ZT   RC  In  L
10  03  -  3C  AW: -
    
```

A summary display will appear, showing the data for the zone that was just programmed. Note that AW indicates an auxiliary wired (zone expansion module) zone.

If it is programmed satisfactorily, press [\*] to display the next prompt.

```

Program Alpha?
0 = No  1 = Yes   0
    
```

For all zone types, the next request is to enter Alpha descriptors for the zones. The entry may be done now (enter 1) or may be done at a later time using \*82 interactive menu mode (enter 0). We recommend that the entry of Alpha descriptors be done later using \*82 menu mode.

See the *Alpha Description Programming* section for specific procedure.

```

Enter Zn Num.
(00 = Quit)      11
    
```

If "0" (No) was entered above, the system will display a prompt for entry of the next wired expansion zone number. Proceed with the programming for the next zone, as indicated previously.

When all wired expansion zones are programmed satisfactorily, exit \*56 mode at the "Enter Zn Num." prompt by pressing: [0][0][\*].

Exit the programming mode by keying \*99.

Proceed to the check-out procedure that follows.

Enter next zone number ≠

### Check-Out Procedure For Wired Expansion Zones

After you have completed installation of all devices, all wired expansion zones should be checked as follows:

1. Make certain that all devices and sensors connected to the wired expansion zones are not in a faulted state. Doors and windows with contacts should be closed, PIRs should be covered (use a cloth to mask them temporarily if necessary).
2. With all zones intact (including hard-wired zones), the Alpha keypad connected to the system should display:

```

*** DISARMED ***
READY TO ARM.
    
```

If the following is displayed,


```

DISARMED Press *
to show faults
    
```

press the [\*] key to display the faulted zone(s). Restore any faulted zone(s) as necessary (also make sure that you have connected a 1000 ohm EOL resistor across the terminals of unused expansion zones on the 4219 or 4229 module).

When the READY TO ARM message is displayed, you can proceed to the next step.

3. Fault and restore every contact or sensor in each expansion zone individually to ensure that it is being monitored by the system. Each time a zone is faulted, the keypad should display the number of the faulted zone (as programmed by you just previously in \*56 mode). When each zone is restored, the READY TO ARM message should appear again.
4. When you get the proper displays on the keypad(s), the wired expansion zones in the system are functioning properly.



---

If a "CHECK 09" message appears on the display, data from the control is not being received by the zone expander module. Check your wiring and the DIP switch settings on the module.

---

# Wireless RF Zone Expansion (5800 RF Systems)

## In This Section

- ◆ *Wireless systems available.*
- ◆ *Installing the wireless receiver (5881 or 5882\*).*
- ◆ *Installing the 5800TM Module.*
- ◆ *Programming for the wireless receiver (5881 or 5882\*).*
- ◆ *Setup and installation of the wireless transmitters (5800 series).*
- ◆ *Enrolling 5800 series wireless transmitters.*
- ◆ *Checkout procedure for wireless zones (test modes).*

\* 5882L or 5882H in Canada.

## Wireless Systems Available

The FA147C supports wireless zones which may be used exclusively, or in addition to hardwire zones 1 through 6.

The following receivers may be used with this system and each supports the number of zones shown:

TABLE 1

Receiver	Wireless Zones
5881L/5882L <sup>†</sup>	up to 8
5881M	up to 16
5881H/5882H <sup>†</sup>	up to 30

<sup>†</sup> 5882 type receivers are for use in Canada. See special note below.

Any zone *number* from 10–39 can be used as a 5800 series wireless zone (do not confuse this with the number of zones that can be used, which is shown in Table 1 above).



Wireless may not be used in UL Commercial Burglary installations



**In Canada**, 5800 systems must use 5882 series receivers (5882L or 5882H). Information relative to the 5881 series of receivers applies as well to the 5882 series. 5881 and 5882 series receivers can use the same transmitters (5800 type).

## Wireless System Operation and Transmitter Supervision

The receiver responds to status and alarm signals from wireless transmitters [operating at 345MHz for 5800 series (in USA and Canada)] within a nominal range of 200 feet; the receiver then relays this information to the control.

Except for transmitters that may be carried off-premises (such as the 5800 system's 5802, 5802CP, 5804, 5804BD, 5827, and 5827BD), each transmitter is supervised by a check-in signal that is sent to the receiver at 70–90 minute intervals. If at least one check-in is not received from each *supervised* transmitter within a 12-hour period, the "missing" transmitter number(s) and "CHECK" will be displayed on the keypad.

The supervision for a particular transmitter in the 5800 system may be turned off by entering it as a "UR" (unsupervised RF) type, as described later.

5800 series transmitters have built-in tamper protection and will cause a "CHECK" condition to be annunciated if covers are removed.

Each transmitter is also supervised for low battery and will transmit a low battery signal to its receiver, with the battery having at least 30 days of life remaining. A low battery message and appropriate zone number will appear on a wired keypad's display.

If a 5827 or 5827BD wireless keypad has a low battery, it will be displayed as Zone "00" when it transmits.

---

**Note:** After a low or dead battery is replaced, activate the transmitter and then enter the security code + OFF to clear the system's memory of the "Low Battery" signal.

---

### Transmitter Battery Life

- Batteries in the wireless transmitters may last from 4–7 years, depending on the environment, usage, and the specific wireless device being used. External factors such as humidity, high or low temperatures, as well as large swings in temperature may all reduce the actual battery life in a given installation. The wireless system can identify a true low battery situation, thus allowing the installing company or user of the system time to arrange for a change of battery and thus maintain protection for that given point within the system.
- Some transmitters (e.g., 5802, 5802CP) contain long-life, but non-replaceable, batteries. At the end of their life, the complete unit must be replaced (and a new serial number entered into the control).
- Button type transmitters (e.g., 5802, 5802CP, 5804, 5804BD) should be periodically tested by the user for battery life.

### Receiver Supervision

The receiver itself is supervised. A tamper report (zone 9) will be generated:

- a) If communication with the receiver is interrupted
- or
- b) If valid RF signals are not received within 12 hours from at least one *supervised* wireless transmitter (if any are included in the system)

### Wireless System Installation Advisories


Disregard the following advisories if the receiver is mounted in the control cabinet as described in the *Installing The Control* section.

1. Place the receiver in a high, centrally located area for best reception. Do not place receiver on or near metal objects. This will decrease the range and/or block transmissions. Do not mount receivers or transmitters in an attic, where extreme temperatures could prevent proper operation.
2. The RF House ID Code must be entered (in field \*24) for the receiver (applies only if using a 5827/5827BD wireless keypad or 5804BD wireless key in the 5800 RF system).

### Installation and Setup of the 5881 Wireless Receiver

1. Mount the receiver as indicated in the *Installing The Control* section (if not installed previously in the control cabinet). If the receiver is to be mounted outside the cabinet, install it in its desired location (see advisories above).  
Receivers can detect signals from transmitters within a nominal range of 200 feet. Take this into consideration when determining mounting location outside of the cabinet.
2. Make sure that the receiver's DIP switches are set for device address "0", as shown in Figure 6–1 (all switches to the right...OFF).
3. With the control powered down, connect the receiver's wire harness to the control's keypad terminals (4, 5, 6, and 7). Plug the connector at the other end of the harness into the receiver (see Figure 6–1).
4. Refer to the receiver's installation instructions for further installation instructions regarding antenna mounting, etc.

**NOTE:** WHEN CIRCUIT BOARD IS MOUNTED IN CONTROL'S CABINET, GROUNDING LUGS (2) PROVIDED MUST BE INSERTED IN LEFT-HAND TERMINALS OF ANTENNA BLOCKS AND SECURED TO CABINET (SEE RECEIVER'S AND CONTROLS INSTRUCTIONS)



**Figure 6-1. 5881 & 5882 Series Wireless Receivers (cover removed)**

### Installing the 5800TM Module

Installation of this module is necessary only if you are using one or more 5827BD Wireless Bi-directional keypads.

The 5800TM must be located between one and two feet from the 5881 receiver's antennas. *The 5800TM must not be installed within the control cabinet.* Mount the unit using its accompanying mounting bracket.


#### 5800TM Wiring Connections

Connect the 5800TM to the control panel's keypad connection terminals, using the supplied connector with flying leads, as follows:

Wire	Terminal On Control
RED (+12VDC)	Terminal 5
BLACK (Ground)	Terminal 4
GREEN (Data to Control)	Terminal 6
YELLOW (Data from Control)	Terminal 7
BLUE	Not Used

**Do not cut any of the jumpers on the 5800TM when using it with the FA147C.**

For additional information, refer to the 5800TM's instructions.



Other than the 5827, 5827BD and 5804BD, 5800 series devices do not communicate by House ID, but by transmitting a unique serial number to the control. In this case, programming a House ID is not necessary.

### Programming the Control For Wireless

1. A two-line alpha keypad (FA550KP) must be connected and set to address 31, and the system powered up .
2. Enter the programming mode by keying: **Installer Code + 8 + 0.**  
If using a 5800 RF system, field \*22 must be set to "1"

**Note:** If using a 5827/5827BD wireless keypad, or 5804BD wireless key, you **MUST** enter an RF House ID in field \*24. If these units are not used, enter "00".

### Enrolling 5800 Series Transmitters

5800 series transmitters have built-in serial numbers that must be entered into the system using the \*56 or \*83 interactive menu mode, or input to the control via the downloader. The 5800 series transmitters (except 5827 described separately) do not have DIP switches. The procedure for enrolling transmitters into the system in the \*56 mode will be found later in this section (“Enrolling Through Zone Programming”).

### 5800 Series Transmitter Input Loops

Each transmitter's zone number is programmed into the system in \*56 mode. Some transmitters, such as the 5816 and 5817, can support more than one "zone" (referred to as loops or inputs). On the 5816 for example, the wire connection terminal block is loop 1, the reed contact is loop 2. Each loop must be assigned a different zone number and entered separately.

For button transmitters (wireless "keys"), such as the 5804, you must assign a unique zone number to each individual button used on the transmitter. Each button on the transmitter also has a pre-designated loop or input number, which is displayed when entered.

Refer to “5800 Series Transmitter Input Loop Identification” in the separate **Programming Guide**.



The 5816, and 5817 do not supervise their loop wiring for shorts. Therefore, for UL Household Burglary installations, the loop wiring may not exceed 3 feet.



Programming an RF House ID (01–31) in field \*24 **is necessary only if using 5827 or 5827BD wireless keypads, and/or a 5804BD wireless key**. An RF House ID is not necessary for other 5800 series transmitters and the entry should be left at “00” (default) in those cases.

### 5800 Series Transmitter Input Types

All of the transmitters described have one or more unique factory assigned loop inputs. *Each of the inputs requires its own programming zone* (e.g., a 5804's four button inputs require four programming zones).

Transmitters can be entered into the system as one of the following input device types:

Input Device Type	Description
<b>"RF"</b> <b>(Supervised RF)</b>	Sends periodic check-in signals, as well as fault, restore, and low battery signals. The transmitter must remain within the receiver's range.
<b>"UR"</b> <b>(Unsupervised RF)</b>	Sends all the signals that the "RF" type does, but the control does not supervise the check-in signals. The transmitter may therefore be carried off-premises.
<b>"BR"</b> <b>(Unsupervised Button RF)</b>	These send only fault signals. They do not send low battery signals until they are activated. The transmitter may be carried off-premises.



Do not install batteries in wireless transmitters until ready to use, as will be indicated under “Programming the RF Transmitters (5800 RF Systems)” later in this section. Though it is not critical to remove batteries after entering into the system, it is recommended in order to avoid interference while entering additional transmitters into the system.

## Compatible 5800 Series Transmitters

Model	Product	Enter As Input Device Type	Description
5801	Wireless Panic Transmitter	UR or RF	<ul style="list-style-type: none"> <li>Has four pushbuttons, each with a unique input (loop) code.</li> <li>Programmable responses (e.g., Panic, Arm–Stay, Arm–Away, Disarm, etc).</li> </ul>
5802	Pendant (Personal Emergency Transmitter)	BR Only	<ul style="list-style-type: none"> <li>Has single pushbutton.</li> <li>Usually programmed for response type of 24-Hr Audible or 24-Hr Silent (other zone responses are possible).</li> <li>Contains a non-replaceable battery. At the end of the battery's life, the entire unit must be replaced.</li> </ul>
5802CP	Belt Clip (Personal Emergency)	BR Only	Same as 5802.
5802MN	Miniature (Personal Emergency Transmitter)	UR or RF	<ul style="list-style-type: none"> <li>Has single pushbutton.</li> <li>Usually programmed for a response type of 24-Hr. Audible or 24-Hr. Silent (other zone responses are possible).</li> </ul>
5804	Wireless Key Transmitter	BR Only	<ul style="list-style-type: none"> <li>Has four pushbuttons, each with a unique input (loop) code.</li> <li>Programmable responses (e.g., Arm–Stay, Arm–Away, Disarm, etc.).</li> </ul>
5804BD	Bi-Directional Wireless Key	BR	<ul style="list-style-type: none"> <li>House ID must be set.</li> <li>Requires 5800™ Transmitter Module.</li> <li>Can indicate system status via its 2 LEDs and built-in sounder.</li> <li>Has four pushbuttons, each with a unique input (loop) code.</li> <li>Operates the system similarly to wired keypads.</li> </ul>
5806 5807 5808	Wireless Photoelectric Smoke Detectors	RF	<ul style="list-style-type: none"> <li>One-piece smoke detectors with a built-in transmitter.</li> </ul>
5816 5816MN	Door/Window Transmitters:	RF	<ul style="list-style-type: none"> <li>Has two unique input (loop) codes: one for a wired closed circuit contact loop; the other for a built-in reed switch (used in conjunction with a magnet).</li> </ul>
5816 TEMP	Low Temperature Sensor	RF	<ul style="list-style-type: none"> <li>Transmits a fault condition when temperature drops below 45°F.</li> </ul>
5817	Multi-Point Universal Transmitter	RF	<ul style="list-style-type: none"> <li>Has three unique input (loop) codes: one for a "Primary" contact loop with programmable options; the others for two "Auxiliary" closed circuit contact loops.</li> </ul>
5818	Recessed Transmitter	RF	<ul style="list-style-type: none"> <li>Reed switch magnetic contact sensor that is easily concealed in the frame and edge of a door or window.</li> <li>Has a single unique input (loop) code.</li> </ul>



The 5816 and 5817 do not supervise their loop wiring for shorts. Therefore, for UL Household Burglary installations, the loop wiring may not exceed 3 feet.


(Continued)

### Compatible 5800 Series Transmitters (Continued)

Model	Product	Enter As Input Device Type	Description
5819	Shock Processor Transmitter	RF	<ul style="list-style-type: none"> <li>• Connects to externally mounted inertia-type shock detector (not supplied).</li> <li>• Has built-in tampered cover switch.</li> <li>• Has 3 unique input (loop) codes:  <i>Loop 1:</i> Terminals for a wired, N.C. sensor loop.  <i>Loop 2:</i> For a closed circuit contact loop using the built-in reed switch in conjunction with a magnet.  <i>Loop 3:</i> Terminals for a wired, closed circuit contact loop.</li> </ul>
5819WHS 5819BRS	Shock Processor Transmitter	RF	<ul style="list-style-type: none"> <li>• Has built-in shock sensor.</li> <li>• Has built-in tampered cover switch.</li> <li>• Has 3 unique input (loop) codes:  <i>Loop 1:</i> Built-in shock sensor loop wired to TB1 (normally closed)  <i>Loop 2:</i> For a closed circuit contact loop using the built-in reed switch in conjunction with a magnet.  <i>Loop 3:</i> Externally wired, closed circuit contact loop connected to TB2.</li> </ul>
5827	Wireless Keypad	House ID	<ul style="list-style-type: none"> <li>• Can be used to turn the burglary protection on and off.</li> <li>• Features the same built-in panic functions as wired keypads.</li> <li>• The keypad is identified as zone "00" on wired keypads when it transmits with a low battery.</li> </ul>
5827BD	Wireless Two-Way Keypad	House ID	<ul style="list-style-type: none"> <li>• Requires 5800TM Transmitter Module.</li> <li>• Operates the system similarly to wired keypads, including panic functions.</li> <li>• Can indicate system status via its 3 LEDs and sounder.</li> <li>• Includes 3 panic keys.</li> <li>• House ID must be set.</li> </ul>
5849	Glass Break Detector	RF	<ul style="list-style-type: none"> <li>• Requires both sound and shock of breaking glass to cause alarm to be transmitted.</li> </ul>
5890	PIR Detector	RF	<ul style="list-style-type: none"> <li>• Dual element passive infrared detector/transmitter with built-in selectable pulse count.</li> </ul> <p><b>Note:</b> There is a 3-minute lock-out between fault transmissions to conserve battery life.</p>
5899	Magnets		Package of 4 magnets for use with 5816 and 5817 transmitters.

## Programming the Receiver and Transmitters (5800 RF System)

1. At least one 2-line Alpha keypad (FA550KP) should be connected to the keypad terminals, and the system powered up.
2. Enter the programming mode by keying: **Installer Code + 8 + 0**.



Data field \*22 RF SYSTEM TYPE, must be programmed before continuing ("1" must be entered for 5800 RF system).

### 3. \*24. RF HOUSE ID CODE

Default is **00**.

The House ID identifies a 5827/5827BD Wireless keypad, or 5804BD Wireless key if they are to be used (enter 01–31). The keypad should be set to the same ID. If 5827, 5827BD, or 5804BD are not being used, leave as "00".

### Enrolling Transmitters Into The System

There are two methods that may be used to enroll transmitters. The first method is performed in \*56 zone programming mode (which is contained in this section) and describes how to enroll each transmitter into the system as you are entering the zone information.

The second method is called "sequential enrolling", which uses \*83 mode (contained in the *Sequential Mode* section later in this manual. This section describes how to enroll all the transmitters into the system *after all zone information has been entered*.

As an option, the zone programming and sequential modes allow you to use a 5804 **button-type** transmitter as a "program tool." The upper left-hand and right-hand buttons of the "tool" duplicate the \* and # keypad programming functions (left = \*, right = #). The advantage of using a program tool is that it enables remote enrolling. You can move to the physical location of the transmitter to be enrolled, press the upper left-hand button of the program tool, and then trip the intended transmitter (see step 10 for operation).

The transmitter that you use as the program tool can also be used as a transmitter in the system. If you plan to use an existing transmitter, it must first be enrolled into the system as its associated zones. You may then program it as the tool.



Batteries can remain in the transmitters after the transmitters have been enrolled into the system. However, to prevent possible problems, make sure these transmitters are not faulted while other transmitters are being enrolled. Wireless motion detectors should be covered or placed face down to prevent transmissions.

### Enrolling Through Zone Programming (\*56)

1. Enter Programming mode [**Installer Code**] + **8 + 0**.

Enter Zone Programming by pressing \*56. If the system has been set up to use 5800 series RF, and a program tool has been entered, skip to step 4. If no program tool has been entered, the following prompt will appear:

Program Tool?	
0 = No, 1 = Yes	0

2. If a program tool is being used, enter "1." If not using a tool, enter "0" and skip to Step 4.

00 Input S/N:	L
A X X X-X X X X	

3. If "1" is entered, the system will prompt for the unit's serial number. Enter the program tool's serial number using one of the following methods:

a) Enter the 7-digit serial number for the transmitter  
or

b) Press any button on the transmitter. The keypad should beep twice and display the serial number of the tool.

00 Input S/N:	L
A123-4567	3

In this example, the serial number is A123-4567. Once enrolled, the upper left-hand button of the program tool can be pressed to ready the system for enrolling a transmitter.

Pressing the [#] key on the keypad will cause the system to back up to the “Program Tool ?” prompt.

**The serial number for the program tool will only remain in the system until the programming mode is exited. (Entering \*97 will not delete the tool.)**

Press [\*] to continue.

4. Enter the zone number that you wish to program. As an example, zone 10 is shown below.

Enter Zn Num. (00 = Quit)            10
--

Zone 10 entered ≠

Press [\*] to continue.

5. A display will appear, showing a summary of that zone's programming. If the zone is not programmed, the display will appear as shown below. If checking a zone's programming, and it is programmed satisfactorily, press [#] to back up one step and enter the next zone number, as desired. Otherwise, press [\*] to continue.

ZN ZT - RC In: L 10 00 - 00 RF: 1
--------------------------------------

6. Each zone must be assigned a zone type, which defines the way in which the system responds to faults in that zone. Enter the zone type desired (or change it, if necessary). Available zone types are listed below.

- |                              |  |
|------------------------------|--|
| 00 = Zone Not Used           | 08 = 24 Hr Aux                                     |
| 01 = Entry/Exit #1, Burglary | 09 = Fire  |
| 02 = Entry/Exit #2, Burglary | 10 = Interior w/Delay                              |
| 03 = Perimeter               | 15 = 24 Hr Medical/Personal Emergency <sup>†</sup> |
| 04 = Interior Follower       | 20 = Arm-Stay*                                     |
| 05 = Trouble Day/Alarm Night | 21 = Arm-Away*                                     |
| 06 = 24 Hr Silent            | 22 = Disarm*                                       |
| 07 = 24 Hr Audible           | 23 = No Alarm Response (e.g., Relay activation)**  |

<sup>†</sup> Do not use in UL installations

\* These are special zone types used with 5800 series wireless pushbutton units which will result in arming the system in the STAY or AWAY mode, or disarming of the system, depending on the selection made. A button programmed for these functions will report the zone number of the button as the user number that armed/disarmed to the central station.

\*\* This is a special zone type used with 5800 series wireless pushbutton units which can be used on a zone when an output relay action is desired, but with no accompanying alarm (e.g., lobby door access).

∅ Zone Number

10 Zone Type Perimeter            03
---

≠ Entry for Zone Type 03 shown as an example

After entry of zone type, press [\*] to continue.

7. Enter the report code. The report code consists of 2 hexadecimal digits, each in turn consisting of 2 numerical digits. For example, for a report code of "3C", enter [0][3] for "3" and [1][2] for "C."

(Refer to the *System Communication* section for more information about report codes and report code formats.)

10 Report Code
1st 03 2nd 12 3C

Press [\*] to continue.

10 Input Dev: LP #
Rf Trans. RF: 1

Device Type ≠

8. Enter the transmitter input device type as follows:

3 = RF (supervised RF transmitter)

4 = UR (unsupervised RF transmitter)

5 = BR (button type RF transmitter - unsupervised)

(Information about transmitter input types is provided on a previous page.)

Press [\*] to continue.

10 Input Dev: LP#
RF Trans. RF: 1

Loop Number ≠

9. The cursor should now be flashing above the loop number. The default is "1." To accept this, press [\*]. If a different loop number is being used on this transmitter, enter the loop number (1–4). See the loop designations for various transmitters in the separate **Programming Guide**. **The loop number must be entered here, whether using Zone Programming or Sequential Mode to enroll transmitters.**

Press [\*] to continue.

10 Learn S/N?
0 = No, 1 = Yes 0


10. If the transmitter's serial number has not been previously enrolled, you may enter the enrolling mode now by either entering "1" (Yes) **or** by pressing the upper left-hand button of the program tool. **If using the program tool, move to the physical location of the transmitter to be enrolled before pressing the button.** A single short beep will verify that the button has been pressed. The system will respond to the first serial number transmitted after the [\*] key on the keypad or the button of the program tool is pressed. Enter "0" (No) if you wish to enroll the transmitter later, using the "sequential" mode in the *Sequential Mode* section later in this manual.  
If "0" is entered, go to step 13 (skip steps 11 and 12).

10 Input S/N: L
A X X X-X X X X

11. The above prompt is displayed if "1" (Yes) is entered in response to the "Learn S/N?" prompt. The serial number may be enrolled by one of two methods:
- Enter the 7-digit serial number printed on the transmitter using an alpha keypad  
or
  - Activate the transmitter by faulting **or** restoring the input you wish to use for that zone (e.g., press a button, open or close a door, etc.).

The system will enroll the serial number of the first transmitter heard, add the loop number entered to this serial number, display the serial and loop numbers, and cause the keypad to beep twice.

10 Input S/N:	L
A002-4064	1



If the serial and loop number combination is already present in the system, a single long beep will be heard from the keypad. If this happens, the system will not display the serial number, but will wait for a transmission from another transmitter or transmitter loop input.

- The system will then enter an optional confirmation mode so that the operation of the actual programmed input can be confirmed. Activate the loop input or button that corresponds to this zone. **We recommend that you confirm the programming of every transmitter before proceeding to the next zone.**

When the system sees activity on the appropriate input, it will beep three times and display the confirmation message.

10 Confirmed	
A022- 4064	1



At any time during this step, you may press the [\*] key on the keypad or the upper left-hand button of the program tool if you are satisfied with the serial and loop number combination that has been enrolled, regardless of whether or not the enrolled input has been "confirmed."

If the incorrect transmitter has been enrolled, press the # key on the keypad or the upper right-hand button of the program tool to delete the serial number and return to the "Learn S/N" prompt. A single long beep will be heard from the keypad to verify pressing of the upper right-hand button. Then, press "1" (Yes) or press the upper left-hand button of the program tool (a single short beep will verify the system is ready for enrolling) and re-activate the proper transmitter or transmitter loop input.

ZN ZT - RC IN:	L
10 03 - 3C RF:	1 s

- The summary screen for the zone will appear. Note that an "s" indicates that a serial number has, in fact, been enrolled. The cursor will be flashing above the loop number. Press [\*] to accept the zone information.

**Note:** If you entered "0" in step 10 previously, you will not get an indication that the serial number has been enrolled.

If you want to delete the serial number, enter "0" and press [\*]. The system will then prompt, "Delete S/N?" Press the "1" (Yes) key to complete the delete sequence. This process deletes the serial number only, *not* the loop number. The assumption is that the proper loop number was programmed, but the wrong serial or loop number was enrolled. To change the loop number, you must go back through zone programming for that zone and manually enter the loop number over the existing one.

After pressing [\*] to accept the zone information, the following will be displayed.

Program Alpha?	
0 = NO 1 = YES 0	


14. If you want to program alpha descriptors now, enter "1" (Yes). See the *Alpha Descriptor Programming* section for more information.  
If not, enter "0" (No).

This will bring you back to the "Enter Zn Num." prompt for the next zone . When all zones have been programmed, enter "00" to quit.

Enter Zn Num. (00 = QUIT)      11
--------------------------------------

Next Zone number ≠

If you plan to enroll serial numbers in the sequential mode, enter "00" to quit, then go to the *Sequential Mode* section later in this manual to enroll the serial numbers.



When you have finished programming all zones (including all serial numbers), test each zone using the system's TEST mode. Do not use the Transmitter ID Sniffer mode for this, as it will only check for transmission of one zone on a particular transmitter, and NOT the zones assigned to each additional loop.

## Check-Out Procedure for Wireless Zones

### Go/No Go Test

Before mounting transmitters permanently, conduct Go/No Go tests to verify adequate signal strength and reorient or relocate transmitters if necessary.

During this mode, wireless receiver gain is reduced by 50%. Testing in this mode assists in determining good mounting locations for the transmitters and verifies that the RF transmission has sufficient signal amplitude margin for the installed system.

1. Enter the **Installer Code + # + 4**.
2. Once transmitters are placed in their desired locations and the approximate length of wire to be run to sensors is connected to the transmitter's screw terminals, fault each transmitter. *Do not conduct this test with your hand wrapped around the transmitter as this will cause inaccurate results.*
  - The keypad will beep three times to indicate signal reception.
  - If the keypad does not beep, re-orient or move the transmitter to another location. Usually a few inches in either direction is all that is required.
3. Mount the transmitter according to the instructions provided with the transmitter.
4. Exit the GO/NO GO test mode by entering Installer Code + (OFF).

## To Either Temporarily Or Permanently Remove A Zone in \*56 Mode

1. Enter the programming mode (**Installer Code + 8 + 0**) and press [\*][5][6].
2. Enter the zone number and press [\*]. A summary display will appear.
3. Press [\*] again.
4. The "**Zone Type**" prompt will appear. Enter [0][0]. This sets the zone type to "Not Used".

20 Zone Type Not Used      00
----------------------------------

Press [\*] to continue.

20 Delete Zone? 1 = Yes    0 = No
--------------------------------------

- The next prompt will ask whether you want to delete the zone.  
"Yes" will permanently remove the zone from the system, while a "No" will disable it but retain all data except the original zone type. You can then go back to this zone later and put back an active zone type to re-enable it.

**A serial number that has been entered for a 5800 system will not be deleted if the zone is temporarily disabled by answering "No" to the prompt above.**

If only the physical transmitter is to be removed or changed (i.e., its serial number deleted, as when replacing a unit that has a non-removable battery), it can be done in \*56 Mode.

## Deleting a Transmitter Serial Number From a Zone in \*56 Mode

### Procedure

- In the programming mode, press [\*][5][6] to enter Zone Programming mode.
- Then enter the zone number, and press [\*] repeatedly until the cursor is under the RF Input Loop (L) position. This is the specific input (loop) or button on the transmitter that has been entered for that zone.
- Enter a [0] at this point, then press [\*].
- A prompt "**Delete S/N?**" will appear.  
Enter "Yes" to delete the existing serial number from the system.  
Note that the other programmed values for that zone will not be deleted. This will allow you to reinstate a new transmitter in its place.
- A display for the next zone number will appear. To exit, enter "00".
- Press \*99 to exit the programming mode.

# Relay Outputs (and X10 Type Module Usage)

## In This Section

- ◆ *Relay Device Basics*
- ◆ *4204 and 4229 Relay Module Connections*
- ◆ *Using an X10 Type Module (PF284)*
- ◆ *Programming Options Defined*
- ◆ *Programming Output Relays*
- ◆ *Programming for an X10 Type Module*
- ◆ *Programming for "Chime by Zone"*

## Relay Device Basics


Relays are programmable switches that can be used to perform many different functions. They can be used to turn lights on and off, control sounders, or for status indications. In this system, each relay must be programmed as to how to act (ACTION), when to activate (START), and when to de-activate (STOP). Each of these is described below, and in the programming procedure for \*80 and \*81 interactive modes that are provided at the end of this section.

The control supports the following relay modules:

4204 Relay Module (4 relays).

4229 Zone Expander/Relay Module (2 relays).

The 4204 and 4229 relays provide Form C (normally open and normally closed) contacts.



A 4204 cannot be used if a 4219 or 4229 is already being used.

In \*80 and \*81 interactive modes, a series of keypad prompts will request entries for programming of the Relay outputs used in the system. Refer also to "OUTPUT RELAYS WORKSHEET FOR FIELDS \*80 AND \*81" in the blank programming form provided in the separate **Programming Guide**.

## 4204 and 4229 Relay Module Connections

### 4204/4229 Setup

The 4204 unit can be mounted either remotely or in the control panel. The following steps should be taken to properly set up the 4204. The control should be powered down while making wiring connections.




DIP SWITCH


1. **Connect the 4204 or 4229 module to the control's remote keypad terminals (4–7),** using the connector supplied with the module. Use standard 4-conductor twisted cable for long wiring runs.
2. **Set the 4204 or 4229's DIP switch for a device address of "1"** (switch 2 "OFF" and switches 3, 4, and 5 "ON"). Switch 1 determines the unit's cover tamper response ("ON" = disabled, "OFF" = enabled).
3. **Connect the desired field wiring** to the unit's relay contact terminals. See Figures 7–1 and 7–2.

**Supervision**

The 4204 and 4229 modules are supervised against removal. **CHECK** and zone **09** will be displayed if a module is disconnected from the control's keypad terminals (4, 5, 6, & 7).



**Figure 7-1.**  
**4204 Connections to Control**



**Figure 7-2. 4229 Connections to Control**

**Using an X10 Type Module**

An X10 type module (PF284 or equivalent) can be used with the FA147C system to enable you to control lights or other devices connected on the same AC power line.

A keyed connector with flying leads has been supplied for connection of the X10 type module to the X10 trigger on the control board, as shown in Figure 7-3. **Use only the BLACK and YELLOW flying leads for connection to the X10 type module**, as follows:


Yellow lead to the (+) terminal on the PF284 module.

Black lead to the (-) terminal on the PF284 module.

The Red and Green leads on the connector are unused and can be cut back and taped.

Set the PF284 module to INPUT A and MODE 1.

**The required programming when using an X10 type module is provided at the end of this section. See "Programming For an X10 Type Module".**



**Figure 7-3.**  
Connecting an X10 Type  
Device  
(PF284 shown)

## Programming Options Defined

The following will help you understand the programming of OUTPUT RELAYS when using \*80 and \*81 interactive menu modes. The options used to start and stop relays are described below, followed by the actual screen prompts and available entries.

The letter(s) in parentheses after each function described below, such as (A) after ACTION, are those that appear in the various summary displays of programmed data during programming.

### ACTION (A)

The "ACTION" of the relay is how the relay will respond when it is activated by the "START" programming. You may want the relay to activate momentarily, to pulse on and off continuously, or to remain activated until some other event occurs to stop it.

There are four different choices of actions:

- **Activate for 2 seconds and then reset.** (Relay Action, A, = 1.)
- **Activate and remain activated** until stopped by some other event. (Relay Action, A, = 2.)
- **Pulse On And Off** until stopped by some other event. (Relay Action, A, = 3.)
- **Not used** when the relay is not used. (Relay Action, A, = 0.)

**START (STT).** The "START" programming determines when and under what conditions the relay will be activated. The following START options are available.

- A) 1. EVENT (EV)** is the condition (Alarm, Fault, Trouble) that must occur to a zone or group of zones (zone list) in order to activate the relay. These conditions apply *only* when a zone list is used. The different choices for "EVENT" are listed below and in the "Programming Output Relays" section that follows.
- **ALARM** Relay action begins upon any alarm in an assigned zone in the zone list. (Event , EV, = 1.)
  - **FAULT** Relay action begins upon any opening or short in an assigned zone in the zone list. (Event , EV, = 2.)
  - **TROUBLE** Relay action begins upon any trouble condition in an assigned zone in the zone list. (Event , EV, = 3.)
  - **NOT USED** Relay action is not dependent upon one of the above events. (Event, EV, = 0.)

2. **ZONE LIST (ZL)** is a group of zones to which the “EVENT” applies in order to activate a particular relay. Note that there are a total of 3 zone lists that can be programmed in \*81 mode; when the selected EVENT (Alarm, Fault or Trouble) occurs in **any** zone in the selected “Start” ZONE LIST (1, 2, or 3), activation of the selected relay will START.

B) 1. **ZONE TYPE/SYSTEM OPERATION (ZT)**. If a System Operation, such as “DISARMING” (22) or “ANY FIRE ALARM (39),” is to activate the relay, the appropriate choice would also be entered under the “ZONE TYPE” option. “ZONE TYPE” is used independently of the “EVENT/ZONE LIST” combination.

If a specific "ZONE TYPE" is chosen, any zone of that response type going into alarm, trouble, or fault will cause the relay to activate as selected in "ACTION." If the same “ZONE TYPE” is also chosen for the STOP programming, any zone of that type that *restores* will de-activate the relay.

If a "SYSTEM OPERATION" is chosen (e.g., End of Exit Time), that operation will cause the relay to activate as selected in "ACTION." The different choices for "ZONE TYPE" and "SYSTEM OPERATION" are listed in “Programming Output Relays” later in this section, and in the Programming Form in the separate **Programming Guide**.

**STOP (STP):** The "STOP" programming determines when and under what conditions the relay will be de-activated. The following options are available:

A) 1. **RESTORE ZONE LIST (ZL)**. If a "ZONE LIST" is used as the “Stop” event, the relay will de-activate when **all** the zones in that list restore from a previous fault, trouble, or alarm condition. This will occur regardless of what is programmed to "START" the relay; therefore, a "RESTORE ZONE LIST" would normally only be used when a "ZONE LIST" is used to start the relay.

B) 1. **ZONE TYPE/SYSTEM OPERATION (ZT)**. Instead of using a "RESTORE ZONE LIST", a specific zone (response) type or system operation action can be selected to de-activate the relay.

If a specific "ZONE TYPE" is chosen, any zone of that response type that restores from a previous alarm, trouble, or fault condition will cause the relay to de-activate.

If a "SYSTEM OPERATION" is chosen, that operation will cause the relay to de-activate.

If relay outputs are used, two keypad entries available to the user are included among the “System Operation” choices that may be programmed (34 and 35). They can manually activate or de-activate the relay(s) for starting or stopping some action, such as turning lights on or off, etc.

These entries are: **Security Code + [#] + [7]**  
and **Security Code + [#] + [8]**

**Note:** Whichever entry is used to start the action cannot also be used to stop it. The opposite action must either be performed by the other keypad entry or by some other event or operation offered in the programming section.

For example, if **Security Code + [#] + [7]** was used to turn a light **on**, this entry cannot then be used to turn the light **off** – you must use **Security Code + [#] + [8]** to turn the light off. The reverse is also true.




If a relay is energized before a 4-wire smoke detector is reset, the relay will be stopped by the interruption of Aux. Power that resets the smoke detector. If this is not desired, the power to the relay unit should be supplied from another 12V power source (e.g., the same source that is powering external equipment through the relay contacts).

## Programming Output Relays

- At least one 2-line Alpha keypad (FA550KP) must be connected to the keypad terminals on the control, and the system powered up. Enter the programming mode by keying the following on the Alpha keypad:

**INSTALLER code + 8 + 0.**



Program field \*25 WIRED EXPANSION/RELAY USED must be programmed as required before continuing (i.e., 2 = 4229, 3 = 4204).

- Press \*80.** Note that this is an interactive menu programming mode. It is used to program all output relays used in the system (4204 or 4229 modules). Refer to the Programming Form worksheet in the separate **Programming Guide** for \*80 Interactive Mode.  
*If field \*25 has not been programmed for a 4204 or 4229 relay, skip this field.*

### Output Relay Displays

Enter Relay No. (00 = Quit)	01
--------------------------------	----

Upon pressing \*80, this screen will appear.

Enter the Relay Number 01, 02, 03, or 04 for a 4204, or 01 or 02 for a 4229 (or 00 to end these entries).

The [\*] key is used to accept an entry and advance to the next prompt.

The [#] key is used to revert back to the last question to check or change an entry. Press [\*] to go forward again.

Press the [\*] key to continue.

02    A   EV   ZL   ZT
STT 0   0   0   00

This screen displays a summary of the current Relay START programming (for this example, relay 02 has been selected).

Press the [\*] key to continue.

02    A   EV   ZL   ZT
STP -   -   0   00

This screen displays a summary of the current Relay STOP programming.

Press the [\*] key to continue.

02 Relay Action	0
No Response	

Enter the desired relay action as listed below.

0 = No response

1 = Close for 2 seconds

2 = Close and Stay Closed

3 = Continuous Pulse on & off (1 sec ON, 1 sec OFF)

Press the [\*] key to continue.

02 Start Event	0
Not Used	

Enter the event to START the relay:

0 = Not used; 2 = Fault; 1 = Alarm; 3 = Trouble

A zone list must be used in conjunction with an event. If a zone type/system operation is to be used instead of an event, enter 0.

Press the [\*] key to continue.

02 Start:            Zn List	0
No List	

If a zone list will be used to START the relay action, enter the zone list number (to be programmed in field \*81): 1, 2, or 3. If not used, enter 0.

Press the [\*] key to continue.

02 Start:            Zn Typ	00
Not Used	

If a zone type or system operation will be used to START the relay action, enter the appropriate two-digit code (see table that follows). If not, enter 00.

Press the [\*] key to continue.

CHOICES FOR ZONE TYPES		
00 = Not Used	04 = Interior Follower	08 = 24 Hr Aux
01 = Entry/Exit #1	05 = Trouble Day/Alarm Night	09 = Fire
02 = Entry/Exit #2	06 = 24 Hr Silent	10 = Interior w/Delay
03 = Perimeter	07 = 24 Hr Audible	15 = 24 Hr Medical/Personal Emergency*
* Do not use in UL installations		
CHOICES FOR SYSTEM OPERATION		
20 = Arming-Stay	33 = Any Burglary Alarm	39 = Any Fire Alarm
21 = Arming-Away	34 = Code + # + 7 Key Entry	40 = Bypassing
22 = Disarming	35 = Code + # + 8 Key Entry	41 = AC Power Failure
31 = End of Exit Time	36 = At Bell Timeout**	42 = System Batt. Low
32 = Start of Entry Time	38 = Chime	58 = Duress
**Or at Disarming, whichever occurs earlier.		

02 Stop:	Zn List
No List	0

If a zone list will be used to STOP, or restore, the relay action, enter the zone list (ZL) number 1, 2, or 3 (to be programmed in \*81 mode). If not used, enter 0.

Press the [\*] key to continue.

02 Stop:	Zn Typ
Not Used	00

If a zone type or system operation will be used to STOP the relay action, enter the appropriate two digit code (see the "Zone Type" choices listed above). If not, enter 00.

Press the [\*] key to continue.

02	A	EV	ZL	ZT
STT	0	0	0	00

This screen again displays a summary of the current relay START programming.


Press the [\*] key to continue.

02	A	EV	ZL	ZT
STP	-	-	0	00

This screen again displays a summary of the current relay STOP programming.

Press the [\*] key to continue.

The display then returns again to the first screen so that the next relay number to be programmed can be entered, or enter [0][0] to end relay programming.



Previously entered data can be reviewed by pressing [#] [8] [0]. After the relay number is chosen, press [\*] to go to the next screens. This is a review mode only, and data cannot be changed.

### Example of Output Relay Programming

**A light is to be turned on when any one of 3 specific zones are faulted or when any 24-hour auxiliary zone is disturbed. We want to turn off the lamp manually without affecting the arming status of the system.**

In field \*80 we choose Output Relay 01 and program the Action (A) to be "2" (Close and stay closed). The Event we are looking for to *start* the relay action is a fault, so we will program "2" in (EV). We will use Zone List 1 for the 3 specific zones, so we will program "1" in (ZL), and we will program these 3 zones in field \*81's Zone List 1.

The second condition for turning on the indicator is triggering a 24-hour aux. zone (Zone Type 08), so we will program (ZT) as "08".

To *stop* relay action and turn off the indicator, we do not want to use a restore of any zone, so we will program a "0" for the "Restore of" Zone List (ZL). To choose a manual entry of User Code + [#] + [7] to turn it off, we will program (ZT) as "34" (see "Choices for System Operation" in the table above).

If no other relay is to be programmed we go to field \*81 and program the 3 specific zones in Zone List 1.

**Press \*81.** (Zone Lists for Output Relays).

This interactive menu mode is applicable only if you have programmed \*80 mode.

Refer to the Programming Form worksheet for \*81 Mode in the separate **Programming Guide**.

#### Zone List Displays

Zone List No. (00 = Quit)	01
------------------------------	----

Upon keying \*81, this screen will appear. Enter the Zone List Number 01, 02, or 03 to program (or 00 to end these entries). Press the [\*] key to advance.

In the following displays, zone list 01 has been selected for programming.

01 Enter Zn Num. (00 = Quit)	00
---------------------------------	----

Enter each zone number to add to the zone list by first entering the zone number, then pressing the [\*] key (example, 01\*, 02\*, 03\*).

After all zones desired are entered, press 00 to advance.

01 Del Zn List? 0 = No 1 = Yes	0
-----------------------------------	---

To delete the zone list, enter 1 (Yes). All zones in the zone list will be deleted automatically and programming will return to the first screen.

To save the zone list, enter 0 (No) to advance.

01 Delete Zone? 0 = No 1 = Yes	0
-----------------------------------	---

To delete a zone or zones in a zone list enter 1 (Yes) to advance.

01 Zn to Delete? (00 = Quit)	00
---------------------------------	----

Enter each zone to be deleted from the list, followed by the [\*] key. After all zones to be deleted are entered, enter 00 to return to the first screen so that another list can be programmed, if desired.


#### NOTES

- Any list may include any or all of the system's zone numbers.
- A zone list can be assigned to more than one output relay.
- *If you only want to review what has been programmed previously*, enter [#][8][1]. The review can be advanced by using the [\*] key. When finished, enter [0][0]\* to quit. No programmed values can be changed in this mode.

**When relay programming in \*80 and \*81 interactive menu modes is completed, exit the programming mode by keying \*99.**

## Programming For an X10 Type Module (such as PF284 or equivalent)

### Programming Procedure



You must program relay number 4 in field \*80, even if a relay module is not being used.

1. Enter the programming mode by keying the following on the Alpha keypad:

**INSTALLER code + 8 + 0.**

2. **Press \*80.**

This is an interactive menu programming mode that is normally used to program output relays used in the system. In this case, it will be used to program for an X10 type module. Refer to the Programming Form worksheet in the separate **Programming Guide** for \*80 Interactive Mode.

Continued over —

**Output Relay Displays**

Enter Relay No. (00 = Quit)	04
--------------------------------	----

Upon pressing \*80, this screen will appear.  
Enter the Relay Number. Assuming the use of a 4204 (even if not used), enter "04".

The [\*] key is used to accept an entry and advance to the next prompt. The [#] key is used to revert back to the last question to check or change an entry. Press [\*] to go forward again.

Press the [\*] key to continue.

04	A	EV	ZL	ZT
STT	0	0	0	00

This screen displays a summary of the current relay START programming (in this example, relay 04 is shown selected).

Press the [\*] key to continue.

04	A	EV	ZL	ZT
STP	-	-	0	00

This screen displays a summary of the current relay STOP programming.

Press the [\*] key to continue.

04 Relay Action	
Close for 2 secs	1

Enter the desired X10 action.

<b>When programming for an X10 type module, any of the selections below may be selected (except "0"), since the X10 will default to "close and stay closed" regardless of the selection made here.</b>
--

0 = No response; 1 = Close for 2 seconds; 2 = Close and Stay Closed; 3 = Continuous Pulse on & off (1 sec ON, 1 sec OFF).

Press the [\*] key to continue.

04 Start Event	
Alarm	1

Enter the event that will START the X10 action (as an example, "alarm " is shown selected)

0 = Not used; 2 = Fault; 1 = Alarm; 3 = Trouble

**Note:** A zone list must be used in conjunction with an event.

Press the [\*] key to continue.

04 Start:	Zn List
	1

If a zone list will be used to START the X10 action, enter the zone list number (to be programmed in field \*81): 1, 2, or 3.\*

\* If "Chime by Zone" has been selected in field \*31, Zone List 3 should be reserved for entry of zones to be programmed for Chime by Zone. See "Programming for Chime by Zone" later in this section.

Press the [\*] key to continue.

04 Start:	Zn Typ
Any burg alarm	33

If a zone type or system operation will be used to START the action, enter the appropriate two-digit code (see table that follows). This example shows the selection of "Any Burglary Alarm" (33) from *System Operation* as the START Event.

Press the [\*] key to continue.

<b>Choices For Zone Type</b>		
00 = Not Used	04 = Interior Follower	08 = 24 Hr Aux
01 = Entry/Exit #1	05 = Trouble Day/Alarm Night	09 = Fire
02 = Entry/Exit #2	06 = 24 Hr Silent	10 = Interior w/Delay
03 = Perimeter	07 = 24 Hr Audible	15 = 24 Hr Medical/ Personal Emerg.*
* Do not use in UL installations		
<b>Choices For System Operation</b>		
20 = Arming-Stay	33 = Any Burglary Alarm	39 = Any Fire Alarm
21 = Arming-Away	34 = Code + # + 7 Key Entry	40 = Bypassing
22 = Disarming	35 = Code + # + 8 Key Entry	41 = AC Power Failure
31 = End of Exit Time	36 = At Bell Timeout**	42 = System Batt. Low
32 = Start of Entry Time	38 = Chime	58 = Duress
** Or at Disarming, whichever occurs earlier.		

04 Stop: List	Zn List 1
------------------	--------------

If a zone list will be used to STOP, or restore, the action, enter the zone list (ZL) number 1, 2, or 3 (to be programmed in \*81 mode). If not used, enter 0. Press the [\*] key to continue.

04 Stop: Disarm	Zn Typ 22
--------------------	--------------

If a zone type or system operation will be used to STOP the action, enter the appropriate two digit code (see the choices listed previously). In this example, "Disarming" (22) has been selected.

Press the [\*] key to continue.


04	A	EV	ZL	ZT
STT	3	1	1	33

This screen again displays a summary of the current START programming. Press the [\*] key to continue.

02	A	EV	ZL	ZT
STP	-	-	1	22

This screen again displays a summary of the current STOP programming. Press the [\*] key to continue.

Enter [0][0] to end programming for the X10 type module.



Previously entered data can be reviewed by pressing [#] [8] [0]. After the relay number is chosen, press [\*] to go to the next screens. This is a review mode only, and data cannot be changed.

In the example of programming above, the X10 module will be activated and close (and stay closed) regardless of the selection made for ACTION (A) when any burglary alarm occurs in any of the zones that are listed in Zone List 1. Refer to *Zone List* programming on previous page.

The X10 module will be de-activated and open when the system is disarmed (System Operation choice "22").

**Summary Of Programming for X10 Type Module (Example of relay 4 programming)**

OUTPUT RELAY	RELAY ACTION (A)	S T A R T ← either or both →			S T O P ← either or both →	
		EVENT (EV)	ZONE LIST (ZL)	ZONE TYPE /SYST OP'N (ZT)	"RESTORE of" ZONE LIST (ZL)	ZONE TYPE /SYST OP'N (ZT)
01	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/> <input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/> <input type="checkbox"/>
02	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/> <input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/> <input type="checkbox"/>
03	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/> <input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/> <input type="checkbox"/>
04	<input type="checkbox"/> 3	<input type="checkbox"/> 1	<input type="checkbox"/> 1	<input type="checkbox"/> 3 <input type="checkbox"/> 3	<input type="checkbox"/> 3	<input type="checkbox"/> 2 <input type="checkbox"/> 2

**\*81 ZONE LISTS FOR OUTPUT RELAYS.** Refer to Zone List programming procedure on a previous page.

**Example:**

Any burglary alarm occurring in zones 10, 11, or 12 (shown entered in Zone List 1 in menu mode \*81) will START X10 action; disarming will STOP X10 action.

**Zone List 1:** Started or stopped by zone numbers selected (zones 10, 11, 12).

1  0 ,  1  1 ,  1  2 ,   ,   ,   ,   ,   ,   , etc

## Programming For “Chime By Zone”

If you want CHIME, when on, to sound when **any** entry/exit or perimeter zone is faulted, you need only enter a “0” in field \*31. In this case, no further programming is required.

If you want CHIME, when on, to sound only when **specific** zones are faulted, a “1” must be entered in field \*31.

“Chime by Zone” requires that you enter the specific zones which have been selected for “chime” in Zone List 3, using \*81 programming mode.

The programming procedure for chime **only on specific zones** is provided below.

1. A “1” must be entered in field \*31.
2. Press \*81.

### Zone List Displays

Zone List No. (00 = Quit)	03
------------------------------	----

Upon keying \*81, the screen on the left will appear.

Enter Zone List Number **03**.

Press the [\*] key to advance.

Zone List number 03 ≠  
∅

03 Enter Zn Num. (00 = Quit)	01
---------------------------------	----

The screen on the left will appear, showing zone list 3 selected.

Now enter each zone number to add to the zone list by first entering the zone number, *then* pressing the [\*] key (example, 01\*, 02\*, 03\*).

Zone number(s) ≠

After all zones for “chime” are entered, key “00”. This will advance you to the next screen.

03 Del Zn List? 0 = No 1 = Yes	01
-----------------------------------	----

If you wish to delete the zone list, enter “1” (Yes). All zones in the zone list will be deleted automatically and programming will return to the first screen.

To save the zone list, enter “0” (No), which will advance you to the next screen.

03 Delete Zone? 0 = No 1 = Yes	0
-----------------------------------	---

If you wish to delete a zone or zones in a zone list enter “1” (Yes). This will advance you to the next screen. Otherwise, enter “0”.

03 Zn to Delete? (00 = Quit)	0
---------------------------------	---

If you entered “1” in the previous prompt, this screen will appear. Enter each zone to be deleted from the list, followed by the [\*] key. After all zones to be deleted are entered, key “00” to return to the first screen.

### NOTES

- Zone list 3 may include any number of zones.
- *If you only want to review what has been programmed previously*, enter [#][8][1]. The review can be advanced by using the [\*] key. No programmed values can be changed in this mode.  
When finished, enter [0][0][\*] to quit.

**When you have entered all the desired “chime” zones, exit the programming mode by keying \*99.**

# FA4285 Phone Module


## In This Section

- ◆ *General Information*
- ◆ *Mounting the FA4285 Phone Module*
- ◆ *Phone Module Wiring*
- ◆ *Caller ID Units*
- ◆ *Programming The Control For Phone Access*
- ◆ *Checking the Operation of the FA4285 Phone Module*

## General Information

The FA4285 Phone Module is an add-on accessory for the FA147C that permits access to the security system via a Touch-tone phone (either on premises or by a call-in when away).

The Phone Module can announce many of the same words that would normally be displayed on an Alpha keypad under the same system conditions.



- 
- Only one Phone Module can be used in this security system,
  - When using the FA4285 Phone Module, keypads in the system must be set to the non-addressable mode (address 31).
- 

When properly connected, the FA4285 Phone Module will enable the user to do the following via a Touch-tone telephone:

- a. Receive synthesized voice messages over the phone regarding the status of the security system.
- b. Arm and disarm the security system and perform most other commands using the telephone keypad, with voice annunciation being provided over the phone as confirmation after a command is entered.

The phone used for phone access must have Touch-tone capability, though Touch-tone service is not necessary (if premises uses PULSE dialing, switchable phones must be set for Touch-tone temporarily before attempting phone access).

A ***Phone Access User's Guide*** is provided with the Phone Module for the user of the system.




---

The Phone Module is not Listed for UL installation use.

---

## Mounting The FA4285 Phone Module

The Phone Module may be mounted in the control cabinet if space is available or, if this is not possible, on the side of the cabinet or adjacent to it.

When mounting the Module outside the cabinet, use the screw holes at its rear which will permit it to be mounted horizontally or vertically (2-faced adhesive tape may be used, if preferred). Wires can be brought out from the side or back (a round breakout is also available on the back).

Affix the Phone Module's connections label (supplied separately) to the inside of the Phone Module's cover if the cover is used. If you have installed the module within the cabinet, affix the label to the inside of the control cabinet's door.

## Phone Module Wiring

The FA4285 Phone Module is wired between the control panel and the premises handset(s). It listens for touch tones on the phone line and reports them to the control panel. During on-premises phone access, it powers the premises phones; during off-premises phone access, it seizes the line from the premises phones and any answering machines.

**Note:** The phone lines must be in service for the phone module to function, even when accessing the system from an on-premises phone.


The control should be powered down when making any wiring connections.

1. Make 12V (+) and (-) and data in and data out connections from the Phone Module to the control, using the connector cable supplied with the Phone Module (see Figure 8-1).

Color Lead	Terminal On Control *
GREEN	DATA IN (terminal 6)
BLACK	AUX - (terminal 4)
RED	AUX + (terminal 5)
YELLOW	DATA OUT (terminal 7)

\* These are the same connections as those used for remote keypads .


2. Insert the keyed connector at the other end of the connector cable into the mating header on the Phone Module (see diagram on next page for location of the header).
3. Connect terminals 1 through 5 on the Phone Module as shown in the Wiring Table and in the FA4285 wiring diagram that follows.



Use an RJ31X jack (CA38A in Canada) with a direct-connect cord and make all connections exactly as shown. If the leads on the direct-connect cord are too short to reach their assigned terminals, splice additional wires to them, as required.

**FA4285 WIRING TABLE**

FA4285 Terminal	Connects to:
<b>1:</b> Phone In (Tip)	Terminal (17) on control.
<b>2:</b> Phone In (Ring)	Terminal (18) on control.
<b>3:</b> Phone Out (Tip)	BROWN lead from direct-connect cord.
<b>4:</b> Phone Out (Ring)	GRAY lead from direct-connect cord.
<b>5:</b> Ground	Earth ground terminal (21) on control.
<b>6:</b> <i>Not Used</i>	
<b>7:</b> <i>Not Used</i>	



If no touch tones are produced following access to the security system **from on-premises** (this problem may arise in rare cases), it may be necessary to reverse the wires connected to terminals 3 and 4 on the Phone Module **and** the wires connected to terminals (17) & (18) on the control. The wiring diagram shows the wiring connections that will provide proper operation in most cases.

## Caller ID Units

If the telephone system on the premises includes a stand-alone Caller ID unit, connect the ID Caller unit directly to the “Handset” terminals (17 &18) on the control, as shown in FA4285 Phone Module Wiring Connections diagram that follows.




If the telephone has a built-in Caller ID unit, the Caller ID function may not work.

**FA4285 WIRING NOTES:**

1. Wire the FA4285 Phone Module exactly as shown, using a direct-connect cord and RJ31X jack.
2. If Touch-tones are not heard when pressing keys following phone access to the security system *via an on-premises phone*, try reversing the pair of wires connected to terminals 3 & 4 on the FA4285, **and** the pair of wires connected to terminals 17 & 18 on the control.
3. If an error signal (fast busy signal) is heard when trying to access the system via the phone, check for correct line seizure wiring, as described in note 4.
4. Connection to the incoming Telco line via a RJ31X jack (CA38A in Canada) and direct-connect cord, as shown in this diagram, is essential, even if the system is not connected to a central station. **The FA4285 will not function if this is not done.**

**The house phone lines (gray and brown wires) must be wired to the Phone Module terminals, not to the control terminals. Otherwise, an error signal (fast busy signal) will occur when trying to access the system from an on-premises phone.**

5. If the telephone system on the premises includes a stand-alone Caller ID unit, connect the ID unit **directly** to the "Handset" terminals (17 & 18) on the control, as shown.



**Figure 8-1. FA4285 Phone Module Wiring Connections**

## Programming The Control For Phone Access

- At least one Alpha keypad (set to the non-addressable mode, address 31) must be connected to the control, and the system powered up.

**Note:** The FA4285 has a permanent device address of 4.

- Enter the programming mode by keying the following on the keypad:

**INSTALLER code + 8 + 0.**

- Press \*26. VOICE (PHONE) MODULE ACCESS CODE.**

Enter the 2-digit phone access code as follows: For the first digit, enter 1–9; for the second digit, enter # +11 for "\*", or # +12 for "#".

*Example:* if desired access code is 7\*, 7 is the first entry, and # + 11 (for \*) is the second entry.

**Enter "00" if not using a Phone Module (this is the default).**

**Note:** A "0" in either digit will disable a Phone Module.

- Press \*95. RING DETECTION COUNT FOR DOWNLOADING.**

Refer to the chart below and program this field accordingly.

Phone Module	Answering Machine	Downloading	Field *95 Programming
Yes	No	No	Set for value other than "0" (1–14). This will enable the control panel to answer the phone call. Otherwise, it will not be possible to access the Phone Module.
Yes	Yes	No	Set for a value higher than the number of rings for which the answering machine is set. <i>Example:</i> if the machine is set for 4 rings, use a value of 5 or higher. This is recommended so that the Phone Module can still be accessed if the answering machine is turned off and does not answer the phone call.
Yes	No	Yes	Set for value other than "0" (1–14).
Yes	Yes	Yes	Enter "15" to bypass the answering machine. See "Important Note" below.

**Important Note:**

If "15" is entered in field \*95 to bypass an answering machine, and an FA4285 Phone Module is included in the installation, you should note the following:

When calling in from an off-premises phone (to receive a status report or execute a command), the user should make the initial call, allow 1 to 3 rings only, and hang up. Then call in again – the control panel will answer, thinking that the PC downloader is on line. After fax-like tones are given, the control panel will hand off to the phone module, and 2 long tones will be heard, followed by the usual voice prompt for the 2-digit phone access code. If this procedure is not followed, Phone Module operation will not be possible.

- Zone descriptors should also be programmed, regardless of the type of keypads in use. If this is not done, the Phone Module will not annunciate a description of the zone(s) in alarm, trouble, etc. (the Phone Module will annunciate zone numbers only).

You can enter zone descriptors now using interactive mode \*82, or later. See the *Alpha Descriptor Programming* section for a detailed procedure.

- Exit the programming mode by entering \*99.

Perform a preliminary check of the FA4285 Phone Module, as indicated next.

## Checking the Operation of the FA4285 Phone Module

### To Check Phone Module Operation From an On-Premises Phone

1. Pick up phone and enter the programmed 2-digit phone code (entered in field \*26, VOICE MODULE ACCESS CODE). Annunciation of a system status report should automatically start. See the User's Guide accompanying the Phone Module for detailed information regarding the nature of the status report, if necessary.
2. During any pause in the status report, or immediately following it, key the following via the keypad on the phone:  
INSTALLER Code (4111), then press key **1** (OFF).
3. A "beep" should be heard on the phone and from a wired keypad, and the words **DISARMED...READY TO ARM** or **DISARMED...NOT READY TO ARM\*** should be heard, indicating that the command was entered successfully.  
\* DISARMED...NOT READY TO ARM would indicate an open zone.
4. Hang up the phone.

### To Check Phone Module Operation From an Off-Premises Phone :

1. Have someone dial the premises phone number, using a Touch-tone phone.
  - If the phone system does not include an answering machine, 2 long tones will be heard in the caller's phone, followed by a voice prompt "**HELLO, ENTER PHONE CODE NOW**". The caller should then enter the programmed 2-digit phone code (entered in field \*26, VOICE MODULE ACCESS CODE).
  - If the premises phone system includes an answering machine, the 2-digit phone code should be entered **during a pause** at the beginning of, or during, the outgoing answering machine message.  
**Note:** If "15" was entered in field \*95 to bypass an answering machine, and an FA4285 Phone Module is included in the installation, off-premises phone operation will be affected. Read the "Important Note" in the programming information for field \*95 on the previous page.
2. When the 2-digit phone code is entered, the caller will hear a voice prompt asking for entry of the 4-digit system code ("**ENTER SYSTEM CODE NOW**").
3. The caller should then enter the INSTALLER code (4111). As a safety feature, there is a 3-try limit in which to enter each code (phone code and system code), after which time the call-in will be aborted. Also, if no keys are pressed for a period of 20 seconds, the call-in will be aborted.
4. Annunciation of a system status report will start if both codes were entered correctly.
5. During any pause in the status report, or immediately following it, the caller should key the following via the keypad on the phone:  
INSTALLER Code, then **1** (OFF).
6. A "beep" should be heard (and from a wired keypad on the premises), and the words **DISARMED...READY TO ARM** or **DISARMED...NOT READY TO ARM\*** should be heard on the caller's phone, indicating that the command was entered successfully.  
\* DISARMED...NOT READY TO ARM would indicate an open zone.
7. At this point, the caller can hang up the phone.
8. Verify with the caller that there was successful access to the system and that the appropriate annunciations were heard over the phone.



# External Sounders

## In This Section

- ◆ *Compatible Sounders*
- ◆ *Sounder Connections*
- ◆ *Programming For External Sounders*
- ◆ *Testing the Sounder*

## Compatible Sounders

<b>Ademco AB-12M 10" Motorized Bell &amp; Box</b>	Motor bell & box. UL Grade A. 100mA current draw.
<b>Ademco 1011BE12M 10" Motorized Bell &amp; Box</b>	Motor bell & box. UL Listed. 100mA current draw.
<b>Ademco 702 Outdoor Siren</b>	Self-contained 6–12 volt siren (driver built-in) and weatherproof for outdoor use. Can be wired for either a steady or warble sound. 117dB @ 10 feet. 1500mA current draw.
<b>Ademco 719 2-Channel Siren</b>	Self-contained 6–12-volt siren (driver built in). Steady or warble sound. 109dB @ 10 feet. 550mA current draw.
<b>Ademco 747 Indoor Siren</b>	Self-contained 6–15 volt siren (driver built-in) for indoor wall mount. 747F available for flush mounting. 105dB @ 10 feet. 400mA current draw.
<b>Ademco 747UL Indoor Siren</b>	Self-contained 6–15 volt siren (driver built-in) for indoor wall mount. UL Listed. 85dB @ 10 feet. 320mA current draw.
<b>Ademco 744 Siren Driver</b>	6 jumper-selected sound outputs. Rated at 119dB with use of an 8-ohm 30 watt speaker. 1.3 amps current draw.
<b>Ademco 745X3* Voice Siren Driver</b> * Requires special power wiring, using additional components.	12 volt voice siren driver with English, Spanish and French voice messages. Separate messages for Fire and Burglary. Use with 8-ohm speaker. UL Listed. 1100mA current draw.
<b>Ademco 705–820, 5-inch Round Speaker</b>	20-watt, 8-ohm indoor or outdoor speaker. Requires a driver.
<b>Ademco 713 Speaker</b>	40-watt, 8-ohm, indoor/outdoor speaker. Requires a driver.
<b>System Sensor PA400B (beige)/PA400R (red) Indoor Piezo Sounder</b>	Indoor piezo sounder (red or beige), rated at 90 dB @ 10 feet.



- Use only UL Listed sounding devices for UL installations.
- The total current drawn from the alarm output and the auxiliary power output, *combined*, cannot exceed 600mA. In addition, the sounding device must be a UL Listed audible signal appliance rated to operate in a 10.2–13.8 VDC voltage range, and must be mounted indoors. Example: Wheelock Signals Inc. siren model 34T-12 (provides 85dB[A] for NFPA 74 & Standard 985).

### Non-UL Installations

The total current drawn from the alarm output terminals cannot exceed 2 amps. The back-up battery must be connected when the sounder is tested since the current for the sounder is supplied by that battery.



Going beyond the limits indicated (2 amps) will overload the power supply, or may cause the electronic circuit protecting the sounder output to trip.

**This control complies with NFPA requirements for temporal pulse sounding of fire notification appliances.**

Temporal pulse sounding for a fire alarm consists of the following:

3 pulses – *pause* – 3 pulses – *pause* – 3 pulses. . . repeated.

### Sounder Connections

The control provides a 12 VDC output which can power external alarm sounders (bells or sirens). This output will activate a sounder when an alarm occurs.


The control should be powered down while making the following wiring connections.

Connect the external sounder to alarm output terminals **3 (+)** and **4 (-)**. See Figure 10-1 .

### Optional Bell Supervision

This is a hardware-enabled option. If enabled, and the “Alarm Output” loop connected to an external sounder is opened or shorted, the message “Bell Failure” (Custom English display touchpads) or “CHECK 70” (Fixed English display touchpads) will be displayed, accompanied by a trouble sound. A report will also be sent to the central station. To enable this option:

1. Cut the red jumper on the control board (see Figure 9-1).
2. Connect a 1000 ohm resistor across the sounder terminals, **not at the Alarm Output terminals!**



**Figure 9-1. Sounder Wiring**

### Programming for External Sounders

1. At least one 2-line Alpha keypad (FA550KP) must be connected to the keypad terminals on the control, and the system powered up.
2. Enter the programming mode by keying the following on the Alpha keypad:

**INSTALLER code + 8 + 0.**

3. **Press \*28. Single Alarm Sounding per Zone/Armed Period.**  
Enter "1" for yes, "0" for no (default).
4. **Press \*29. Fire Sounder Timeout.**  
Enter "1" for no timeout, "0" for timeout (default).
5. **Press \*30. Alarm Bell Timeout.**  
Enter 0 for no timeout, 1 for 4 min (default), 2 for 8 min, 3 for 12 min, 4 for 16 min.
6. **Press \*51. Confirmation of Arming Ding.**  
Enter "0" for no (default); "1" for yes; "2" for yes, but with RF arming only.
7. Exit the programming mode by entering \*99.

## Testing the Sounder

After installation of the sounder is completed, the Security System should be carefully tested, as follows.

1. Make sure that the back-up battery is properly connected.
2. Enter the **INSTALLER code** and press the **TEST** key on the wired keypad.  
The external sounder should sound for 1 second if the sounder is good and proper connections have been made. Note that if the backup battery is discharged or missing, the sounder will not turn on.
3. To turn off the test mode, enter the **INSTALLER code** and press the **OFF** key.
4. Disconnect the wires from the battery terminals.

## Using the Memory of Alarm Trigger for a Strobe

A strobe can be connected to the Memory of Alarm voltage trigger as shown below. The Memory of Alarm trigger will apply a ground when any alarm occurs that will trigger the external sounder, and remains in this condition until the Memory of Alarm is cleared at the control. The strobe will remain active so long as the memory of an alarm exists.




Figure 9-2. Connecting a Strobe



# Long Range Radio

## In This Section

- ◆ General Information
- ◆ Wiring Connections
- ◆ Programming For Long Range Radio

## General Information

If output to long range radio is selected in field \*27, all messages that are programmed to go to the primary telephone line receiver will also be sent to the Ademco 7720PLUS or 7820 long range radio. These messages will be in Contact ID format (not affected by entry in field \*46).

The data line is supervised, as well as certain functions in the radio. If communication is lost or a trouble develops, a message will be attempted to be sent via both radio and telephone to the central station.

For complete information, including specific wiring connections, refer to the manual that accompanies the long range radio.

## Wiring Connections

Connect the data in/data out terminals and voltage input terminals of the Long Range Radio to the control's keypad connection points, terminals 4, 5, 6, and 7 as shown below. The control should be powered down while making the following wiring connections.




Figure 10-1.  
Long Range Radio Connections

## Using the Memory of Alarm Voltage Trigger for Long Range Radio

The Memory of Alarm voltage trigger can be connected to a Long Rang Radio to report that an alarm\* has taken place and provide a cellular radio notification that this event has occurred. You should refer to the Long Rang Radio's instructions for information on the required connection to the Long Range Radio.

Note that the Memory of Alarm trigger applies a ground when an alarm occurs, and remains in this condition until the Memory of Alarm is cleared at the control.

\* Only alarms that activate an external sounder.




Figure 10-2.  
Using the Memory of Alarm Voltage Trigger With Long Range Radio

## Programming for Long Range Radio

1. At least one 2-line Alpha keypad (FA550KP) must be connected to the keypad terminals on the control, and the system powered up.
2. Enter the programming mode by keying the following on the Alpha keypad  
**INSTALLER code + 8 + 0.**
3. **Press \*27 OUTPUT TO LONG RANGE RADIO**  
Enter **1** when using a Long Range Radio; enter **0** if not (default is 0).  
If yes is selected, any dialer report programmed to report to the PRIMARY phone number (in field \*47) will also be sent via long range radio.  
All dialer and long range radio reports will be in Contact ID format (regardless of the selection made in field \*46). Full Trouble and Restore messages are sent.
5. Program the long range radio for device address "3" on the keypad lines.
6. Exit the programming mode by keying **\*99**.

# Audio Alarm Verification (AAV) Unit

## In This Section


- ◆ *General Information*
- ◆ *Wiring Connections*
- ◆ *Programming*

## General Information


An Audio Alarm Verification (AAV) module is an add-on accessory that permits voice dialog between an operator at a central station and a person at the alarm installation, for the purpose of alarm verification.



For UL installations, the AAV option cannot be used.



Alarm reports must be programmed for the primary phone number to enable this feature.



AAV should not be used when Paging or Alarm Reports are being sent to a Secondary number. If this is done, the call to the Secondary number by the communicator after the alarm report will prevent the AAV from taking control of the telephone line, and the AAV "Listen in" session cannot take place.

After all messages have been sent during a reporting session to the primary phone number, the control will trigger the AAV if at least one of the messages was an alarm report. If Contact ID format is selected for the primary phone number, the control will send a "listen-in to follow" message (event code 606), which signals the 685 receiver at the central station to hold the phone connection for 1 minute.

Once the digital message is "kissed off", the control will give up the phone line to the AAV module, without breaking connection with the central station. At this time, all sirens and all continuous keypad sounds will be shut off.



You may have to connect a 4204 or 4229 relay module when using an AAV unit. If so, do not use relay output number 1 for any other usage.

## Wiring Connections For A Non-Ademco AAV Unit

Generally, the method used to trigger an AAV unit is via the use of a 4204 or 4229 relay module. Contact the manufacturer of the AAV unit for information regarding the wiring of their unit to the FA147C.

The control requires that the AAV module trigger type is falling edge.

## Programming

1. At least one 2-line Alpha keypad (FA550KP) must be connected to the keypad terminals on the control, and the system powered up.
2. Enter the programming mode by keying the following on the Alpha keypad:  
**INSTALLER CODE + 8 + 0.**
3. **Press \*91. OPTION SELECTION.** Enter “4 or 6” for AAV monitoring.  
See the *Data Field Descriptions* section (or the Programming Form) in the separate **Programming Guide** for detailed information on the available selections.

---

**Note:** Options 2, 4, 6, and 8 cannot be used in UL installations.

---

4. **Relay programming in field \*80:** If a relay module is being used, do not program anything for Relay #1.
5. Exit the programming mode by keying \*99.

# Final Power Up

## In This Section

- ◆ *General Information*
- ◆ *Earth Ground Connections*
- ◆ *AC Power Up*
- ◆ *Connecting the Back-Up Battery*
- ◆ *Auxiliary Device Current Draw Worksheet*

## General Information

In previous sections, you temporarily powered the system down and up again for the purpose of wiring, programming and testing. This section provides information about final power-up procedures and battery size calculations.

## Earth Ground Connections

The designated earth ground terminal (21) must be terminated in a good earth ground for the lightning transient protective devices in this product to be effective. See the *Installing The Control* section earlier in this manual.

## AC Power-Up

1. Plug the AC transformer permanently into a 24-hour, uninterrupted 120VAC outlet.
2. Following power-up, **AC, dI** (disabled), or **Busy–Standby** (Alpha keypads) or **NOT READY** (fixed-word keypads) will be displayed. Also the green "READY" LED on the keypad(s) should light.

After approximately 1 minute, the initial displays will revert to **DISARMED ... READY TO ARM** for Alpha keypads, or **READY** for Fixed-word keypads (if there are no faulted zones). This 1-minute delay allows PIRs, etc. to stabilize.

**To bypass this delay, press: [#] + [0].**

---

**Note:** If you do not get the "Ready" displays described above, make sure that there are no faulted zones (doors, windows open, PIRs activated, etc). If necessary, refer to "Trouble Conditions" in the *System Operation* section, and also to the *Trouble-Shooting Guide* section.

---

## Connecting The Back-Up Battery

In the event of an AC power loss, the control panel is supported by a back-up, rechargeable gel cell battery. The minimum battery size recommended is the No. 467 (12V, 4AH) battery. See "Calculating the Battery Size Needed" below. The battery is installed in the control cabinet.

The standby battery connection is automatically checked every 3 minutes (CSFM requirement). In addition, entry into the test mode will cause a battery test to be initiated. If there is no battery connected or a low battery, a low battery message is displayed and, if so programmed, will be reported to the central station.

### Calculating the Battery Size Needed

Determine the total device current draw after filling in the AUXILIARY DEVICE CURRENT DRAW WORKSHEET on the next page. To this figure add the 100mA that is drawn by the control panel itself. Then, to determine the battery size needed, use the formula that follows.

Total Current Drawn\* x Number of hours standby wanted = Battery Ampere/Hours.

\* Convert mA figure to decimal Amps (see example that follows).

**Example:** If total auxiliary device current drawn is 450mA, add 100mA for the control panel, for a total of 550mA (0.55 amps); if 24-hour standby is wanted, the calculation will be:

$$0.55\text{mA} \times 24 \text{ hours} = 13.2 \text{ Ampere/Hour battery needed.}$$

In this example, two 7 Amp/Hr batteries (connected in parallel) must be used.

### Making the Battery Connections

1. Use the battery standby formula (shown above) to select the appropriate battery for the installation. Remember, when calculating the battery size needed, you must add the 100mA drawn by the control itself to the total Auxiliary current draw in the worksheet.



Do not connect to the battery until all devices have been wired to the control.

2. Attach the Red and Black wires on the battery connector cable as follows:
  - a) Red to the positive (+) battery tab on the control board.\*
  - b) Black to the negative (-) battery tab on the control board.\*

\*This not required if wires were previously connected to the battery tabs on the control.
3. Attach the Red and Black wires at the other end of the battery connector cable to the battery, as follows:
  - a) Red to the positive (+) terminal on the battery.
  - b) Black to the negative (-) terminal on the battery.

### AUXILIARY DEVICE CURRENT DRAW WORKSHEET

DEVICE USED	CURRENT DRAW	NUMBER OF DEVICES	TOTAL CURRENT (device mA x # of units)
FA210KP Keypad	30mA		
FA245KP	30mA		
FA250KP Keypad	120mA		
FA550KP Keypad	140mA		
5881/5882 Type RF Receiver	35mA		
4204 Relay Module	15/180mA <sup>‡</sup>		
4219 Zone Expander Module	35mA		
4229 Zone Expander/Relay Module	35/100mA <sup>‡</sup>		
FA4285 Phone Module	160mA		
Long Range Radio	Depends on Radio used (see its instructions)		
*			
*			
*			
(Current available from Aux. terminals = 500mA max.)**		<b>TOTAL =</b>	

<sup>‡</sup> Figures are for relays OFF/relays ON.

\* If using hard-wire devices such as PIRs, refer to the specifications for that particular unit's current draw, and include on worksheet.

\*\* **In UL installations**, maximum current draw from the Auxiliary Output and the Alarm Output **combined** must not exceed 600mA.

# Alpha Descriptor Programming

## In This Section

- ◆ General Information
- ◆ Assigning Zone Descriptors
- ◆ Adding Custom Words
- ◆ Alpha Vocabulary List
- ◆ ASCII Character Chart

## General Information

This section provides instructions for programming Alpha descriptors. This is recommended for systems using Alpha keypads, and necessary if an FA4285 Phone Module is used. Alpha descriptors cannot be displayed on fixed-word keypads.

If using an FA4285 Phone Module, select from those words in the Alpha Vocabulary list (on a following page) shown in **boldface type**. *The Phone Module will not provide annunciation of the other words.*



If an FA4285 Phone Module is added to an existing FA147C system, *the Alpha descriptors presently in the system should be re-programmed*, selecting from those words shown in **boldface type** in the Alpha Vocabulary list. The Phone Module will not provide annunciation of any other words.

The ALPHA VOCABULARY LIST and CHARACTER CHART will be found on a following page.

## Assigning Zone Descriptors

The Alpha Keypad used with the FA147C can have a user-friendly English language descriptor/location of all protection zones, keypad panics, and RF receiver supervision faults programmed into the system. Each descriptor can be composed of a combination of words (up to a maximum of 3) selected from a vocabulary of words stored in memory (the list is on a following page). In addition, up to 10 installer-defined words can be added to those already in memory. Thus, when an alarm or trouble occurs in a zone, an appropriate descriptor for that zone's location will be displayed at the keypad.

**Note:** Alpha Descriptor entry can be done locally at the Alpha Keypad or remotely using Downloading software. The Alpha keypad procedure is described below.

### Entering Zone Descriptors (program menu mode \*82)

The descriptor can be entered when the zone is being defined in field \*56. Alternatively, zone descriptors can be entered in field \*82.

The procedure simply requires that you enter the 3-digit reference number for the desired word(s). The 3-digit number for each word is provided in the Alpha Vocabulary list on a following page.

### Programming the Descriptors

1. With the system powered up, enter the programming mode by keying:

**Installer code + 8 + 0.**

Installer Code	<b>20</b>
----------------	-----------

Program Alpha ?	00
0 = No, 1 = Yes	

Custom Words ?	00
0 = No, 1 = Yes	

Default Descriptor ↓

★ ZN 01	ZONE 01
---------	---------

Flashing Cursor (system is ready for entry of word).

↓

★ ZN 01	□
---------	---

Flashing Cursor ↓

★ ZN 01	B	ACK
---------	---	-----

★ ZN 01	BACK
□	

↑ Flashing Cursor if “6” is pressed (system is ready for next word).

★ ZN 01	BACK
D	OOR

↑ Flashing Cursor

The display at the left will appear.

2. **Press \*82.**  
The “Program Alpha?” prompt will appear.
3. **Press “1” (Yes).**  
The “Custom Words?” prompt will appear.

4. **Press “0” (No).\***  
If a descriptor was not entered previously for zone 1, the default descriptor for zone 1 will be displayed.  
\* The procedure for adding custom words to the built-in vocabulary will be found later under “Adding Custom Words”.

Note that no entries can be made. Entries can be made only when the display contains a flashing cursor, which signifies the “entry mode”.

5. To delete or change the default descriptor for zone 1, **press [\*] plus the same zone number (01)**. This will clear that descriptor and gain access to the entry mode with flashing cursor, allowing changes to be made.

**Note:**

If you do not wish to change the existing descriptor for zone 1, enter [\*] plus the next zone number for which you wish to enter (or check) a descriptor. A summary display for that zone will appear. You must then press [\*] plus the same zone number again to gain access to the entry mode (flashing cursor) for that zone.

6. **Press # plus the 3-digit number** for the first word, using the “ALPHA VOCABULARY LIST” on a following page to locate the desired word and its 3-digit number.

*Example:* The descriptor that we wish to enter for zone 1 is BACK DOOR. From the list, BACK = 013. Therefore, you would enter # 0 1 3.

**Note:**

If you accidentally enter the wrong word, simply press [#] plus the correct 3-digit number for the word you want.

7. **Press “6” to accept the selected word and continue.**

**Note:** If this is the only word you are using for the descriptor, press “8” instead of “6” to save that word in memory, and then go to step 11.

8. **Enter the 3-digit number for the next word.** In our example, the word is DOOR, whose number is “057”. Enter # 0 5 7. The display on the left will appear.



3. Press the [#] key, followed by the two-digit entry for the first letter you would like to display (e.g., [6][5] for "A").
4. When you have entered the 2-digit number, press [6] to select it. The cursor will then move to the right, in position for the next character.
5. Repeat steps 3 and 4 above to create the desired word(s). Note that the [4] key can be used to move the cursor to the left, if necessary. Remember, no word or word-string can exceed 10 characters.
6. Press the [8] key to save the custom word(s) and return to the "**CUSTOM WORD ?**" display.
7. Repeat steps 2–5 for other custom words to be entered. To change a custom word, just overwrite it.
8. If no more are to be entered, press "0" (No) at the **CUSTOM WORD ?** prompt to return to the Descriptor entry. The custom word(s) will be automatically added to the built-in vocabulary.
9. Exit the programming mode by keying \*99.

---

When zone descriptors are being entered as described in step 6 of **Programming the Descriptors**, the custom word numbers are 245 to 254 for words 1 to 10 respectively.

---

**ALPHA VOCABULARY LIST (For Entering Zone Descriptors)**

000 (Word Space)	• 057 DOOR	• 106 LAUNDRY	– R –	– V –
– A –	• 059 DOWN	• 107 LEFT	155 RADIO	209 VALVE
• 001 AIR	• 060 DOWNSTAIRS	• 108 LEVEL	• 156 REAR	210 VAULT
• 002 ALARM	061 DRAWER	• 109 LIBRARY	157 RECREATION	212 VOLTAGE
004 ALLEY	• 062 DRIVEWAY	• 110 LIGHT	159 REFRIGERATION	– W –
005 AMBUSH	• 064 DUCT	111 LINE	160 RF	213 WALL
• 006 AREA	– E –	• 113 LIVING	• 161 RIGHT	214 WAREHOUSE
• 007 APARTMENT	• 065 EAST	• 114 LOADING	• 162 ROOM	• 216 WEST
• 009 ATTIC	066 ELECTRIC	115 LOCK	163 ROOF	• 217 WINDOW
010 AUDIO	067 EMERGENCY	116 LOOP	– S –	• 219 WING
– B –	068 ENTRY	117 LOW	164 SAFE	220 WIRELESS
• 012 BABY	• 069 EQUIPMENT	• 118 LOWER	165 SCREEN	– X –
• 013 BACK	• 071 EXIT	– M –	166 SENSOR	222 XMITTER
• 014 BAR	072 EXTERIOR	• 119 MACHINE	• 167 SERVICE	– Y –
• 016 BASEMENT	– F –	121 MAIDS	• 168 SHED	223 YARD
• 017 BATHROOM	• 073 FACTORY	122 MAIN	169 SHOCK	– Z –
• 018 BED	075 FAMILY	• 123 MASTER	• 170 SHOP	224 ZONE (No.)
• 019 BEDROOM	• 076 FATHERS	• 125 MEDICAL	171 SHORT	• 225 ZONE
020 BELL	• 077 FENCE	126 MEDICINE	• 173 SIDE	• 226 0
• 021 BLOWER	• 079 FIRE	128 MONEY	174 SKYLIGHT	• 227 1
• 022 BOILER	• 080 FLOOR	129 MONITOR	• 176 SMOKE	• 228 1ST
023 BOTTOM	081 FLOW	• 130 MOTHERS	• 178 SONS	• 229 2
025 BREAK	082 FOIL	• 131 MOTION	• 179 SOUTH	• 230 2ND
• 026 BUILDING	• 083 FOYER	132 MOTOR	• 180 SPRINKLER	• 231 3
– C –	084 FREEZER	– N –	• 182 STATION	• 232 3RD
028 CABINET	• 085 FRONT	• 134 NORTH	184 STORE	• 233 4
• 029 CALL	– G –	135 NURSERY	• 185 STORAGE	• 234 4TH
030 CAMERA	• 089 GARAGE	– O –	186 STORY	• 235 5
031 CAR	• 090 GAS	• 136 OFFICE	190 SUPERVISED	• 236 5TH
033 CASH	091 GATE	• 138 OPEN	191 SUPERVISION	• 237 6
034 CCTV	• 092 GLASS	139 OPENING	192 SWIMMING	• 238 6TH
035 CEILING	093 GUEST	• 140 OUTSIDE	193 SWITCH	• 239 7
036 CELLAR	094 GUN	142 OVERHEAD	– T –	• 240 7TH
• 037 CENTRAL	– H –	– P –	194 TAMPER	• 241 8
038 CIRCUIT	• 095 HALL	143 PAINTING	196 TELCO	• 242 8TH
• 040 CLOSED	• 096 HEAT	• 144 PANIC	197 TELEPHONE	• 243 9
• 046 COMPUTER	098 HOLDUP	145 PASSIVE	• 199 TEMPERATURE	• 244 9TH
047 CONTACT	099 HOUSE	• 146 PATIO	200 THERMOSTAT	245 Custom Word #1
– D –	100 INFRARED	147 PERIMETER	• 201 TOOL	246 Custom Word #2
• 048 DAUGHTERS	• 101 INSIDE	148 PHONE	202 TRANSMITTER	247 Custom Word #3
049 DELAYED	102 INTERIOR	150 POINT	– U –	248 Custom Word #4
• 050 DEN	103 INTRUSION	151 POLICE	• 205 UP	249 Custom Word #5
051 DESK	– J –	152 POOL	• 206 UPPER	250 Custom Word #6
• 052 DETECTOR	104 JEWELRY	• 153 POWER	• 207 UPSTAIRS	251 Custom Word #7
• 053 DINING	– K –		• 208 UTILITY	252 Custom Word #8
054 DISCRIMINATOR	• 105 KITCHEN			253 Custom Word #9
055 DISPLAY				254 Custom Word #10

**Note:** Bulleted (•) words in **boldface type** are those that are also available for use by the FA4285 Phone Module. If using a Phone module, and words other than these are selected for Alpha descriptors, the module will not provide annunciation of those words.

**CHARACTER (ASCII) CHART  
(For Adding Custom Words)**

32 (space)	42 *	52 4	62 >	72 H	82 R
33 !	43 +	53 5	63 ?	73 I	83 S
34 "	44 ,	54 6	64 @	74 J	84 T
35 #	45 -	55 7	65 A	75 K	85 U
36 \$	46 .	56 8	66 B	76 L	86 V
37 %	47 /	57 9	67 C	77 M	87 W
38 &	48 0	58 :	68 D	78 N	88 X
39 '	49 1	59 ;	69 E	79 O	89 Y
40 (	50 2	60 <	70 F	80 P	90 Z
41 )	51 3	61 =	71 G		




# Sequential Mode

## (For 5800 Wireless Transmitters)

### In This Section

- ◆ General Information
- ◆ Sequential “Enrolling”

### General Information



**Use this mode only after all other zone information has been programmed, including transmitter loop numbers.**

There are two methods of enrolling – you can enroll each transmitter into the system as you are entering the zone information in field \*56 (the procedure will be found in the *Wireless (RF) Zone Expansion* section), or you can enroll all the transmitters in \*83 menu mode *after all other zone information has been entered in field \*56*. The enrolling method in \*83 is called “sequential enrolling” and is described in this section.

As an option, the new sequential mode allows you to use a **5804 button-type transmitter as a “program tool.”** The advantage of using a program tool is that it enables remote enrollment. You can move to the physical location of the transmitter to be enrolled, press the upper left-hand button of the program tool, and then trip the intended transmitter (see step 10 for operation). The transmitter that you use as the program tool can also be used as a transmitter in the system. If you plan to use an existing transmitter, it must first be enrolled into the system as its associated zones. You may then program it as the tool.

An alpha keypad is required for the following procedures.

To enroll transmitters **sequentially**, *after* all other zone information has been programmed, do the following:

1. Enter Programming mode [**Installer Code**] + **8 + 0** on an Alpha keypad. Enter the Serial Number Sequential mode by pressing **\*83**. The following prompt will be displayed.

Program Tool?	
0 = No, 1 = Yes	0

00 Input S/N:	L
Ax x x-x x x x	

00 Input S/N:	L
A123-4567	3

2. If using a program tool, enter "1." If not using a tool, enter "0." If a tool has already been programmed, this prompt will not appear. If either not using a tool or one has already been programmed, skip to step 4.
3. If "1" is entered, the system will prompt for the transmitter’s serial number. Enter the program tool’s serial number using one of the following methods:
  - a) Enter the 7-digit serial number printed on the transmitter
  - or**
  - b) Press any button on the transmitter. The keypad should beep twice and display the serial number of the tool.

In this example, the serial number is A123-4567. Once enrolled, the upper left-hand button of the program tool can be pressed to ready the system for enrolling a transmitter into the system.


**The serial number for the program tool will only remain in the system until the programming mode is exited. (Entering \*97 will not delete the tool.)**

Pressing the [#] key on the keypad will cause the system to back up to the "Program Tool ?" prompt.

Press [\*] to continue.

Enter Zn Num. (00 = Quit)      10
--------------------------------------

Zone Number Entered ≠




4. Enter the first zone number to be enrolled (e.g., zone 10). Press [\*] to continue.

The system will, starting with this zone number, search for the first transmitter which has **all** of the following attributes pre-programmed in Zone Programming:

- a) An input type of RF, UR, or BR programmed
- b) A loop number programmed
- c) No serial number programmed

If the first zone number entered does **not** have one or more of the above attributes, the system will search its database for the first zone that does and will display it on the next screen.

10 Input S/N:      L Axxx xxxx
-----------------------------------



5. This prompt is displayed when the system has found the next zone which needs to be enrolled. The system will respond to the first serial number transmitted. A serial number may be enrolled by one of two methods:
  - a) Enter the 7 digit serial number printed on the transmitter  
or
  - b) Activate the transmitter by faulting or restoring the input you wish to use for that zone (e.g., press a button, open or close a door, etc.).

If you do **not** wish to enroll the zone displayed, press the [#] key on the keypad or the upper right-hand button on the program tool (a long beep will be heard to verify). The following prompt will appear:

10 Learn S/N? 0 = No, 1 = Yes    0
---------------------------------------

To enroll now, enter "1" (Yes). If "0" (No) is entered, the following prompt will appear if a program tool has already been programmed:

Enter Zn Num. (00 = Quit)      12
--------------------------------------


Zone Number Entered ≠

Enter the next zone number to be enrolled (e.g., zone 12). The system will search for that zone and will display the prompt shown in the beginning of step 5. If you wish to exit the enroll mode completely, enter **00** and press [\*].

10 Input S/N:      L A 022-4064      3
---

Serial #≠      Loop #≠

The system will enroll the serial number of the first transmitter heard, add the loop number entered to this serial number, display the serial and loop numbers, and cause the keypad to beep twice.




If the serial and loop number combination is already present in the system, a single long beep will be heard from the keypad. If this happens, the system will not display the serial number, but will wait for a transmission from another transmitter or transmitter loop input.



6. The system will then enter an optional confirmation mode so that the operation of the actual programmed input can be confirmed. Activate the loop input or button that corresponds to this zone. **We recommend that you confirm the programming of every transmitter before proceeding to the next zone.**


When the system sees activity on the appropriate input, it will beep three times and display the confirmation message. Press [\*] or the upper left-hand button of the program tool when you are ready to enroll the next transmitter.



At any time during this step, you may press the [\*] key on the keypad or the upper left-hand button of the program tool if you are satisfied with the serial and loop number combination that has been enrolled, regardless of whether or not the enrolled input has been "confirmed." This will ready the system to enroll the next transmitter.

If the incorrect transmitter has been enrolled, press the [#] key on the keypad or the upper right-hand button of the program tool to delete the serial number and return to the "LEARN S/N" prompt. A single long beep will be heard from the keypad to verify pressing of the upper right-hand button. Then, press "1" (Yes) or press the upper left-hand button of the program tool (a single short beep will verify the system is ready for enrolling) and re-activate the proper transmitter or transmitter loop input.

7. The system will search for the next zone that does not have a serial number associated with it. If one is found, the prompt in step 5, along with the appropriate zone number, will be displayed. Follow steps 5 and 6 for the remaining wireless zones.
8. After all wireless zones have been displayed, whether enrolled or not, the "Enter Zn Num." prompt will appear. Enter "00" to exit the Sequential mode and return to data field programming mode.



When you have finished programming all zones, test each using the system's TEST mode. Do not use the Transmitter ID Sniffer mode for this, as it will only check for transmission of one zone on a particular transmitter, and NOT the zones assigned to each additional loop.



# System Communication

## In This Section

- ◆ *General Information*
- ◆ *Report Code Formats*
- ◆ *Table of Contact ID Event Codes*
- ◆ *Communication Programming*

## General Information

This section provides an explanation of formats this system accommodates for reporting alarms and other system conditions to the central station. The process of a successful transmission consists of both the method of communication between the control panel and the central station receiver and the actual way the information is sent and displayed at the central station.

## Report Code Formats

When the panel calls the central station receiver, it waits to hear a “handshake” frequency from the receiver to confirm that the receiver is on-line and ready to receive its message. Once the panel hears the handshake it is programmed to listen for, it sends its message. The panel then waits for a “kissoff” frequency from the receiver acknowledging that the message was received and understood.

If the handshake frequency is not given or is not understood by the panel, the panel will not send its message. Once the handshake frequency is received and understood by the panel, the panel will send its message. If there is an error in the transmission (the receiver does not receive a “valid” message), the kissoff frequency will not be given by the central station receiver.

The panel will make a total of eight attempts to the primary telephone number and eight attempts to the secondary telephone number (if programmed) to get a valid message through. If the panel is not successful after its numerous attempts, the keypad will display “COMM. FAILURE” (Alpha keypad) or “FC” (Fixed-word keypad).

The following chart defines the three sets of (handshake/kissoff) frequencies that the panel supports and the different formats that can be sent for each.

FORMAT	HANDSHAKE	TRANSMITS DATA	KISSOFF	TRANSMIT TIME
4+2 Ademco Low Speed	1400Hz	1900Hz (10PPS)	1400Hz	Under 15 secs. (Standard report)
4+2 Radionics	2300Hz	1800Hz (20PPS)	2300Hz	Under 10 secs. (Standard report)
4+2 Ademco Express	1400–2300Hz	DTMF (10 cps)	1400Hz	Under 3 secs.
Ademco Contact ID	1400–2300Hz	DTMF (10 cps)	1400Hz	Under 3 secs.

*The following describes each format in greater detail.*

<b>4+2 Format</b>	Comprises a 4-digit subscriber number and 2-digit report code.
<b>Ademco Contact ID Reporting Format</b>	Comprises a 4-digit subscriber number, 1-digit event qualifier ("new" or "restore"), 3-digit event code, and 3-digit zone number, user number, or system status number (see the following page).

**4 + 2 Reporting**

<b>Report</b>	<b>4+2</b>
Alarm	SSSS AZ
Trouble	SSSS Tt
Bypass	SSSS Bb
AC Loss	SSSS EA <sub>C</sub>
Low Batt	SSSS LL <sub>B</sub>
Open	SSSS OU
Close	SSSS CU
Test	SSSS Gg
Restore	SSSS RZ
AC Restore	SSSSR <sub>A</sub> AC
LoBat Res.	SSSS R <sub>L</sub> L <sub>B</sub>
Trouble Res.	SSSS R <sub>T</sub> t
Bypass Res.	SSSS R <sub>B</sub> b

**Where:**

- |  |  |
|--|--|
| SSSS = Subscriber ID                                 | C = Close Code–1st Digit                               |
| A = Alarm Code–1st digit                             | U = User Number (in hex)                               |
| Z = Typically Zone Number*–2nd digit                 | Gg = Test Code (1st & 2nd digits)                      |
| Tt = Trouble Code (1st & 2nd digits)                 | R = Restore Code (Alarm)                               |
| Bb = Bypass Code (1st & 2nd digits)                  | R <sub>T</sub> t = Restore Code (Trbl)1st & 2nd digits |
| EA <sub>C</sub> = AC Loss Code (1st & 2nd digits)    | R <sub>B</sub> b = Restore Code (Byps)1st & 2nd digits |
| LL <sub>B</sub> = Low Battery Code(1st & 2nd digits) | R <sub>A</sub> AC = Restore Code (AC)1st & 2nd digits  |
| O = Open Code–1st Digit                              | R <sub>L</sub> LB = Restore Code (Bat)1st & 2nd digits |

\*Zone numbers for:

- [1] + [★], or [A] = 95
- [3] + [#], or [C] = 96
- [★] & [#], or [B] = 99

Duress = 8

Tamper<sup>†</sup> = 9

<sup>†</sup> Expansion Module Failure also.

**Ademco Contact ID Reporting** takes the following format:

CCCC Q EEE GG ZZZ

where: CCCC = Customer (subscriber) ID

Q = Event qualifier, where:

E = new event , and R = restore

EEE = Event code (3 hexadecimal digits)

**Note:** For a complete list of event codes, refer to the central office receiver manual.

GG = Always 00.

ZZZ = Zone/contact ID number reporting the alarm, or user number for open/close reports. System status messages (AC Loss, Walk Test, etc.) contain zeroes in the ZZZ location.

TABLE OF CONTACT ID EVENT CODES

Code	Definition
100	Alarm, Medical/Personal Emergency
110	Fire Alarm
121	Duress
122	Alarm, 24-hour Silent
123	Alarm, 24-hour Audible Panic
131	Alarm, Perimeter, Burg.
132	Alarm, Interior, Burg.
134	Alarm, Entry/Exit, Burg.
135	Alarm, Day/Night, Burg.
150	Alarm, 24 Hour Auxiliary
301	AC Power
302	Low System Battery/Battery Test Fail
321	BELL/Siren #1 Trouble
333	Expansion Module Fail
353	Long Range Radio Trouble

Code	Definition
373	Fire Loop Trouble
374	Exit Error Alarm
380	Trouble (Global)
383	RF Sensor Tamper
384	RF Sensor Low Battery
401	O/C by User
406	Cancel by User
407	Remote Arm/Disarm (Download)
408	Quick Arm AWAY/MAX
416	Successful program upload
441	Armed STAY/INSTANT, Quick-Arm STAY/INSTANT
570	Bypass
601	Test, Manually Triggered
602	Periodic Test
606	AAV to follow

## Communication Programming

### Introduction

This section provides instructions for programming those fields that affect communications between the control and the central station.

### Programming Procedure

1. At least one Alpha keypad (FA550KP) must be connected to the system, which should be powered up .
2. Enter the programming mode by keying: **Installer code + 8 + 0.**

**Fields \*40, \*41, \*42, \*44:** Enter up to the number of digits shown. Do not fill unused spaces. Enter 0–9, # + 11 for '\*', # + 12 for '#', # + 13 for a pause (2 secs).

#### **Press \*40 PABX ACCESS CODE**

Enter up to 6 digits if PABX is needed to access an outside line. If fewer than 6 digits are needed to be entered, exit by pressing [\*] and next field number (e.g., 41). To clear entries from field, press \*40\*.

#### **Press \*41 PRIMARY PHONE No.**

Enter up to 20 digits. If fewer than 20 digits entered, exit by pressing [\*] and next field number (e.g., 42). To clear entries from field, press \*41\*.

#### **Press \*42 SECONDARY PHONE No.**

Enter up to 20 digits. If fewer than 20 digits entered, exit by pressing [\*] and next field number (e.g., 43). To clear entries from field, press \*42\*.

**If using the Paging feature, enter the pager number as the secondary phone number.**

**Press \*43 SUBSCRIBER ACCOUNT. No.**

**Note:** Field \*43 is also used as the Long Range Radio Subscriber Account Number (Central Station Account Number).

Enter 0–9; # + 11 for B; # + 12 for C; # + 13 for D; # + 14 for E; # + 15 for F (default). Enter 0 as the first digit of a 4-digit account number for Nos. 0000–0999. End field by pressing \* (and press next field number). To clear entries from field, press \*44\*.

See the blank Programming Form in the separate **Programming Guide** for examples of Account No. entries.

**Press \*45 PHONE SYSTEM SELECT** (default = 1)

If Central Station Receiver *is not* on WATS line:

0 = Pulse Dial, 1 = Tone Dial.

If Central Station Receiver *is* on WATS line:

2 = Pulse Dial, 3 = Tone Dial.

**Press \*46 REPORT FORMAT, PRIMARY/SECONDARY**

Determines which format is to be used to report to the central station. Default = 7.

2 = 4+2 ADEMCO Lo Speed Standard

3 = 4+2 Radionics Standard

6 (or undefined) = 4+2 ADEMCO Express

7 = ADEMCO Contact ID Reporting

**Note:** The maximum number of alarm and alarm restore reports during one armed period is determined by field \*92.

**Press \*47 SPLIT/DUAL REPORTING**

0 = disable (Backup report only). Entries 1 through 9 can be made, as indicated in the table below. Entries 6 through 9 will send a report to a pager (in addition to the selected primary phone number), **but you must enter the pager number as the secondary phone number in field \*42.**

	<b>TO PRIMARY PHONE #</b>	<b>TO SECONDARY PHONE #</b>
1 =	Alarms, Restore, Cancel	Other Reports
2 =	All except Open/Close, Test	Open/Close, Test
3 =	Alarms, Restore, Cancel	All reports
4 =	All except Open/Close, Test	All reports
5 =	All reports	All reports
	<b>TO PRIMARY PHONE #</b>	<b>TO PAGING No.* (Secondary)</b>
6 =	All reports except Open/Close	Alarms/Open/Close for users 5–25‡, Troubles
7 =	All reports	Alarms, Troubles
8 =	All reports	Alarms/Open/Close for users 5–25‡, Troubles
9 =	All reports except Open/Close	Open/Close for users #5–25‡

\* Can only be used if the Primary reporting format is Ademco Contact ID and a primary phone number is programmed. If reporting to a Pager, choose from 6, 7, 8, or 9, as desired.

‡ Will report only Users 5, 6, 7, & 8. If using 5800 series wireless button-type devices, the zone number of the arm or disarm button (10–25) will be sent as the user number.

Note: If “Quick Arm” is used, Close will report as user “0”.

Entries 6 through 9 will send a report to a pager, using the following format:

**AAAAAAAAAAAAAAAAAAAA – BBB – CCCC**

where,

- A** = (Optional). Up to 16 digits for Account numbers, PIN numbers, or any additional data that will precede the 7-digit system status code BBB and CCCC (see **B** and **C** below). This optional data is programmed in field \*93, PAGER CUSTOM DATA.
- B** = A 3-digit code that describes the event that has occurred in the system (see the explanation below).
- C** = A 4-digit User or Zone number, depending on the type of event that has occurred. For alarms or troubles, these digits represent the zone number. For openings (disarming) and closings (arming), these digits represent the user number. In this system, the first 2 digits will always be “00.” Single digit zone or user numbers are also preceded by a “0”. See the explanation that follows.

**Summary:**

Optional 16 digits\* → AAAAAAAAAAAAAAAAAA – BBB – CCCC ← 4-digit User or Zone #

\*Programmed in  
field \*93

↑  
3-Digit Event Code

The 3-digit Event codes (BBB) that can be sent are:

- 911** = **Alarms**. The 4-digit number (CCCC) that follows this code will be the zone number that has caused the alarm.
- 811** = **Troubles**. The 4-digit number (CCCC) that follows this code will be the zone number that has caused the trouble.
- 101** = **Open** (system disarmed). The 4-digit number (CCCC) that follows this code will be the User number.
- 102** = **Close** (system armed). The 4-digit number (CCCC) that follows this code will be the User number.

Examples of typical pager displays follow. The optional 16 digits (preceding the 7-digit status code) that may be programmed for additional data in field \*93 have not been included in the examples below.

**Example 1.** Pager displays: 911-0004

This indicates that the system is reporting an alarm (911) caused by a fault in zone 4 (0004).

**Example 2.** Pager displays: 102-0005

This indicates that the system is reporting a closing–system arming (102) by User 5 (0005).

*Note that no restore reports are sent to the pager.*

**Important.** AAV should not be used when Paging or Alarm Reports are being sent to a Secondary number. If this is done, the call to the Secondary number by the communicator after the alarm report will prevent the AAV from taking control of the telephone line, and the AAV “Listen in” session cannot take place.

**Press \*48 15-SECOND DIALER DELAY, BURGLARY**

Enter 0 for no, or 1 for yes. Default is 0 (no delay).

**Press \*49 PERIODIC TEST REPORT**

Select the desired test report interval.

0 = none; 1 = 24 hours; 2 = weekly; 3 = 30 days. Default is 0 (none). Test Report Code entered in field \* 64 is sent. Reports with Subscriber No.

**Press \*50 SESCOA/RADIONICS SELECT**

0 = Radionics (0–9, B–F reporting)

1 = SESCOA (0–9 only reporting)

Select 0 for all other formats. Default is 0.

**To Program System Status And Restore Report Codes (\*60 - \*68, \*70 - \*75)**

Enter codes as follows:

1–9, 0, B, C, D, E, or F. Enter "# + 11" for B, "# + 12" for C, "# + 13" for D, "# + 14" for E, "# + 15" for F.

**With 4+2 Format:** Enter codes in *both* boxes (1st and 2nd digits) for 1–9, 0, or B–F, as described above.

A "0" in the *first* box will disable the report.

**With Ademco Contact ID Reporting:** Enter any digit (other than "0") in the *first* box, to enable zone to report. This is an "enabling" code only and is disregarded in the actual reporting to the central office. Entries in the *second* boxes will be ignored.

A "0" in the *first* box will disable the report.

**Examples:**

For Code **32** (Two Digits), enter:

3	2
---	---

For Code **B2** (Hexadecimal) enter:

# + 11	2
--------	---

**Press \*60 TROUBLE REPORT CODE**

This will be sent if a zone goes into trouble.

**Press \*61 BYPASS REPORT CODE**

This will be sent when a zone is manually bypassed.

**Press \*62 AC LOSS REPORT CODE**

Timing of this report is random with up to a 48-minute delay. The keypad response is about 6 seconds to display the AC failure. The restore report has a random delay of up to about 12 minutes. If AC restores before the report goes out, there is no AC restore report.

**Press \*63 LOW BAT REPORT CODE**

This will be sent when a low battery condition exists in the system's standby battery.

---

**Note:** Connection to the standby battery is checked every 3 minutes (CSFM requirement).

---

**Press \*64 TEST REPORT CODE**

This is sent periodically to test that the communicator and phone lines are operational (frequency of report is selected in field \*51).

**Press \*65 OPEN/EXIT ALARM REPORT CODE**

This is sent upon disarming of the system. 2nd digit = User No., if 4+2 reporting is selected.

**Press \*66 ARM AWAY/STAY REPORT CODES**

This option allows for independent programming of AWAY and STAY reports. 2nd digit of Report is User No., if 4+2 reporting is selected.

**Press \*67 RF XMTR. LOW BATTERY REPORT CODE**

This is sent in the event that a wireless transmitter low battery condition exists.

**Press \*68 CANCEL REPORT CODE**

This is sent upon disarming of the system after an alarm condition was reported.

**Press \*70 ALARM RESTORE REPORT CODE, 1st DIGIT**

This is sent when the zone that caused an alarm is restored to its non-faulted condition. 2nd digit is automatically sent as the 2nd digit of the zone alarm report code programmed in field \*56, if 4+2 reporting is selected.

**Press \*71 TROUBLE RESTORE REPORT CODE**

This is sent when a trouble in a zone is restored.

**Press \*72 BYPASS RESTORE REPORT CODE**

This is sent when a zone that has been bypassed is un-bypassed.

**Press \*73 AC RESTORE REPORT CODE**

This is sent when AC power has been restored after an AC power outage.

**Press \*74 LOW BAT RESTORE REPORT CODE**

This is sent when a system low battery condition is restored to normal.

**Press \*75 RF XMTR. LOW BATTERY RESTORE CODE**

This is sent when a transmitter that previously sent in a low battery message has sent a message indicating it no longer has a low battery condition.

**Press \*84 (EVENT LOG 80% FULL REPORT CODE)**

If an Event Logging selection is made in field \*85, a message can be sent to the central station receiver when the log is 80% full.

---

**Note:** Aside from the selection made by the installer in field \*85, all control and readout from the log is accomplished via the Downloader.

---

**Press \*85 (EVENT LOGGING)**

- 0 = No event logging
- 1 = log Alarm/Alarm Restore
- 2 = log Trouble/Trouble Restore
- 4 = log Bypass/Bypass Restore
- 8 = log Open/Close
- x = log combination of events (add value of entries).

*Example:* To select "Alarm/Alarm Restore", and "Open/Close", enter 9 (1+ 8); to select all events, enter 15 (1 + 2 + 4 + 8).

The default of "3" = alarm/alarm restore (1) plus trouble/trouble restore (2).

---

**Note:** System messages are logged when any non-zero selection is made.

---

**Press \*92 NUMBER OF REPORTS IN ARMED PERIOD**

This option can be used to limit the number of messages (alarm & alarm restore reports) sent to the central station in an armed period. "0" allows unlimited reports, 1-15 allows reports from 1 to 15, (i.e., "1" allows 1 report, "2" allows 2 reports, etc.).

**\*93 PAGER CUSTOM DATA**

Optional 16 digits for Account numbers, PIN numbers, or any additional data that you wish to precede the 7-digit status code sent to a pager. See field \*47 SPLIT/DUAL REPORTING.

Enter 0-9; # + 11 for '\*'; # + 12 for '#'; # + 13 for a pause (2 secs).

If fewer than 16 digits are entered, exit by pressing \* and then 94, if entering next field. To clear entries from field, press \*93\*.

**Press \*94 DOWNLOAD PHONE NUMBER**

Enter up to 16 digits;

0–9, # + 11 for “\*”, # + 12 for “#”, # + 13 for a pause. Do not fill unused spaces. End field by entering “\*”.

If fewer than 16 digits entered, exit field by pressing [\*] and next field number. To clear entries, press \*94\*.

**Press \*95 RING DETECTION COUNT FOR DOWNLOADING**

Refer to the chart below and program this field accordingly.

Phone Module	Answering Machine	Downloading	Field *95 Programming
Yes	No	No	Set for value other than “0” (1–14). This will enable the control panel to answer the phone call. Otherwise, it will not be possible to access the Module.
Yes	Yes	No	Set for a value higher than the number of rings for which the answering machine is set. Example: if machine is set for 4 rings, use value 5 or higher. This is recommended so that the Phone Module can still be accessed if the answering machine is turned off and does not answer the phone call.
Yes	No	Yes	Set for value other than “0” (1–14).
Yes	Yes	Yes	“15” to bypass answering machine. See “Important Note” below.
No	No	No	Enter “0”
No	Yes	No	Enter “0”
No	No	Yes	Enter 1–14
No	Yes	Yes	Enter 15

**Important Note:** If “15” is entered in field \*95 to bypass an answering machine, and an FA4285 Phone Module is included in the installation, you should note the following:  
 When calling in from an off-premises phone (to receive a status report or execute a command), the user should make the initial call, allow 1 to 3 rings only, and hang up. Then call in again – the Phone Module will now seize the line, and 2 long tones will be heard, followed by the usual voice prompt for the 2-digit phone access code. If this procedure is not followed, Phone Module operation will not be possible.

**Press \*96 INITIALIZE DOWNLOAD ID AND SUBSCRIBER ACCT. No. FOR DOWNLOADING**

(No data entry required)

**This completes the communication programming.**

**Exit the programming mode by keying \*99.**

Refer to the *Testing The System* section to check system operation.

# Testing the System

## In This Section

- ◆ Test Procedure
- ◆ To the Installer

## Test Procedure

After installation is completed, the Security System should be carefully tested, as follows.

1. With the system powered up and in the disarmed state, check that all zones are intact. If a **NOT READY** message is displayed, press the [\*] key to display the faulted zone(s). Restore faulted zone(s) if necessary, so that the **READY** message is displayed. Fault and restore every sensor individually to ensure that it is being monitored by the system.
2. Enter the **security code** and press the **TEST** key. The external sounder will sound for 1 second.

The keypad should sound 3 beeps each time a contact is faulted. A **test** report should be transmitted (if programmed) to the Central Station immediately. If the backup battery is discharged or missing, the sounder may not turn on and a “Low Battery” report will be transmitted with a Test report.

The keypad will beep once per minute as a reminder that the system is in the Test Mode. To turn off the test mode, enter **security code** and press the **OFF** key.

---

**Note:** For 5800 wireless systems, triggering a zone set to Arm-Away, Arm-Stay, or Disarm will take the system out of the TEST mode and cause that action.

---

**Alarm messages will be sent to the central station during the following tests. Notify them in advance that tests will be in progress.**

3. Arm the system and fault one or more zones. After 15 seconds (if optional dialer delay is selected), silence alarm sounder(s) by entering the **security code** and then pressing **OFF**.
4. Check the Entry/Exit delay zones. Arm the system **AWAY**, wait a short period, and open an entry/exit door. Check for proper exit delay time and keypad sounds. Close the entry exit door when the exit delay tones from the keypad begin to speed up. When the keypad indicates that the system is armed **AWAY** (2 short tones plus the “armed **AWAY**” message display), wait a few moments, then open the entry/exit door. Check for entry delay sounds from the keypad, then disarm the system by entering the **security code** and then pressing **OFF**. The keypad should display a “Ready” message and produce one short tone.
5. Check the keypad-initiated alarms that have been programmed in the system by pressing the Panic key (key pairs on some keypads) . If the system has been programmed for audible emergency, the keypad will emit a steady alarm sound, and **ALARM and zone number** will be displayed. Silence the alarm by entering the **security code** and then pressing **OFF**. If the system has been programmed for silent emergency, there will be no audible alarms or displays, but a report will be sent to the central station.
6. If output relay units have been installed, test their programmed action.
7. Notify the central station when all tests are finished, and verify results with them.

8. To test the wireless part of the system and the RF Receiver, perform the two tests (Transmitter Sniffer Mode and Go/NoGo Test Mode) that follow:

**a. TRANSMITTER SNIFFER MODE**

*Make sure the system is disarmed before trying to enter this mode.*

Press **INSTALLER code + # + 3**. This initiates a procedure that will check that all transmitters have been properly programmed.

---

**Note:** If the communicator is in the process of sending a report to the central station, the system will not go into the Sniffer mode. If so, wait a few minutes, and try again.

---

The keypad will display all zone numbers of wireless units programmed into the system. As the system receives a signal from each of the transmitters, the zone number of that transmitter will **disappear** from the display. The transmitter codes may be checked upon installation, or in an installed system. All the wireless zone numbers should disappear after about 1-1/2 hours.

To speed this process, all sensors can be physically faulted and then restored.

**Notes:**

- All BR type units must physically be activated to clear the display.
- When **one** button of a transmitter (RF, UR, or BR) is activated, all zones assigned to other buttons on that transmitter are cleared. This also applies to 5816 and 5817 transmitters which have multiple loops (zones).
- Any transmitter serial number that is not entered will not turn off its zone number.

Exit this mode by keying **INSTALLER code + OFF**.

**b. GO/NO GO TEST MODE**

By pressing **INSTALLER code + # + 4**, a mode similar to the user test mode (code + TEST) is entered, but the wireless receiver gain is reduced.

Checking in this mode verifies that the RF transmission has sufficient signal amplitude margin for the installed system.

Exit the mode by entering **INSTALLER code + OFF**.

**TO THE INSTALLER**

Regular maintenance and inspection (at least annually) by the installer and frequent testing by the user are vital to continuous satisfactory operation of any alarm system. The installer should assume the responsibility of developing and offering a regular maintenance program to the user as well as acquainting the user with the proper operation and limitations of the alarm system and its component parts. Recommendations must be included for a specific program of frequent testing (at least weekly) to insure the system's proper operation at all times.

# System Operation

## In This Section

- ◆ Security Codes
- ◆ Keypad Functions
- ◆ FA4285 Phone Module
- ◆ Relay Outputs
- ◆ Exit Alarm Displays
- ◆ Trouble Conditions

## Security Codes

### Installer Code

The installer programs the 4-digit Installer Code initially as part of the programming procedure. The factory default Installer code is "3-5-1-9", but may be changed in field \*20.

---

**Note:** The Installer Code is defined as User #1.

---

The Installer code is the only code that can allow re-entry into programming mode. In normal operation mode, only the Master code can be used to enter the User codes (refer to *Assigning the Master Code*).

See *Mechanics Of Programming* section in the separate **Programming Guide** for details on exiting the programming mode via \*98 or \*99.

### Assigning the Master Code

*In normal operation mode*, assign the 4-digit Master Code as follows:

**Installer Code + 8 + 2 + 4-digit Master Code**

---

**Note:** The Master Code is defined as User #2.

---

### Changing the Master Code

*In normal operation mode*, the Master code can be changed by entering:

**Master Code + 8 + 2 + New Master Code + New Master Code again**

### User Codes

*In normal operation mode*, the Master security code can be used to assign up to 5\* secondary users 4-digit security codes (Users 3–8\*). It can also be used to remove secondary user codes from the system (individually).

\* If a Duress Code (user #8) is **not** assigned, up to 6 secondary user codes (users 3–8) will be available for assignment.

**To assign (or change) a Secondary security code**, enter:

**Master Code + 8 + User # (3–7<sup>†</sup>) + desired 4-digit User Code**

<sup>†</sup> User #8 is reserved for a Duress Code. However, if a Duress code is **not** assigned, a security code can be assigned to an additional user (who will be user #8).

The system will emit a single beep when each secondary user code has been successfully entered.

**To delete a Secondary security code, enter:**

**Master Code + 8 + User #**

**Special Notes:**

- All Master and secondary user codes permit access to the system for arming, disarming, etc.
- If a secondary user code is inadvertently repeated for different users, the lower user number will take priority.
- Opening and closing reports are sent for the Master code as No. 02, with the appropriate subscriber number. Secondary user codes are sent as Nos. 3 through 7 (or 8, if no Duress code is assigned) respectively, with the appropriate subscriber number.

## Duress Code

---

**Important:** This code is useful only when the system is connected to a central station.

---

This feature is intended for use when you are forced to disarm or arm the system under threat. When used, the system will act normally, but can silently notify the central station of your situation, if that service has been provided.

The Duress code may be any 4-digit code assigned to User Number 8.

**To program a Duress code, enter:**

**Master Code + CODE [8] + [8] + [desired 4-digit Duress Code]**

The keypad will beep once to confirm acceptance.

---

**Note:** The Duress code must differ from the Master Code or any other User's Code.

---

**To change the Duress code, enter:**

**Master Code + [8] + [8] + [new 4-digit Duress Code]**

When the keypad beeps once, it signifies that the code has been changed.

**To delete the Duress code, enter:**

**Master Code + [8] + [8]**, and wait . . .

When the keypad beeps once, it signifies that the code has been deleted.

## Keypad Functions

### General Information

Note that if you enabled QUICK ARM (field \*21), the [#] key can be pressed instead of entering the security code, for any of the arming procedures (Away, Stay, Instant, Maximum, etc.). The security code is *always* required, however, when disarming the system.

---

**Note:** The "Quick Arm" feature will function only if the Master Code has been programmed (see *Assigning the Master Code* on the previous page).

---

The keypad allows the user to arm and disarm the system, and perform other system functions, such as bypassing zones, and display zone descriptors. Zone and system conditions (alarm, trouble, bypass) are displayed in the Display Window.

When an alarm occurs, keypad sounding and external sounding will occur, and the zone(s) in alarm will be displayed on the keypad. Pressing any key will silence the keypad sounder for 10 seconds. Disarming the system will silence both keypad and external sounders. When the system is disarmed, any zones that were in an alarm condition during the armed period will be displayed (memory of alarm). To clear this display, simply repeat the disarm sequence (enter the security code and press the OFF key) *again*.

The keypads also feature chime annunciation, and 3 panic key pairs, or individual panic keys (depending on keypad type – see *Panic Keys* that follows), for silent, audible, fire or medical/personal emergency alarms. These keys can notify the central station of an alarm condition, if that service is connected.

**Arming, Disarming Functions, etc.**

The following is a brief list of system commands. For detailed information concerning system functions, refer to the User's Manual.

- Disarmed, Not Ready** ..... Before arming, the system must be in the READY condition (all zones must be intact). If the "NOT READY" message appears, press the READY [\*] key to display faulted zones.
- Arming Away** ..... Enter code + AWAY [2].
- Arming Stay** ..... Enter code + STAY [3].
- Arming Instant** ..... Enter code + INSTANT [7].
- Arming Maximum** ..... Enter code + MAXIMUM [4].
- Quick Arming** ..... (If enabled). Simply press [#] key in place of code, then press AWAY, STAY, INSTANT, or MAXIMUM to arm system as desired. Note that the [#] key cannot be used in place of code when disarming the system.
- Disarming** ..... Enter code + OFF [1].
- Bypassing Zones** ..... Enter code + BYPASS [6] + zone number(s).
- Forced (Quick) Bypass** ..... (If enabled). To automatically bypass all faulted zones, use the "Quick Bypass" method: Enter code + BYPASS, then wait for all open zones to be displayed. Arm when display indicates "Bypass" and "Ready to Arm".  
If programmed (in field \*23), zones 17, 30, and 31 will also be bypassed.
- Chime Mode** ..... Key the security code + CHIME [9], or simply key [#] + [9]. To turn chime off again, repeat the above.  
NOTE: If the entry in field \*31 is "0", faulting of **any** entry/exit or perimeter zone will cause a chime sound when Chime is on. If the entry in this field is "1", only the faulting of **specific** zones (as programmed in field \*81) will cause a chime to sound. See "Programming for Chime By Zone" in Section 7.

**SUMMARY OF ARMING MODES**

Arming Mode	Features for Each Arming Mode			
	Exit Delay	Entry Delay	Perimeter Armed	Interior Armed
AWAY	Yes	Yes	Yes	Yes
STAY	Yes	Yes	Yes	No
INSTANT	Yes	No	Yes	No
MAXIMUM	Yes	No	Yes	Yes

**Panic Keys**

There are three individual lettered keys (or panic key pairs on some keypads) that, if programmed, can be used to manually initiate alarms and send a report to the central station. Each can be individually programmed for 24-hour Silent, 24-hour Audible, 24-hour Medical/Personal Emergency\* or 24-hour Fire Emergency responses.

\* Not to be used in UL installations.

The panic function is activated when the appropriate lettered key is pressed for at least 2 seconds, or when both keys of the appropriate key pair are pressed at the same time. See the chart that follows.



For the Silent Panic or Medical/Personal Emergency functions to be of practical value, the system must be connected to a central station.

The panic functions are identified by the system as follows:

Keys	Displayed as Zone
[1] & [*], or [A]	95
[3] & [#], or [C]	96
[*] & [#], or [B]	99

**Notes:**

- Keys [A], [B], [C] are not on all keypads.
- Key [D], if present, is inactive.

### FA4285 Phone Module (if used)

Refer to the separate instructions supplied with the Phone Module for detailed information concerning its operating procedures. The check-out procedure in the *FA4285 Phone Module* section should have been performed following installation of the Phone Module.

**Note:** The Phone Module **cannot** be used to add user codes in this system. User codes must be added by using a wired keypad.

### Relay Outputs (if used)

If relay outputs or an X10 type module is used, two keypad entries available to the user are included among the system operation choices (34 and 35) that may be programmed (see the *Relay Outputs* section). They can manually activate or de-activate the relay(s) for starting or stopping some action, such as turning lights on or off, etc.

These keypad entries are: **Security Code + [#] + [7]**  
and **Security Code + [#] + [8]**

---

**Note:** Whichever entry is used to start/stop the action cannot also be used to stop/start it. The opposite action must either be performed by the other keypad entry or by some other event or operation offered in the programming section.

---

### Exit Alarm Displays (if programmed)

- **A display of "CANCELED ALARM" or "CA" and a zone indication** will appear if an exit or interior zone contained a fault during closing at the time the exit delay ended (e.g., exit door left open), *but the system was disarmed during the entry delay time*. The alarm sounder and keypad sound continuously, but stop when the system is disarmed. No message will be transmitted to the central station.
- **A display of "EXIT ALARM" or "EA" and a zone indication** will appear if an exit or interior zone contained a fault during closing at the time the exit delay ended, *but the system was NOT disarmed during the entry delay time*. The alarm sounder and keypad sound continuously until the system is disarmed (or timeout occurs). An "exit alarm" message is sent to the central station. Restoral of an exit alarm will also be sent when the system is disarmed.
- **The "EXIT ALARM" display, etc.** will also result if an alarm from an exit or interior zone occurs within two minutes after the end of an exit delay.

In any of the previous cases, use a second OFF sequence (code plus OFF key) to clear the keypad display.

### Trouble Conditions (See Troubleshooting Guide also)

#### General Information

The word "**CHECK**" on the keypad's display, accompanied by a rapid "beeping" at the keypad, indicates that there is a trouble condition in the system. The audible warning sound can be silenced by pressing any key. Instruct users to call for service immediately upon seeing any of the following messages.

**"Check" and "Battery" Displays**

- **A display of "CHECK" and one or more zone numbers** indicates that a problem exists with the displayed zone(s) and requires attention.
- A display of "CHECK" and "09" indicates that communication between control and a zone expander or wireless receiver is interrupted. Check the wiring and DIP switch settings on the units.
- **If there are wireless sensors in the system**, the CHECK condition may also be caused by some change in the environment that prevents the receiver from receiving signals from a particular sensor.
- **A display of "BAT" (Fixed-word keypads) or "SYSTEM LO BAT" (Alpha keypads) with no zone number** indicates that the system's main standby battery is weak.
- **A display of "BAT" (Fixed-word keypads) with a zone number and a once per minute "beeping" at the keypad** indicates that a low battery condition exists in the wireless sensor displayed (zone "00" indicates a wireless keypad). If the battery is not replaced within 30 days, a CHECK display may occur.
- **A display of "KYPD LB" on Alpha keypads (without a zone number)** indicates that a 5827/5827BD wireless keypad or 5804BD has a low battery. If the battery is not replaced within 30 days, a CHECK display may occur.

---

**Note:** Some wireless sensors contain a non-replaceable long-life battery which requires replacement of the entire unit at the end of battery life (e.g., Nos. 5802, 5802CP).

---

**Power Failure**

- **If there is no keypad display at all, and the POWER indicator (if present) is not lit**, operating power for the system has stopped and the system is inoperative.

---

**Note:** The control panel will power up in its previous state (armed or disarmed) after a complete power failure, but will not retain any memory of bypasses.

---

- **If the message "AC LOSS" (Alpha keypads) or "NO AC" (Fixed-word keypads) is displayed**, the keypad is operating on battery power only.

---

**Note:** There is a random delay up to 48 minutes before the system will report an AC failure to the central station. The keypad response is about 6 seconds. The restore report has a random delay of up to 12 minutes (if the AC failure report was sent).

---

- **If the battery standby capacity is used up during a prolonged AC power outage**, the control's auxiliary power will shut down to minimize deep discharge of the battery.

**Other Displays (Fixed Word displays are in parentheses)**

**Busy-Standby (dI).** If this remains displayed for more than 1 minute, the system is disabled.

**Modem Comm (CC)** The system is in communication with the central station for change of function or status verification.

**Comm. Failure (FC)** A communication failure has occurred.

**Open Circuit (OC)** The keypad is not receiving signals from the control and sees an open circuit.

**Long Rng Trbl (bF)** Back-up LRR communication failure.



# Trouble shooting Guide

## In This Section

- ◆ General Information
- ◆ Troubleshootin Chart
- ◆ Contacting Technical Support

## General Information

This section contains a troubleshooting chart listing some of the more common trouble symptoms that may be encountered in the system following installation, their possible cause and remedy.

## Trouble shooting Chart

### SYSTEM (including Wireless)

SYMPTOM	POSSIBLE CAUSE	REMEDY
1. Transmitter signal not received at 5881.	1a. Transmitter or 5881 not properly powered. 1b. If Transmitter is 5827/5827BD, or 5804BD, house ID code not set in field *24, or transmitter not set to same house code set in that field. 1c. Transmitter located too far from 5881. 1d. Metal shielding between transmitter and 5881. 1e. Transmitter malfunctioning. 1f. 5881 malfunctioning. 1g. Transmitter No. (zone) not programmed. 1h. 5881 address incorrect. 1i. Field *22 not set properly.	1a. Check or change transmitter's battery. Check the control's AC power. 1b. Check code switches inside transmitter. Must match with RF House Code programmed in control. 1c. Move transmitter or 5881. 1d. Check for large metal obstructions, then relocate transmitter if necessary. 1e. Verify by activating 5881 with another, similar transmitter. If O.K. now, return defective transmitter. 1f. Verify by making sure other transmitters cannot activate 5881. If defective, replace and return original 5881. 1g. Verify programming. 1h. Set DIP switch for address "0". 1i. Set field *22 to "1" for 5881 RF receiver
2. Transmitter zone number appears during Transmitter Sniffer mode, but does not clear.	2a. Transmitter zone type (ZT) is set to 00 (Not Used). 2b. Transmitter battery not installed. 2c. 5800 System transmitter serial No. not entered in system.	2a. Set ZT to a valid active zone type in field *56. 2b. Install proper battery. 2c. Enter unit's serial No. in field *56 or *83.
3. Low Battery message on keypad.	3a. "Bat" or "System Lo Bat" (no zone Nos.). 3b. • "Bat" + "00" (Fixed-word keypad display). • "KYPD LB" + "00" (Alpha keypad display) 3c. "Bat" or "Lo Bat" + "nn".	3a. System battery is low or missing. 3b. • Remote RF wireless keypad battery low. • Remote RF wireless keypad battery low. 3c. Transmitter for zone "nn" has a low battery.
4. Periodic beep(s) from keypad.	4a. System is in TEST mode. 4b. A wireless transmitter low battery has occurred and is displayed. 4c. A supervision CHECK has occurred.	4a. Enter "Code" + OFF to exit TEST mode. 4b. Enter "Code" + OFF and replace the battery. 4c. Check the wireless transmitter indicated. Restore communication to the RF receiver to cancel the condition.
5. With 5800 RF System, no response to a transmitter in normal operation, although zone number clears during Transmitter Sniffer mode.	Put control in TEST mode. If zone does not respond, try operating the tamper switch or another input to the transmitter. 5a. If another input causes the zone to be displayed, the wrong loop input was entered when programming. 5b. If no response at all from this transmitter, this physical transmitter has not been entered into the system.	5a. Delete input's serial number (not the zone), and enter the proper loop input (see field *56 or *83). 5b. Determine which transmitter is programmed for this zone and re-program as necessary.

**SYSTEM (Continued)**

SYMPTOM	POSSIBLE CAUSE	REMEDY
6. Nuisance or phantom alarm.	6a. Sensors not properly installed, wired, or monitored. 6b. Universal transmitter (5817) programmed incorrectly.	6a. Check installation to see if in accordance with established procedure. 6b. Check programming for transmitter.
7. Intrusion alarm for no apparent reason.	7a. Protected door or window opened while system is armed. 7b. Improper user operation of exit/entry delays. 7c. Magnets located too far from switches, and/or doors and windows not properly aligned. 7d. Magnetic contacts improperly connected or wire broken. 7e. Entry door programmed as "Instant" 7f. Loose fitting door or window being rattled by wind or vibrations.	7a. Check with all occupants of protected premises. 7b. Check programming of entry delays. 7c. Check all openings for proper switch and magnet orientation. 7d. Check wiring connections. Be sure wires are properly stripped and are tightly fastened to screw terminals. 7e. Check and revise programming. Re-program transmitter number. 7f. Mount magnet closer to magnet.
8. Repeated low battery signal.	8a. Transmitter located where temperature drops below 32°F. 8b. Poor quality or unspecified battery in transmitter. 8c. Transmitter malfunctioning.	8a. Change location. Use magnetic contacts to protect opening. 8b. Check battery. Use only batteries specified (does not apply to transmitters with non-replaceable batteries). 8c. Replace faulty transmitter.
9. Local bell and keypad sound continuously after arming.	9. Exit or interior zone contained a fault at end of Exit Delay (e.g., Exit door left open).  <i>The "Exit Alarm" display, etc. will also result if an alarm from an exit or interior zone occurs within two minutes after the end of an exit delay.</i>	9a. If system disarmed <i>before</i> ensuing entry time runs out, "CA" or "Canceled Alarm" will be displayed. Sounding will stop. 9b. If system <i>not</i> disarmed before entry time ends, "EA" or "Exit Alarm" will be displayed and Exit Alarm message will be sent to central station. Sounding will continue until system is disarmed or timeout occurs. Clear display by entering code + OFF a second time. Avoid fault when re-arming.
10. "CHECK: and "09" displayed.	10. Communication between control and zone expander or wireless receiver is interrupted.	10. Check wiring connections of expander and receiver to control. Check DIP switch settings on the units.
11. External siren or bell does not sound following an alarm.	11a. Open or shorted wiring to external sounder. 11b. Sounder defective.	11a. Check wiring and connections at control and sounder. 11b. Replace defective siren or bell.
12. External siren or bell does not sound for 1 second as soon as system is placed in Test mode.	12a. Same as 11a and 11b above. Also, back-up battery may be discharged or not connected.	12a. Check as in 11a and 11b above. If battery is discharged or not connected, keypad will display "BAT" (fixed-word) or "SYSTEM LO BAT" (Alpha) with no zone number.
13. Keypad displays "Bell Failure" (Alpha) or "Check 70" (fixed-word), accompanied by rapid beeping.	13a. Open or short in wiring to external sounder. 13b. Bell supervision not properly enabled.	13a. Check as in 11a and 11b above. 13b. Red jumper on board cut, but EOL resistor not connected directly across sounder terminals. See Fig. 9-1 in Section 9.
14. Keypad displays "Upload-Pass" (Alpha) or "EC" (Fixed-Word).	14. Programming data has been auto-matically uploaded to central station following exit of programming mode.	14. Key Code plus OFF to clear display.

**CONTROL**

1. "AC LOSS" or "NO AC" displayed	1a. Interrupted AC power supply.	1a. Check transformer connection and power line circuit breaker. Transformer must be connected to an unswitched (24-hour) outlet.
2. Digital communicator message not being received.	2a. Control in TEST mode. 2b. Telephone connection not secure. 2c. Digital communicator malfunctioning 2d. Telephone number in program needs prefix or access code. 2e. Telephone call to central monitoring station requires operator assistance.	2a. Remove from TEST mode. 2b. Check all connections. 2c. Check with a different FA147C. 2d. Program prefix or access code into the control 2e. System cannot work in this situation.

**CONTROL (Continued)**

SYMPTOM	POSSIBLE CAUSE	REMEDY
3. Does not arm properly.	3a. Ready light not on.	3a. Check for faulted zone(s) by pressing [*]; make faulted zone(s) intact, or use Bypass arming, if desired.
4. FA147C doesn't respond to keystrokes on keypad.	4a. "CC" or "MODEM COMM" displayed. 4b. "d1" or "Busy-Standby" is displayed. 4c. "E4" or "E8" displayed. 4d. Keypad address setting incorrect.	4a. System is in communication with downloader at central station. Wait until download session is finished. 4b. System has just been powered and is in its one-minute initialization. To bypass this time, press '#' + '0'. 4c. More zones have been programmed than the zone expansion modules can handle. Delete some zones or, if RF, use a higher capability RF receiver. 4d. Keypads must be set for address 31 (non-addressable mode).

**SMOKE DETECTOR**

1. Detector alarms, no apparent reason.	1a. Dust, dirt in sensing chamber. 1b. Improper location. 1c. Unit malfunctioning.	1a. Clean unit's sensing chamber with vacuum cleaner per unit's instructions. 1b. See unit's instructions for locations to avoid. Relocate as necessary. 1c. Replace detector.
2. Detector's siren sounds.	2a. Unit not receiving required power. 2b. Unit malfunctioning.	2a. Check for proper installation of battery. Try new battery. 2b. Replace detector.

**CONTACTING TECHNICAL SUPPORT***PLEASE,***Before you call Technical Support, be sure you:**

- **READ THE INSTRUCTIONS!**
- **Check all wiring connections.**
- **Determine that the power supply and/or backup battery are supplying proper voltages.**
- **Verify your programming information where applicable.**
- **Note the proper model number of this product, and the version level (NXXXX number on large circuit module in center of control board) along with any documentation that came with the product.**
- **Note your *FIRST ALERT* customer number and/or company name.**

**Having this information handy will make it easier for us to serve you quickly and effectively.**

You may contact Technical Support via Toll-Free FAX. Please include your return FAX number. You will receive a reply within 24 hours.

You may also contact Technical Support via modem to ATLLIS-BBS, Technical Support's Electronic Bulletin Board System. Replies are posted within 24 hours.

East Coast Technical Support: 1-800-538-5585 (8 a.m.-6 p.m. E.S.T.)

West Coast Technical Support: 1-800-458-9469 (8 a.m.-5 p.m. P.S.T.)

Technical Support FAX Number: 1-800-447-5086

ATLLIS-BBS Electronic Bulletin Board System: 1-516-496-3980  
(1200 - 9600 Baud, 8 Data Bits, 1 Start/Stop Bit, No Parity)

ATLLIS FAX - Automated Fax Retrieval System: 1-800-573-0153

1-516-921-6704/Ext. 1667

*First Alert* World Wide Web Page: HTTP:// www.firstalert.com

INTERNET E-Mail Address: First Alert\_Tech\_SPRT @ First Alert-165 . First Alert . com



# Specifications and Accessories

## In This Section

- ◆ Specifications
- ◆ Accessories (Compatible Devices)

## Specifications

### FA147C Security Control

#### 1. Physical:

12-1/2" W x 14-1/2" H x 3" D (318mm x 368mm x 76mm)

#### 2. Electrical:

VOLTAGE INPUT: 16.5VAC from plug-in 25VA transformer, Ademco No. 1317.

RECHARGEABLE BACK-UP BATTERY: 12VDC, 4AH (Gel type). Charging Voltage: 13.8VDC.

ALARM SOUNDER: 12V, 2.0 Amp output can drive 12V BELLS or can drive one or two 702 (**series** connected) self-contained 20-watt sirens. Do **not** connect two 702s in parallel.

AUXILIARY POWER OUTPUT: 12VDC, 500mA max. Interrupts for 4-wire smoke detector reset.

**Note:** For UL installations, Alarm Sounder plus Auxiliary Power currents should not exceed 600mA total.

STANDBY TIME: (see Table in the *Final Power Up* section)

#### 3. Communication:

FORMATS SUPPORTED:

##### 4 + 2 Ademco Express,

10 characters/sec, DTMF (Touch-Tone) Data Tones, 1400/2300Hz ACK, 1400Hz KISSOFF.

##### Ademco Contact ID Reporting,

10 characters/sec., DTMF (Touch-Tone) Data Tones, 1400/2300Hz ACK, 1400Hz KISSOFF.

##### 4 + 2 Ademco Low Speed, Standard

10 pulses/sec, 1900Hz Data Tone, 1400Hz ACK/KISSOFF.

##### Radionics, Standard

20 pulses/sec, 1800Hz Data Tone, 2300Hz ACK/KISSOFF.

Can report 0–9, B–F.

Line Seize: Double Pole.

Ringer Equivalence: 0.7B.

FCC Registration No.: AC 398U–68192–AL–E.

#### 4. Maximum Zone Resistance: Zones 1–6 = 300 ohms excluding EOLR.

### **FA210KP Remote Keypad**

- 1. Physical:** 5-3/4" W x 4-3/4" H x 1" D (146mm x 121mm x 26mm).
- 2. Electrical:** Voltage Input: 12VDC, Current Drain: 30mA.
- 3. Interface Wiring:** To control panel's keypad connection points.  
RED: 12VDC input (+) aux power.  
GREEN: Data Out to Control.  
YELLOW: Data In from Control.  
BLACK: Ground.

### **FA245KP Remote Keypad**

Specifications the same as FA210KP Remote Keypad above.

### **FA250KP Remote Keypad**

- 1. Physical:** 5-1/16" W x 6-3/8" H x 1-3/4" D (129mm x 162mm x 45mm).
- 2. Electrical:** Voltage Input: 12VDC.  
Current Drain: 120mA.
- 3. Interface Wiring:** Same as FA210KP.

### **FA550KP Remote Keypad**

- 1. Physical:** 5-1/16" W x 6-3/8" H x 1-3/4" D (129mm x 162mm x 45mm).
- 2. Electrical:** Voltage Input: 12VDC; Current Drain: 140mA.
- 3. Interface Wiring:** Same as FA210KP

### **5881L, 5881M, 5881H Rf Receivers (5800 System)**

- 1. Physical:** 7-3/8" (188mm) W x 4-3/8" (112mm) H x 1-7/16" (37mm) D.  
*Note:* 10-7/8" (277mm) H with antenna.
- 2. Electrical:** Voltage Input: 12VDC; Current Drain: 35mA.
- 3. Interface Wiring:** Same as FA210KP.
- 4. Range:** 200ft (60m) nominal indoors from wireless transmitters (the actual range to be determined with system in TEST mode).
- 5. Zones:** 5881L: accepts up to 8 transmitters.  
5881M: accepts up to 16 transmitters.  
5881H: accepts up to 30 transmitters.

### **5800TM Transmitter Module**

#### **(used with 5827BD Wireless 2-Way Keypad)**

- 1. Physical:** 2-1/4" W x 4-1/8" H x 7/8" D (57mm x 105mm x 22mm).
- 2. Electrical:** Voltage Input: 12VDC; Current Drain: 20mA.
- 3. Interface Wiring:** Same as FA210KP

### **4204 Relay Module**

- 1. Physical:** 6-1/2" W x 4-1/4" H x 1-1/4" D (169mm x 108mm x 32mm).
- 2. Electrical:** Voltage Input: 12VDC; Current Drain: 15mA (Relays off).  
180mA (Relays on)
- 3. Interface Wiring:** Same as FA210KP.
- 4. Four Output Relays:** SPDT Contacts. Rating: 2A max at 28VDC/AC.

**4219 Wired Expansion Module**

1. **Physical:** 6-1/2" W x 4-1/4" H x 1-1/4" D (169mm x 108mm x 32mm)
2. **Electrical:** Voltage Input: 12VDC; Current Drain: 35mA
3. **Interface Wiring:** Same as FA210KP
4. **Four Output Relays:** SPDT Contacts, Rating: 2A max at 28VDC/AC

**4229 Wired Expansion/Relay Module**

1. **Physical:** 6-1/2" W x 4-1/4" H x 1-1/4" D (169mm x 108mm x 32mm)
2. **Electrical:** Voltage Input: 12VDC;  
Current Drain: 35mA (Relays off), 100mA (Relays on)
3. **Interface Wiring:** Same as FA210KP.
4. **8 EOLR Loops (A-H):** Loop A can be set for fast (10–15msec) response to an open
5. **Two Output Relays:** SPDT Contacts; Rating: 2A max at 28VDC/AC

**FA4285 Phone Module**

1. **Physical:** 6-1/2" W x 4-1/4" H x 1-1/4" D (169mm x 108mm x 32mm).
2. **Electrical:** Voltage Input: 12VDC; Current Drain: 160mA
3. **Device Address:** Permanently set to address 4.
4. **Interface Wiring:** See *FA4285 Phone Module* section.
5. **Telephone Line Connections:** See *FA4285 Phone Module* section.

**7720PLUS/7820 Long Range Radio**

1. **Physical:** 8-1/2" W x 9-1/2" H x 1-3/4" D (216mm x 242mm x 45mm).
2. **Electrical:** Voltage Input: 12VDC; Current Drain: 150mA.
3. **Device Address:** Set to address 3.
4. **Interface Wiring:** Same as 4127 above.

**Accessories (Compatible Devices)****Sounders**

<b>Ademco AB-12M 10" Motorized Bell &amp; Box</b>	Motor bell & box. UL Grade A. 100mA current draw.
<b>Ademco 1011BE12M 10" Motorized Bell &amp; Box</b>	Motor bell & box. UL Listed. 100mA current draw.
<b>Ademco 702 Outdoor Siren</b>	Self-contained 6–12 volt siren (driver built-in) and weatherproof for outdoor use. Can be wired for either a steady or warble sound. 117dB @ 10 feet. 1500mA current draw.
<b>Ademco 719 2-Channel Siren</b>	Self-contained 6–12-volt siren (driver built in). Steady or warble sound. 109dB @ 10 feet. 550mA current draw.
<b>Ademco 747 Indoor Siren</b>	Self-contained 6–15 volt siren (driver built-in) for indoor wall mount. 747F available for flush mounting. 105dB @ 10 feet. 400mA current draw.

**Sounders (Continued)**

<b>Ademco 747UL Indoor Siren</b>	Self-contained 6–15 volt siren (driver built-in) for indoor wall mount. UL Listed. 85dB @ 10 feet. 320mA current draw.
<b>Ademco 744 Siren Driver</b>	6 jumper-selected sound outputs. Rated at 119dB with use of an 8-ohm 30 watt speaker. 1.3 amps current draw.
<b>Ademco 745X3* Voice Siren Driver</b>	12 volt voice siren driver with English, Spanish and French voice messages. Separate messages for Fire and Burglary. Use with 8-ohm speaker. UL Listed. 1100mA current draw.
<b>Ademco 705–820, 5-inch Round Speaker</b>	20-watt, 8-ohm indoor or outdoor speaker. Requires a driver.
<b>Ademco 713 Speaker</b>	40-watt, 8-ohm, indoor/outdoor speaker. Requires a driver.
<b>System Sensor PA400B (beige)/PA400R (red) Indoor Piezo Sounder</b>	Indoor piezo sounder (red or beige), rated at 90 dB @ 10 feet.

\* Requires special power wiring connections.

**Compatible 4-Wire Smoke/Combustion Detectors**

<i>System Sensor</i>	
<b>1412</b>	4-wire ionization products of combustion detector.
<b>2412</b>	4-wire photoelectric smoke detector.
<b>2412TH</b>	4-wire photoelectric smoke detector w/135° F (57° C) heat detector.
<b>A77–716B</b>	EOL relay module (supervisory module for wired 4-wire fire zone).
<b>2112/24T</b>	Low-profile 4-wire photoelectric smoke detector w/135° F (57° C) heat detector.

# Regulatory Agency Statements

## In This Section

- ◆ *FCC Part 15 Statement*
- ◆ *FCC Part 68 Statement*
- ◆ *UL Notices*
- ◆ *California State Fire Marshal (CSFM) 24-Hour Battery Back-Up Requirements*
- ◆ *Canadian Department of Communications (DOT) Statement*

### Federal Communications Commission (FCC) Part 15 Statement

This equipment has been tested to FCC requirements and has been found acceptable for use. The FCC requires the following statement for your information:

This equipment generates and uses radio frequency energy and if not installed and used properly, that is, in strict accordance with the manufacturer's instructions, may cause interference to radio and television reception. It has been type tested and found to comply with the limits for a Class B computing device in accordance with the specifications in Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- If using an indoor antenna, have a quality outdoor antenna installed.
- Reorient the receiving antenna until interference is reduced or eliminated.
- Move the radio or television receiver away from the receiver/control.
- Move the antenna leads away from any wire runs to the receiver/control.
- Plug the receiver/control into a different outlet so that it and the radio or television receiver are on different branch circuits.

If necessary, the user should consult the dealer or an experienced radio/television technician for additional suggestions. The user or installer may find the following booklet prepared by the Federal Communications Commission helpful: "Interference Handbook"

This booklet is available from the U.S. Government Printing Office, Washington, DC 20402. *The user shall not make any changes or modifications to the equipment unless authorized by the Installation Instructions or User's Manual. Unauthorized changes or modifications could void the user's authority to operate the equipment.*

### Federal Communications Commission (FCC) Part 68 Statement

This equipment complies with Part 68 of the FCC rules. On the front cover of this equipment is a label that contains, among other information, the FCC registration number and ringer equivalence number (REN) for this equipment. If requested, this information must be provided to the telephone company.

This equipment uses the following jacks: An RJ31X is used to connect this equipment to the telephone network.

The REN is used to determine the quantity of devices which may be connected to the telephone line. Excessive RENs on the telephone line may result in the devices not ringing in response to an incoming call. In most, but not all areas, the sum of the RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to the line, as determined by the total RENs, contact the telephone company to determine the maximum REN for the calling area.

*(Continued)*

### **Federal Communications Commission (FCC) Part 68 Statement (Continued)**

If this equipment causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. If advance notice is not practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe necessary.

The telephone company may make changes in its facilities, equipment, operations, or procedures that could affect the operation of the equipment. If this happens, the telephone company will provide advance notice in order for you to make the necessary modifications in order to maintain uninterrupted service.

If trouble is experienced with this equipment, please contact the manufacturer for repair and warranty information. If the trouble is causing harm to the telephone network, the telephone company may request you remove the equipment from the network until the problem is resolved.

There are no user serviceable components in this product, and all necessary repairs must be made by the manufacturer. Other repair methods may invalidate the FCC registration on this product.

This equipment cannot be used on telephone company-provided coin service. Connection to Party Line Service is subject to state tariffs.

This equipment is hearing-aid compatible.

When programming or making test calls to an emergency number, briefly explain to the dispatcher the reason for the call. Perform such activities in the off-peak hours; such as early morning or late evening.

---

### **UL Notices**

1. This is a "Grade A" residential system.
2. The FA4285 Phone Module and Ademco 7720PLUS or 7820 Long Range Radios have not been UL tested and cannot, therefore, be used in a UL installation.
3. Entry Delays (fields \*37, \*38) cannot be greater than 45 seconds for UL installations.
4. The maximum number of reports per armed period (field \*92) must be unlimited (set to 1) for UL installations.
5. Periodic testing (field \*49) must be at least every 24 hours (set to 1) for UL installations.
6. Alarm Sounder plus Auxiliary Power currents must not exceed 600mA total for UL installations.
7. Downloading is not permissible for UL installations.

---

### **California State Fire Marshal (CSFM) 24-Hour Battery Back-Up Requirements**

The California State Fire Marshal has published new regulations which require that all residential fire alarm control panels installed after June 30, 1993 must be provided with a back-up battery which has sufficient capacity to operate the panel and its attached peripheral devices for 24 hours in the intended standby condition, followed by at least 4 minutes in the intended fire alarm signaling condition.

This control panel can meet these requirements without using a supplementary power supply, provided that the panel's auxiliary power and bell output currents are limited as indicated in the following table.

**OUTPUT LIMITATIONS TO MEET CSFM 24-HOUR BATTERY BACK-UP REQUIREMENTS  
FOR UL LISTED RESIDENTIAL FIRE INSTALLATIONS**

OUTPUT CURRENT LIMITATIONS		BATTERY INFORMATION	
OUTPUT CURRENT TOTAL	MAXIMUM AUXILIARY CURRENT	BATTERY CAPACITY TO USE (Amp/Hrs)	RECOMMENDED BATTERY (Yuasa Model No.)
600mA maximum total of auxiliary power plus bell output currents.	45mA	4AH	NP4-12
	160mA	7AH	NP7-12
	200mA	8AH	NP4-12 (two) <sup>‡</sup>
	425mA	14AH	NP7-12 (two) <sup>‡</sup>

<sup>‡</sup>**Note:** Use two batteries, connected in parallel. Obtain an Ademco No. 4100EOLR Resistor Kit. A dual battery harness is provided with the kit. The kit also contains EOL resistors with spade lug/heat shrink tubing construction which has been approved by UL and CSFM for fire zone usage. Both batteries will fit inside the panel's cabinet.

## Canadian Department Of Communications (DOC) Statement

### NOTICE

The Canadian Department of Communications label identifies certified equipment. This certification means that the equipment meets certain telecommunications network protective, operational and safety requirements. The Department does not guarantee the equipment will operate to the user's satisfaction.

Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. In some cases, the company's inside wiring associated with a single line individual service may be extended by means of certified connector assembly (telephone extension cord). The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

Repairs to certified equipment should be made by an authorized Canadian maintenance facility designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas.

**Caution:** User should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or electrician, as appropriate.

The Load Number (LN) assigned to each terminal device denotes the percentage of the total load to be connected to a telephone loop which is used by the device, to prevent overloading. The termination on a loop may consist of any combination of devices subject only to the requirement that the total of the Load Numbers of all the devices does not exceed 100.

### AVIS

L'étiquette du ministère des Communications du Canada identifie le matériel homologué. Cette étiquette certifie que le matériel est conforme à certaines normes de protection, d'exploitation et de sécurité des réseaux de télécommunications. Le ministère n'assure toutefois pas que le matériel fonctionnera à la satisfaction de l'utilisateur.

Avant d'installer ce matériel, l'utilisateur doit s'assurer qu'il est permis de le raccorder aux installations de l'entreprise locale de télécommunications. Le matériel doit également être installé en suivant une méthode acceptée de raccordement. Dans certains cas, les fils intérieurs de l'entreprise utilisés pour un service individuel à la ligne unique peuvent être prolongés au moyen d'un dispositif homologué de raccordement (cordon prolongateur

téléphonique interne). L'abonné ne doit pas oublier qu'il est possible que la conformité aux conditions énoncées ci-dessus n'empêche pas la dégradation du service dans certaines situations. Actuellement, les entreprises de télécommunications ne permettent pas que l'on raccorde leur matériel aux prises d'abonnés, sauf dans les cas précis prévus par les tarifs particuliers de ces entreprises.

Les réparations du matériel homologué doivent être effectuées par un centre d'entretien canadien autorisé désigné par le fournisseur. La compagnie de télécommunications peut demander à l'utilisateur de débrancher un appareil à la suite de réparations ou de modifications effectuées par l'utilisateur ou à cause de mauvais fonctionnement.

Pour sa propre protection, l'utilisateur doit s'assurer que tous les fils de mise en terre de la source d'énergie électrique, des lignes téléphoniques de réseau de conduites d'eau, s'il y en a, soient raccordés ensemble. Cette précaution est particulièrement importante dans les régions rurales.

**Avvertissement:** L'utilisateur ne doit pas tenter de faire ces raccordements lui-même; il doit avoir recours à un service d'inspection des installations électriques, ou à un électricien, selon le cas.

L'indice de charge (IC) assigné à chaque dispositif terminal pour éviter toute surcharge indique le pourcentage de la charge totale qui peut être raccordé à un circuit téléphonique bouclé utilisé par ce dispositif. La terminaison du circuit bouclé peut être constituée de n'importe quelle combinaison de dispositifs, pourvu que la somme des indices de charge de l'ensemble des dispositifs ne dépasse pas 100.

---

---

## **Warning! The Limitations Of This Alarm System**

While this System is an advanced design security system, it does not offer guaranteed protection against burglary, fire or other emergency. Any alarm system, whether commercial or residential, is subject to compromise or failure to warn for a variety of reasons. For example:

- Intrusion detectors (e.g., passive infrared detectors), smoke detectors, and many other sensing devices will not work without power. Battery-operated devices will not work without batteries, with dead batteries, or if the batteries are not put in properly. Devices powered solely by AC will not work if their AC power supply is cut off for any reason, however briefly.
- Signals sent by wireless transmitters may be blocked or reflected by metal before they reach the alarm receiver. Even if the signal path has been recently checked during a weekly test, blockage can occur if a metal object is moved into the path.
- A user may not be able to reach a panic or emergency button quickly enough.
- While smoke detectors have played a key role in reducing residential fire deaths in the United States, they may not activate or provide early warning for a variety of reasons in as many as 35% of all fires, according to data published by the Federal Emergency Management Agency. Some of the reasons smoke detectors used in conjunction with this System may not work are as follows. Smoke detectors may have been improperly installed and positioned. Smoke detectors may not sense fires that start where smoke cannot reach the detectors, such as in chimneys, in walls, or roofs, or on the other side of closed doors. Smoke detectors also may not sense a fire on another level of a residence or building. A second floor detector, for example, may not sense a first floor or basement fire. Finally, smoke detectors have sensing limitations. No smoke detector can sense every kind of fire every time. In general, detectors may not always warn about fires caused by carelessness and safety hazards like smoking in bed, violent explosions, escaping gas, improper storage of flammable materials, overloaded electrical circuits, children playing with matches, or arson. Depending on the nature of the fire and/or location of the smoke detectors, the detector, even if it operates as anticipated, may not provide sufficient warning to allow all occupants to escape in time to prevent injury or death.
- Passive Infrared Motion Detectors can only detect intrusion within the designed ranges as diagrammed in their installation manual. Passive Infrared Detectors do not provide volumetric area protection. They do create multiple beams of protection, and intrusion can only be detected in unobstructed areas covered by those beams. They cannot detect motion or intrusion that takes place behind walls, ceilings, floors, closed doors, glass partitions, glass doors, or windows. Mechanical tampering, masking, painting or spraying of any material on the mirrors, windows or any part of the optical system can reduce their detection ability. Passive Infrared Detectors sense changes in temperature; however, as the ambient temperature of the protected area approaches the temperature range of 90° to 105°F (32° to 40°C), the detection performance can decrease.
- Alarm warning devices such as sirens, bells or horns may not alert people or wake up sleepers if they are located on the other side of closed or partly open doors. If warning devices are located on a different level of the residence from the bedrooms, then they are less likely to waken or alert people inside the bedrooms. Even persons who are awake may not hear the warning if the alarm is muffled by noise from a stereo, radio, air conditioner or other appliance, or by passing traffic. Finally, alarm warning devices, however loud, may not warn hearing-impaired people.
- Telephone lines needed to transmit alarm signals from a premises to a central monitoring station may be out of service or temporarily out of service. Telephone lines are also subject to compromise by sophisticated intruders.
- Even if the system responds to the emergency as intended, however, occupants may have insufficient time to protect themselves from the emergency situation. In the case of a monitored alarm system, authorities may not respond appropriately.
- This equipment, like other electrical devices, is subject to component failure. Even though this equipment is designed to last as long as 20 years, the electronic components could fail at any time.

The most common cause of an alarm system not functioning when an intrusion or fire occurs is inadequate maintenance. This alarm system should be tested weekly to make sure all sensors and transmitters are working properly. The security keypad (and remote keypad) should be tested as well.

Wireless transmitters (used in some systems) are designed to provide long battery life under normal operating conditions. Longevity of batteries may be as much as 4 to 7 years, depending on the environment, usage, and the specific wireless device being used. External factors such as humidity, high or low temperatures, as well as large swings in temperature, may all reduce the actual battery life in a given installation. This wireless system, however, can identify a true low battery situation, thus allowing time to arrange a change of battery to maintain protection for that given point within the system.

Installing an alarm system may make the owner eligible for a lower insurance rate, but an alarm system is not a substitute for insurance. Homeowners, property owners and renters should continue to act prudently in protecting themselves and continue to insure their lives and property.

We continue to develop new and improved protection devices. Users of alarm systems owe it to themselves and their loved ones to learn about these developments.

**– NOTES –**

FA147C Summary Of Connections Diagram

24 HR BATTERY STANDBY REQUIRED FOR FIRE INSTALLATIONS. USE 12V 17.2AH BATTERY FOR 500mA AUX POWER. SEE INSTRUCTIONS.  
 BATTERY CAPACITY FOR EMERGENCY BURGLARY STANDBY USE AT LEAST 4 HRS  
 GEL LEAD ACID TYPE BATTERY. BATTERY NORMALLY NEED NOT BE REPLACED FOR AT LEAST 3 YRS.

CHARGE VOLTAGE 13.8VDC

BATTERY 12V, 4AH (e.g. ADEMCO No. 467) OR 12V, 1.2AH

TO DETERMINE TOTAL STANDBY LOAD ON BATTERY, ADD 100mA TO TOTAL OF AUX. POWER OUTPUT AND REMOTE KEYPAD CURRENTS.

**OPTIONAL ITEMS THAT MAY BE USED. SEE THEIR INSTRUCTIONS.**  
**ADEMCO No. 5800TM TRANSMITTER MODULE (20mA)** (for No. 5827BD Wireless Bidirectional Keypad)  
**AND/OR**  
 FA 4285  
**VOICE MODULE (160mA)**  
**AND/OR**  
 ADEMCO No. 7720PLUS or 7820 LONG RANGE RADIO

**VOLTAGE TRIGGER (FOR X-10 MODULE, PF284 OR EQUIV.). SEE INSTRUCTIONS.**

**OPTIONAL FOR UP TO 30 ADDITIONAL ZONES (ONE FROM EITHER OR BOTH GROUPS)**

ADEMCO 5881\* Type RF RECEIVER WIRELESS ZONES  
 5881L: UP TO 8  
 5881M: UP TO 16  
 5881H: UP TO 30  
 \* 5882 TYPE IN CANADA


**AND/OR**  
 ADEMCO No. 4204 RELAY MODULE (4 OUTPUT RELAYS)  
**OR**  
 ADEMCO No. 4219 WIRED EXPANSION MODULE (8 ADDITIONAL EOLR WIRED ZONES)  
**OR**  
 ADEMCO No. 4229 WIRED EXPANSION/RELAY MODULE (8 ADDITIONAL EOLR WIRED ZONES, PLUS 2 OUTPUT RELAYS)

SET UNIT'S DIP SWITCH FOR DEVICE ADDRESS OF "0"  
 (See receiver's instructions)

**VOLTAGE TRIGGER (MEMORY OF ALARM). SEE INSTRUCTIONS**

1  
2  
3

**CAUTION:** INCORRECT CONNECTION MAY CAUSE DAMAGE TO CONTROL UNIT



LOCATED AT LOWER RIGHT OF CIRCUIT BOARD

EARTH GROUND SEE INSTRUCTIONS FOR PROPER GROUNDING

USE UL LISTED LIMITED ENERGY CABLE FOR ALL CONNECTIONS

TO GND TERM (21) ON CONTROL

GROUND TERMINAL ON TRANSFORMER  
 PLUG-IN TRANSFORMER 16.5VAC, 25VA (ADEMCO No. 1317)

TO 110VAC UNSWITCHED OUTLET (24-HR)

**ALARM OUTPUT** 10.5-13.8VDC, 2A MAX. (600mA MAX. FOR UL USAGE, INCLUDING AUX. POWER)

STEADY FOR BURGLARY/PANIC, TEMPORAL SOUNDING FOR FIRE (e.g. USE ADEMCO No. 740 SOUNDER, Nos. 702 OR 719 SIREN, OR 12V BELL)

CONNECTION OF THE FIRE ALARM SIGNAL TO A FIRE ALARM HEADQUARTERS OR A CENTRAL STATION SHALL BE PERMITTED ONLY WITH THE PERMISSION OF THE LOCAL AUTHORITY HAVING JURISDICTION. THE BURGLAR ALARM SIGNAL SHALL NOT BE CONNECTED TO A POLICE EMERGENCY NUMBER.

**AUX. POWER OUTPUT** 10.5-13.8VDC 500mA MAX. INTERRUPTS FOR 4-WIRE-FIRE ALARM RESET  
**NOTE:** KEYPAD CURRENT MUST BE INCLUDED IN AUX. CURRENT DRAIN CALCULATIONS

BLACK: KEYPAD GROUND (-) RETURN  
 RED: KEYPAD PWR (+)  
 GREEN: DATA IN FROM KEYPAD  
 YELLOW: DATA OUT TO KEYPAD


**REMOTE KEYPAD**

**REMOTE KEYPADS** SYSTEM MUST BE PROGRAMMED WITH AN FA550KP, BUT NEED NOT REMAIN IN SYSTEM.

AFTER PROGRAMMING, THE SYSTEM CAN USE:  
 FA210KP (30mA), FA245KP (30mA)  
 FA250KP (120mA) OR  
 FA550KP (140mA).

MULTIPLE KEYPADS MAY BE USED, BUT USE MAX. OF 220 FT. OF #22 WIRE OR 550 FT. OF #18.

ALL OUTPUT CIRCUITS ARE POWER LIMITED



- MAXIMUM LOOP RESISTANCE (EACH ZONE): 300 OHMS (PLUS EOLR)
- RESPONSE, ZONES 1-6: 300-500MSEC
- ZONE 3 CAN BE PROGRAMMED FOR N.C. SENSOR FAST RESPONSE TO AN OPEN: NOMINAL 10MSEC
- ZONES 1-6 CAN BE PROGRAMMED FOR USE AS FIRE ZONES.

**THIS DEVICE COMPLIES WITH PART 15 OF FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:**  
 (1) IT MAY NOT CAUSE HARMFUL INTERFERENCE, (2) IT MUST ACCEPT ANY INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION.

COMPLIES WITH FCC RULES, PART 68  
 FCC REGISTRATION No. AC398U-68192-AL-E  
 RINGER EQUIVALENCE: 0.7B

**WARNING:** OWNER'S INSTRUCTION NOTICE NOT TO BE REMOVED. WEEKLY TESTING IS REQUIRED TO ENSURE PROPER OPERATION OF THIS SYSTEM.

**WARNING:**

TO PREVENT RISK OF SHOCK, DISCONNECT TELEPHONE LINE AT TELCO JACK BEFORE SERVICING THIS UNIT.

**THIS EQUIPMENT SHOULD BE INSTALLED IN ACCORDANCE WITH THE NATIONAL FIRE PROTECTION ASSOCIATION'S STANDARD 72, CHAPTER 2 (NATIONAL FIRE PROTECTION ASSOC., BATTERYMARCH PARK, QUINCY, MA 02269).**

**PRINTED INFORMATION DESCRIBING PROPER INSTALLATION, OPERATION, TESTING, MAINTENANCE, EVACUATION PLANNING AND REPAIR SERVICE IS TO BE PROVIDED WITH THIS EQUIPMENT.**

SEE INSTRUCTIONS FOR SPECIAL PHONE WIRING IF FA4285 PHONE MODULE IS USED.

## LIMITED WARRANTY

Pittway Corporation, and its divisions, subsidiaries and affiliates ("Seller"), 165 Eileen Way, Syosset, New York 11791, warrants its First Alert Professional products to be in conformance with its own plans and specifications and to be free from defects in materials and workmanship under normal use and service for 36 months from the date stamp control on the product or, for products not having a date stamp, for 30 months from date of original purchase unless the installation instructions or catalog sets forth a shorter period, in which case the shorter period shall apply. Seller's obligation shall be limited to repairing or replacing, at its option, free of charge for materials or labor, any product which is proved not in compliance with Seller's specifications or proves defective in materials or workmanship under normal use and service. Seller shall have no obligation under this Limited Warranty or otherwise if the product is altered or improperly repaired or serviced by anyone other than First Alert Professional factory service. For warranty service, return product transportation prepaid, to:

First Alert Professional Factory Service, 165 Eileen Way, Syosset, New York 11791.

THERE ARE NO WARRANTIES, EXPRESS OR IMPLIED, OF MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE OR OTHERWISE, WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. IN NO CASE SHALL SELLER BE LIABLE TO ANYONE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, OR UPON ANY OTHER BASIS OF LIABILITY WHATSOEVER, EVEN IF THE LOSS OR DAMAGE IS CAUSED BY THE SELLER'S OWN NEGLIGENCE OR FAULT.

Seller does not represent that the products it sells may not be compromised or circumvented; that the products will prevent any personal injury or property loss by burglary, robbery, fire or otherwise; or that the products will in all cases provide adequate warning or protection. Customer understands that a properly installed and maintained alarm may only reduce the risk of a burglary, robbery, fire or other events occurring without providing an alarm, but it is not insurance or a guarantee that such will not occur or that there will be no personal injury or property loss as a result. CONSEQUENTLY, SELLER SHALL HAVE NO LIABILITY FOR ANY PERSONAL INJURY, PROPERTY DAMAGE OR OTHER LOSS BASED ON A CLAIM THE PRODUCT FAILED TO GIVE WARNING. HOWEVER, IF SELLER IS HELD LIABLE, WHETHER DIRECTLY OR INDIRECTLY, FOR ANY LOSS OR DAMAGE ARISING UNDER THIS LIMITED WARRANTY OR OTHERWISE, REGARDLESS OF CAUSE OR ORIGIN, SELLER'S MAXIMUM LIABILITY SHALL NOT IN ANY CASE EXCEED THE PURCHASE PRICE OF THE PRODUCT, WHICH SHALL BE THE COMPLETE AND EXCLUSIVE REMEDY AGAINST SELLER. This warranty replaces any previous warranties and is the only warranty made by Seller on this product. No increase or alteration, written or verbal, *of the obligations of this Limited Warranty is authorized.*



172 Michael Drive  
Syosset, New York 11791

Copyright © 1998 PITTWAY CORPORATION

