

MESSAGE

Show a Message	8	1	Message	#
Log a Message	8	2	Message	#
Clear a Message	8	3	Message	#
Say a Message	8	4	Message	#
Phone a Message	8	5	Phone Number (1-8)	Message #

VIEW STATUS AND PROGRAMS

View Unit Status	6	1	↑/↓
View Zone Status	6	2	↑/↓
View Time of Sunrise/Sunset	6	3	
View Every Program	9	Master Code	3 2 # ↑/↓

TELEPHONE ACCESS

USE KEYPAD ON TONE-TYPE TELEPHONE

To Access Omni II	From inside, pick up a phone & press # :
	From an outside phone, call your house and enter your code after the beep. If you have an answering machine, let the phone ring once, hang up and wait about 10 seconds, then call back. Omni II will answer after one ring. Enter your code.
Panic (Inside Phone Only)	Press # 6 times. Sirens and lights are activated.

COMMANDS VIA TELEPHONE

Control	1 Unit Number # then press	0 Off 1 On 2 Dimmer 3 Brighter
Security	2 then press	0 Off 1 Day 2 Night 3 Away 4 Vacation 5 Day Inst 6 Night Dly CODE
Bypass a Zone	2 8 Zone Number #	CODE
Restore All Zones	2 9 0 #	CODE
Run a Button	3 Button Number #	
All Lights On	4 1	All Off 4 0
Temperature	5 Temp Zone # then press	1 Mode 2 Heat 3 Cool 4 Fan 5 Hold
Status	6	Reads Current Status of System
Events	7 CODE	Reads 3 events. Press 7 for more events or * to quit.
Play and Record Address	8 8 To play address 8 9 CODE - Record address	
Talk and Listen to Premises	8 3 2 Talk 8 8 Listen	
Goodbye	9	or hang up phone
Cancel	*	
Repeat	0	



Omni II

Quick Reference

Command Summary

Refer to Owner's Manual for complete instructions

CONSOLE DISPLAYS

All Omni II commands are menu based.
For the main menu, press **#** :

1=CONTROL 2=SECURITY
3=BUTTON 4=ALL ↓

Press ↓ for the next display:

5=TEMP 6=STATUS
7=EVENTS 8=MESSAGE ↑/↓

9=SETUP ↑

Press ↓ when entering a unit, zone, button, temperature, code, or message to scroll through the list of names.

Press ↓ to advance to the next item.

Press ↑ to go back to the previous item.

CONSOLE FUNCTIONS

*	Used to cancel and return the display to the previous menu.
#	Used to enter / confirm a selection or to display a menu.
1 Beep	Your command has been properly entered.
2 Beeps	Trouble Beeps - Press * to silence beeper.
3 Beeps	Error! Please reenter command. Press * to start over.
Beeper on Continuously	An alarm has occurred.

SECURITY

Disarm System & Silence Alarms	OFF CODE
Arm Security	AWAY OR NIGHT OR DAY CODE Be sure display reads "SYSTEM OK"
Arm Security to Vacation Mode	2 4 CODE
Bypass a Zone	2 8 Zone # CODE
Restore all Zones	2 9 0 #
Quick Arm	AWAY OR NIGHT OR DAY TWICE
Review Events	7 MASTER CODE ↑/↓
Reset Smoke Detectors	Arm or Quick Arm
Emergency Keys	1 + 3 = Police Emergency 4 + 6 = Fire Emergency 7 + 9 = Auxiliary Emergency Alarm is activated with the simultaneous depression of two keys for 1 second.

SETUP ITEMS

Set Time (7:30 pm)	9 MASTER CODE 2 7 3 0 ↓
Enter Date (April 15, 00)	0 4 1 5 0 0
Set New Codes	9 MASTER CODE 1 Press ↓ OR ↑ to display each item.
Set Phone Options	9 MASTER CODE 4 To change an item, enter your choice, then press # .
Set Delays and Arming Options	9 MASTER CODE 5

LIGHTING AND TEMPERATURE

All Lights On	4 1 All Off 4 0
Turn a Light On or Off	1 Unit # 1 OR 0 (ON) (OFF)
Dim a Light	1 Unit # 2 Steps Dimmer (1-9)
Brighten a Light	1 Unit # 3 Steps Brighter (1-9)
Timed Command	1 Unit # 9 Enter Time # 0 OR 1 OR 2 OR 3 (OFF) (ON) (DIM) (BRT)
Set Lighting Level	1 Unit # 4 Lighting Level (0-100)
Run a Button (Macro)	3 Button #
Run a Scene	4 2 Scene #
View Temperature Settings	5 Temp Zone # # ↑/↓
Change Thermostat Mode	5 Temp Zone # 1 0 Off 1 Heat 2 Cool 3 Auto
Change Thermostat Heat Setting (Set to 70)	5 Temp Zone # 2 7 0 #
Change Thermostat Cool Setting (Set to 80)	5 Temp Zone # 3 8 0 #
Change Thermostat Fan Setting	5 Temp Zone # 4 0 Auto 1 On
Change Thermostat Hold Setting	5 Temp Zone # 5 0 Auto 1 On