



CONTROLLER
 In enclosure **20A00-2**
 On mounting plate **20A00-8**



CONTROLLER
 In enclosure **20A00-50**
 On mounting plate **20A00-52**



AUDIO

- Omni Console w/ Spkr/Mic **33A00-4**
- Surface Speaker/Mic **28A00-1**
- Flush Speaker/Mic **28A00-2**
- Two Way Voice Module **10A11-1**

SERIAL PORTS

- HAI Lighting Control
- Serial to PC cable **21A05-2**
- Serial Connectivity Cable **36A05-4**
- Russound or Nuvo Audio System (Pro II only)


EXPANSION

- Zone Expander **10A06-1**
- Serial Board **10A17-1**
- ALC Lighting

ETHERNET PORT

See HAI software Options

2 way X-10 Interface Kit **10A09-7**

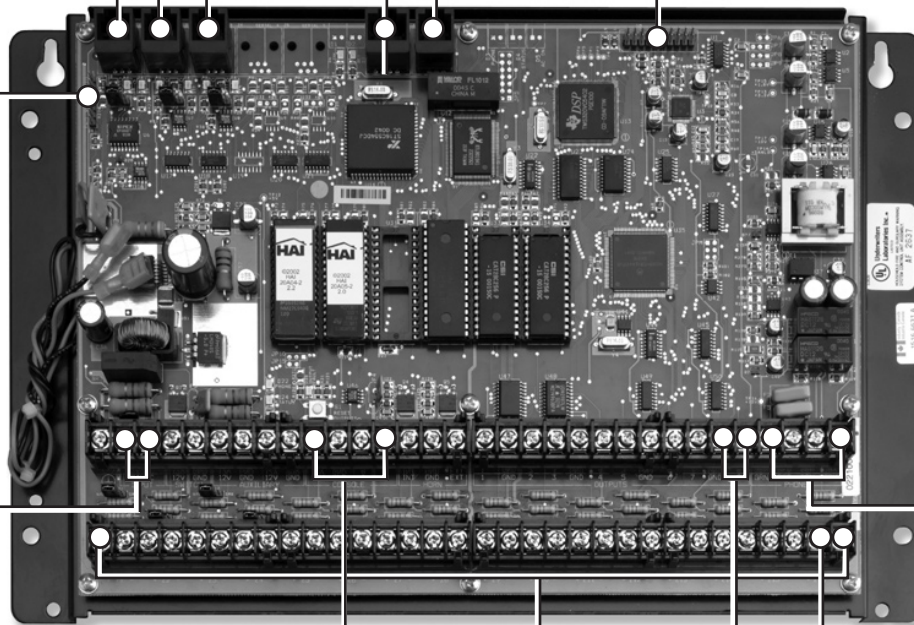

TRANSFORMER

24V, 40 VA
 (12V Battery)



USER INTERFACE

OmniTouch
 Screens & Consoles

EXPANSION

- HAI Wireless **45A00-1**
- Wireless Receiver **42A00-1**
- Expansion Enclosure (Pro II only)

SECURITY & ENERGY MANAGEMENT



- Temperature Sensor **31A00-7**
- Temperature/Humidity Sensor **31A00-8**
- Standard Security/Fire/Environmental Sensors

TELEPHONE INTERFACE

PC Access
 Telephone



COMFORT & CONVENIENCE

HAI Omnistat Thermostats