

MESSAGE

| | | | | |
|-----------------|---|---|--------------------|-----------|
| Show a Message | 8 | 1 | Message | # |
| Log a Message | 8 | 2 | Message | # |
| Clear a Message | 8 | 3 | Message | # |
| Say a Message | 8 | 4 | Message | # |
| Phone a Message | 8 | 5 | Phone Number (1-8) | Message # |

VIEW STATUS AND PROGRAMS

| | | | |
|-----------------------------|---|-------------|-----------|
| View Unit Status | 6 | 1 | ↑/↓ |
| View Zone Status | 6 | 2 | ↑/↓ |
| View Time of Sunrise/Sunset | 6 | 3 | |
| View Every Program | 9 | Master Code | 3 2 # ↑/↓ |

TELEPHONE ACCESS

USE KEYPAD ON TONE-TYPE TELEPHONE

| | |
|------------------------------|--|
| To Access OmniLT | From inside, pick up a phone & press # : |
| | From an outside phone, call your house and enter your code after the beep. If you have an answering machine, let the phone ring once, hang up and wait about 10 seconds, then call back. OmniLT will answer after one ring. Enter your code. |
| Panic (Inside Phone Only) | Press # 6 times. Sirens and lights are activated. |

COMMANDS VIA TELEPHONE

| | | |
|-----------------------------|--|--|
| Control | 1 Unit Number # then press | 0 Off 1 On 2 Dimmer 3 Brighter |
| Security | 2 then press | 0 Off 1 Day 2 Night 3 Away 4 Vacation 5 Day Inst 6 Night Dly CODE |
| Bypass a Zone | 2 8 Zone Number # | CODE |
| Restore All Zones | 2 9 0 # | CODE |
| Run a Button | 3 Button Number # | |
| All Lights On | 4 1 | All Off 4 0 |
| Temperature | 5 Temp Zone # then press | 1 Mode 2 Heat 3 Cool 4 Fan 5 Hold |
| Status | 6 | Reads Current Status of System |
| Events | 7 CODE | Reads 3 events. Press 7 for more events or * to quit. |
| Play and Record Address | 8 8 To play address 9 CODE - Record address | |
| Talk and Listen to Premises | 8 3 2 Talk 8 Listen | |
| Goodbye | 9 | or hang up phone |
| Cancel | * | |
| Repeat | 0 | |



Quick Reference

Command Summary

Refer to Owner's Manual for complete instructions

CONSOLE DISPLAYS

All OmniLT commands are menu based.
For the main menu, press **#** :

1=CONTROL 2=SECURITY
3=BUTTON 4=ALL ↓

Press ↓ for the next display:

5=TEMP 6=STATUS
7=EVENTS 8=MESSAGE ↑/↓

9=SETUP ↑

Press ↓ when entering a unit, zone, button, temperature, code, or message to scroll through the list of names.

Press ↓ to advance to the next item.

Press ↑ to go back to the previous item.

CONSOLE FUNCTIONS

| | |
|------------------------|--|
| * | Used to cancel and return the display to the previous menu. |
| # | Used to enter / confirm a selection or to display a menu. |
| 1 Beep | Your command has been properly entered. |
| 2 Beeps | Trouble Beeps - Press * to silence beeper. |
| 3 Beeps | Error! Please reenter command. Press * to start over. |
| Beeper on Continuously | An alarm has occurred. |

SECURITY

| | |
|--------------------------------|--|
| Disarm System & Silence Alarms | OFF CODE |
| Arm Security | AWAY OR NIGHT OR DAY CODE Be sure display reads "SYSTEM OK" |
| Arm Security to Vacation Mode | 2 4 CODE |
| Bypass a Zone | 2 8 Zone # CODE |
| Restore all Zones | 2 9 0 # |
| Quick Arm | AWAY OR NIGHT OR DAY TWICE |
| Review Events | 7 MASTER CODE ↑/↓ |
| Reset Smoke Detectors | Arm or Quick Arm |
| Emergency Keys | 1 + 3 = Police Emergency 4 + 6 = Fire Emergency 7 + 9 = Auxiliary Emergency Alarm is activated with the simultaneous depression of two keys for 1 second. |

SETUP ITEMS

| | |
|---|---|
| Set Time (7:30 pm) Enter Date (April 15, 00) | 9 MASTER CODE 2 7 3 0 ↓ 0 4 1 5 0 0 |
| Set New Codes | 9 MASTER CODE 1 Press ↓ OR ↑ to display each item. |
| Set Phone Options | 9 MASTER CODE 4 To change an item, enter your choice, then press # . |
| Set Delays and Arming Options | 9 MASTER CODE 5 |

LIGHTING AND TEMPERATURE

| | |
|--|---|
| All Lights On | 4 1 All Off 4 0 |
| Turn a Light On or Off | 1 Unit # 1 OR 0 (ON) (OFF) |
| Dim a Light | 1 Unit # 2 Steps Dimmer (1-9) |
| Brighten a Light | 1 Unit # 3 Steps Brighter (1-9) |
| Timed Command | 1 Unit # 9 Enter Time # 0 OR 1 OR 2 OR 3 (OFF) (ON) (DIM) (BRT) |
| Set Lighting Level | 1 Unit # 4 Lighting Level (0-100) |
| Run a Button (Macro) | 3 Button # |
| Run a Scene | 4 2 Scene # |
| View Temperature Settings | 5 Temp Zone # # ↑/↓ |
| Change Thermostat Mode | 5 Temp Zone # 1 0 Off 1 Heat 2 Cool 3 Auto |
| Change Thermostat Heat Setting (Set to 70) | 5 Temp Zone # 2 7 0 # |
| Change Thermostat Cool Setting (Set to 80) | 5 Temp Zone # 3 8 0 # |
| Change Thermostat Fan Setting | 5 Temp Zone # 4 0 Auto 1 On |
| Change Thermostat Hold Setting | 5 Temp Zone # 5 0 Auto 1 On |