
	MESSAGE	
Show a Message	8 1 Message #	
Log a Message	8 2 Message #	
Clear a Message	8 3 Message #	
Say a Message	8 4 Message #	
Phone a Message	8 5 Phone Number Message #	
VIEW STATUS AND PROGRAMS		
View Unit Status	6 1 û/↓	
View Zone Status	6 2 û/↓	
View Time of Sunrise/Sunset	6 3	
View Every Program	9 Master 3 2 # ①/↓	
TELEPHONE ACCESS		

TELEPHONE ACCESS			
USE KEYPAD ON TONE-TYPE TELEPHONE			
To Access	From inside, pick up a phone & press #: From an outside phone, call your house and enter		
OmniPro II	your code after the beep. If you have an answering machine, let the phone ring once, hang up and wait about 10 seconds, then call back. OmniPro II will answer after one ring. Enter your code.		
Panic (Inside Phone Only)	Press # 6 times. Sirens and lights are activated.		

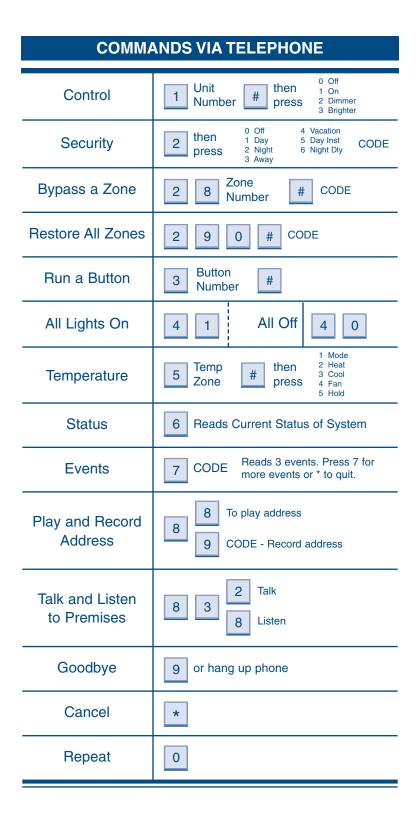





Quick Reference

Command Summary

Refer to Owner's Manual for complete instructions

Document Number 20C00-2 Copyright © 2001 HAI

CONSOLE DISPLAYS

All OmniPro II commands are menu based. For the main menu, press # :

1=CONTROL 2=SECURITY 3=BUTTON 4=ALL ↓

Press () for the next display:

5=TEMP 6=STATUS 7=EVENTS 8=MESSAGE ❖

9=SETUP ↑

Press when entering a unit, zone, button, temperature, code, or message to scroll through the list of names.

Press \downarrow to advance to the next item.

Press 1 to go back to the previous item.

CONSOLE FUNCTIONS		
*	Used to cancel and return the display to the previous menu.	
#	Used to enter / confirm a selection or to display a menu.	
1 Beep	Your command has been properly entered.	
2 Beeps	Trouble Beeps - Press * to silence beeper.	
3 Beeps	Error! Please reenter command. Press * to start over.	
Beeper on Continuously	An alarm has occurred.	

SECURITY		
Disarm System & Silence Alarms	OFF CODE	
Arm Security	AWAY OR NIGHT OR DAY CODE Be sure display reads "SYSTEM OK"	
Arm Security to Vacation Mode	2 4 CODE	
Bypass a Zone	2 8 Zone # CODE	
Restore all Zones	2 9 0 #	
Quick Arm	AWAY OR NIGHT OR DAY TWICE	
Review Events	7 MASTER CODE ☆/↓	
Reset Smoke Detectors	Arm or Quick Arm	
Emergency Keys	1 + 3 = Police Emergency 4 + 6 = Fire Emergency 7 + 9 = Auxiliary Emergency Alarm is activated with the simultaneous depression of two keys for 1 second.	
SETUP ITEMS		
Set Time (7:30 pm) Enter Date (April 15, 00)	9 MASTER 2 7 3 0 ↓ 0 4 1 5 0 0	
Set New Codes	9 MASTER 1 Press 1 OR 1	
Set Phone Options	9 MASTER 4 to display each item. To change an item,	
Set Delays and Arming Options	9 MASTER CODE 5 enter your choice, then press # .	

