



CONTROLLER

In enclosure **20A00-2**
On mounting plate **20A00-8**



CONTROLLER

In enclosure **20A00-50**
On mounting plate **20A00-52**



AUDIO

Omni Console w/ Spkr/Mic **33A00-4**
Surface Speaker/Mic **28A00-1**
Flush Speaker/Mic **28A00-2**
Two Way Voice Module **10A11-1**

SERIAL PORTS

HAI Lighting Control
Serial to PC cable **21A05-2**
Serial Connectivity Cable **36A05-4**
Russound or Nuvo
Audio System (Pro II only)


EXPANSION

Zone Expander **10A06-1**
Serial Board **10A17-1**
ALC Lighting

ETHERNET PORT

See HAI software Options

2 way X-10 Interface Kit **10A09-7**

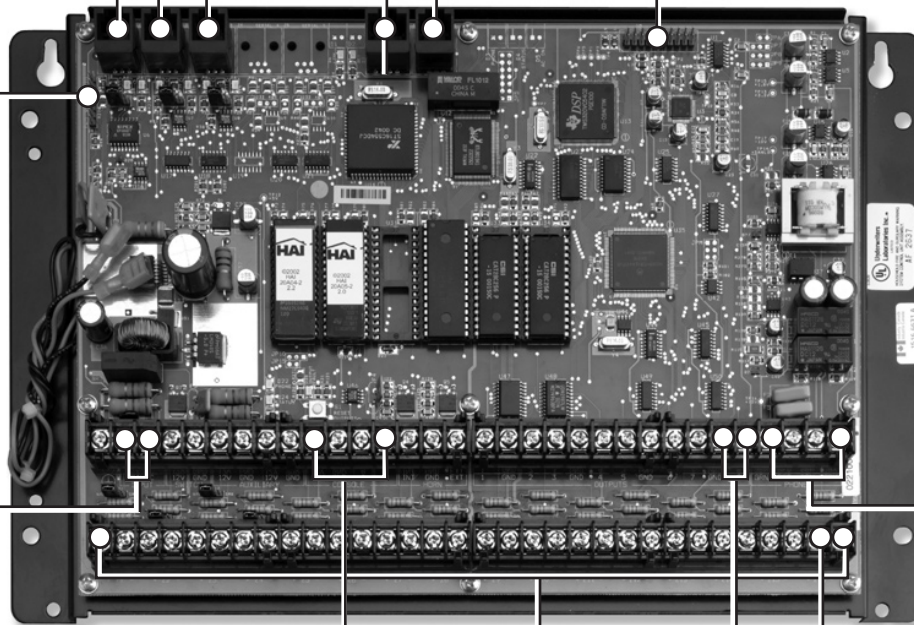

TRANSFORMER

24V, 40 VA
(12V Battery)



USER INTERFACE

OmniTouch
Screens & Consoles

EXPANSION

HAI Wireless **45A00-1**
Wireless Receiver **42A00-1**
Expansion Enclosure (Pro II only)

SECURITY & ENERGY MANAGEMENT

Temperature Sensor **31A00-7**
Temperature/Humidity Sensor **31A00-8**
Standard Security/Fire/Environmental Sensors

TELEPHONE INTERFACE

PC Access
Telephone



COMFORT & CONVENIENCE

HAI Omnistat Thermostats

