



E-Z OPERATION CARD




SECURITY LEVELS

- | | |
|-------------------|--------------------|
| 0 = Disarm/Cancel | 5 = Night |
| 1 = Guard/Cancel | 6 = Night Secure |
| 2 = Chime | 7 = Telephone Test |
| 3 = Home | 8 = Sensor Test |
| 4 = Away | |
-
-

TO ARM THE SYSTEM:

1. Close all protected doors and windows.
 - 2A. Press the number for the desired security level and enter your PAC.
- OR -
 - 2B. With "Quick Arming" press and hold the number for the desired security level.
-
-

IF SYSTEM DOESN'T ARM:

- 1A. Press and hold  for quick bypass or close all protected doors and windows.
- OR -
 - 1B. Press  and enter sensor number to bypass a single sensor. Repeat for additional sensors.
 2. System will arm with open sensors bypassed.
NOTE: Press  to reset keypad at anytime and start over.
-
-

TO DISARM SYSTEM:

- 1A. Press 0 for complete disarm, then enter your PAC.
- 1B. Press 1 for burglary disarm, then enter your PAC.

TROUBLE CODES

PRESS **???** FOR 2 SECONDS TO SEE TROUBLE CODES

- 1-64 Sensor Number - Refer to your sensor location card.
- 65-72 ... Keypad Number - Refer to your sensor location card.
- 73 Central Station Communication Failure - Call alarm Co.
- 74 Control Panel Low Battery - Check plug-in transformer.
- 75 Control Panel Auxiliary Fuse Blown - Call alarm Co.
- 76 Control Panel Fire Fuse Blown - Call alarm Co.
- 77 Control Panel Radio Failure - Call alarm Co.
- 78 Control Panel Power Failure - Check plug-in transformer.
- 79 Control Panel Tamper - Close control panel door.
- 80 Control Panel AC Power Failure - Check plug-in transformer.
- 87 Accessory Not Installed - Call alarm Co.
- 88 Control Panel Memory Failure - Call alarm Co.
- 89 Control Panel Firmware Error - Call alarm Co.

CLEAR TROUBLE DISPLAYS BY DISARMING TO LEVEL 0 AND PRESSING **??? THEN 97**

SPECIAL KEYPAD COMMANDS

NOTE: Disarm to Level 0 before using these commands.

PRESS **???** THEN SPECIAL COMMAND NUMBER

- 80 Sets clock minutes - enter command, then 2 digits.
- 81 Sets clock hours - enter command, then 2 digits.
- 82 Sets calendar day - enter command, then 2 digits.
- 83 Sets calendar month - enter command, then 2 digits.
- 84 Sets calendar year - enter command, then 2 digits.
- 85 Sets day of week - enter command, then 1-7 (1=Sunday).
- 86 Adjusts clock 1 second per day faster.
- 87 Adjusts clock 1 second per day slower.
- 90 Displays version number of CP-90 firmware.
- 96 Displays alarm memory in order of occurrence.
- 97 Clears all trouble displays on the keypad.
- 98 Starts a manual system backup battery test.
- 99 Resets latching wired smoke detectors.

ALARM COMPANY PHONE #



PERSONAL ACCESS CODE E-Z CARD

CHANGING PERSONAL ACCESS CODES

1. Disarm to Level 0 or 1 and press #
2. Enter your current PAC.
3. Press #
4. Enter new PAC (2 to 5 digits long).
5. Press #
6. Listen for the accept tones.

(Repeat steps or use a different code if not accepted.)

TEMPORARY PAC

1. Disarm to Level 0 with a non-temporary PAC and press #
2. Enter a digit from 1 to 9 for the number of times the PAC can be used (disarm then arm is two uses). Entering 0 will allow unlimited use.
3. Press #
4. Enter desired temporary PAC (2 to 5 digits long).
5. Press #
6. Listen for the accept tones.

(Repeat steps or use a different code if not accepted.)

PRESS ##### TO ERASE THE TEMPORARY PAC

PERSONAL ACCESS CODES

PAC #	USER PAC	PAC #	USER PAC
1	TEMP. PAC	17	
2		18	
3		19	
4		20	
5		21	
6		22	
7		23	
8		24	
9		25	
10		26	
11		27	
12		28	
13		29	
14		30	
15		31	
16		32	

IMPORTANT!
KEEP THIS CARD IN A SAFE PLACE.