


KD-90

ALPHANUMERIC CONTROL STATION

Installation Instructions

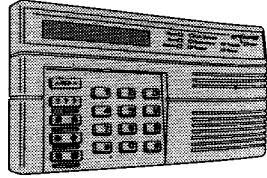

Linear
A NORTEK COMPANY

(619) 438-7000 • FAX (619) 438-7043
USA & Canada (800) 421-1587 & (800) 392-0123
Toll Free FAX (800) 468-1340

DESCRIPTION

The KD-90 control station is a digital keypad designed for use with Linear's CP-90 Supervised Wireless Control/Communicator. The keypad allows the user to arm, disarm and interrogate the security system. The installer can also program the CP-90 from the KD-90 keypad.

Connection to the CP-90 is made through a 4-wire cable. Multiple keypads can be connected to the CP-90 without having to homerun each of the keypad's wires. The KD-90 keypad downlights, display backlights and display contrast levels are adjustable.

The keypad has three 24-hour fire, medical and police buttons for emergency activation.

The keypad sounds a chirp as each key is pressed and audible alarm signals and sirens sound from the built-in speaker.


FEATURES

- * Displays system status and information on a two-line alphanumeric display.
- * Display can be customized by installer for each installation.
- * Shows sensor and system condition on eight LED displays.
- * Sounds system tones, beeps and local alarm sirens.
- * Twelve keys for arming, disarming and changing security levels.
- * STATUS and BYPASS keys for interrogating sensors and special arming.
- * Three 24-hour activation keys for fire, medical, and police emergency alarms.
- * Built-in tamper switch to signal keypad removal from its mounting plate.


IMPORTANT!

To trigger a 24-hour emergency zone with the KD-90, the desired emergency key (fire, medical, police) must be held down for at least four seconds.


STEP 1 Remove mounting plate. Twist a screwdriver into slots on bottom edge of case to remove the mounting plate.

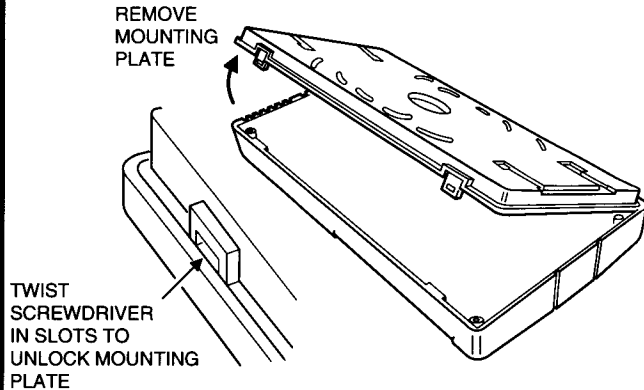


STEP 2 Install mounting plate. Attach the mounting plate to a single or double gang electrical box, or use the four screws and plastic screw anchors to mount the plate directly to wallboard.

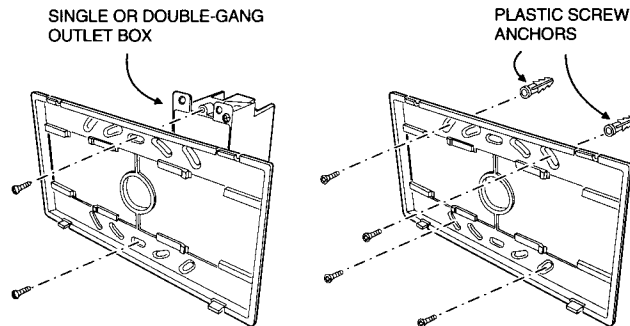


STEP 3 Connect wiring to CP-90. Run 22 AWG or larger four-conductor wire between the keypad location and the CP-90 control panel. Loop the wire two times through the ferrite doughnut as shown. Multiple keypads do not have to be homerun wired.

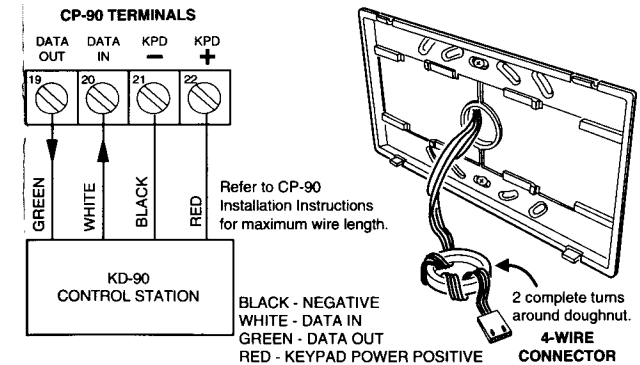

STEP 4 Plug in cable connector and mount keypad. Insert the cable plug into the keyed connector on the back of the KD-90. Hook the keypad onto the mounting plate, starting at the top edge first, then pressing the bottom in until it snaps tight.

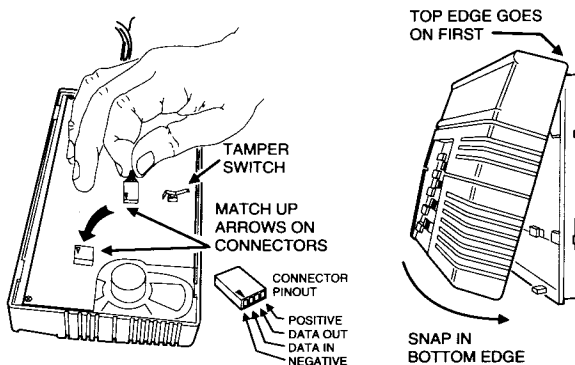

STEP 5 Program keypad and test. If this is the primary keypad for the system, when the CP-90 is powered up **the keypad will be accessory #65**. If this is an additional keypad to the primary, it must be installed into the CP-90's memory. Referring to the CP-90 Programming Instructions, set the keypad lighting levels. Adjust the display contrast by holding down * and pressing 0-7 (0 = high, 7 = low contrast). Test the keypad by arming and disarming the system to each of the security levels. To test the emergency buttons, press and hold each button for four seconds.

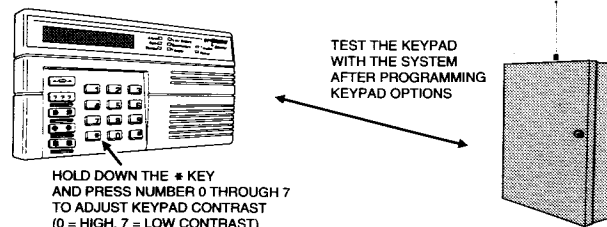

LINEAR LIMITED WARRANTY

This Linear product is warranted against defects in material and workmanship for twelve (12) months. The Warranty Expiration Date is labeled on the product. **This warranty extends only to wholesale customers** who buy direct from Linear or through Linear's normal distribution channels. **Linear does not warrant this product to consumers.** Consumers should inquire from their selling dealer as to the nature of the dealer's warranty, if any. **There are no obligations or liabilities on the part of Linear Corporation for consequential damages arising out of or in connection with use or performance of this product or other indirect damages with respect to loss of property, revenue, or profit, or cost of removal, installation, or reinstallation.** All implied warranties, including implied warranties for merchantability and implied warranties for fitness, are valid only until Warranty Expiration Date as labeled on the product. **This Linear Corporation Warranty is in lieu of all other warranties express or implied.**

For warranty service on Linear equipment return product, at sender's expense to:
Linear Corporation Repairs Department
2580 Pioneer Avenue, Suite C
Vista, CA 92083