



Linear Dual 824

Arming the system when leaving:

Green light must be on 'steady' for all arming procedures.

Press and hold '**AWAY**' for a couple of seconds. You will hear a 'Gong' and 3 'Beeps'
You now have approximately 60 seconds to leave your premise through an entry/exit door.

Arming the system when you're home: (Motion off)

Press and hold '**HOME**' for a couple of seconds. You will hear a 'Gong' and 2 'Beeps', and the '**HOME**' light will blink continuously. <This will automatically 'bypass' the Motion Sensor(s)> All openings (including the entry/exit sensors) are on instant alarm mode.

Disarming the system:

Enter your 4-digit code, and press '**OFF**.' You have approximately 60 seconds to do this. If you get out of sequence, then press the #, and start over.

Door Chime Feature:

There are two ways to activate the 'CHIME' feature:

- 1) Press and hold the '**CHIME**' button down for a couple of seconds.
- 2) When disarming, press '**CHIME**' button instead of the OFF button. This will disarm your system, and also activate the '**CHIME**' feature.

Programming & Erasing additional alternate codes:

- 1) Enter your code and press '**TEST**', enter your code again, and press '**TEST**' again.
- 2) Enter the index number (92 <Duress>, 93 <Home Owners>, 94, 95, 96, 97, 98 <Pager>) for the code to change and press '**HOME**'.
- 3) Enter the new code you desire to add, and press '**AWAY**'.
- 4) Depress the '**OFF**' button for 3 seconds to exit Programming.
- 5) Do not change the 92, or 93 codes. These are your duress code & master code.

Manually Bypassing a zone:

With the zone you wish to bypass open, arm your system.

You will hear 4 high/low beeps.

Then, within 5 seconds, re-arm the system as you normally would. The zone will be bypassed.

Testing your system:

First, notify Monitronics that you are testing the system @ 800-447-9239. Have your password ready.

Next, tell them you would like to put your system on test for 'x' amount of time (30 minutes or so). Then test your system by arming it- then opening a zone, then disarming it. Repeat this procedure until you have checked each zone.

Call Monitronics back, and check to make sure they have received all the signals and in the appropriate order.

Test Mode:

This system is complete supervised, however, it is recommended by the National Burglar & Fire Alarm Association that all security systems be tested manually on a regular basis.

- 1) The console must be in 'OFF' mode.
- 2) Enter your master code, and press 'TEST' button. You will hear a 'gong' and 3 beeps.
- 3) Hold down the 'TEST' button, and all the console's indicators will light up.
- 4) The sensor status lights will flash for each sensor that is programmed.
- 5) Go to each sensor and press the test button, or open & close the sensor.
- 6) For wireless keypads, press the (A) button, a bing will be heard.
- 7) As each sensor is tested, the status light will stop flashing.
- 8) Continue testing each sensor until there are no flashing status lights.

Trouble display:

- 1) If '**POWER**' indicator is abnormal, you have a Low Battery condition.
This is the 12V battery back up for your system.
The power light will blink if there is a problem.
Normal 12V battery life is 5 – 7 years, if the battery has not charged in 72 hours, it needs to be replaced.
- 2) Sensor Low Batteries
When the '**BATTERIES**' indicator light blinks, one or more sensors have a low battery. Press the '*' for one second to view the sensor status. Replace the battery if needed.
After the battery is replaced, put your system in '**TEST**' mode.

Panic Emergency Buttons

Police: Press the EMERGENCY button for 2 seconds. The alarm will activate audibly, and the police will be dispatched.

Medical & Fire: Press the 'FIRE' button for 2 seconds. There will be a fire alarm, and the monitoring station will call back to verify the medical or fire emergency.

Compliments of:

Chuck Bowman

President, Allstar Networks, Inc.