



333 Bayview Avenue
Amityville, New York 11701
For Sales and Repairs, (800) 645-9445
For Technical Service, (800) 645-9440
Publicly traded on NASDAQ Symbol: NSSC


RECOMMENDED GARAGE DOOR APPLICATION INSTALLATION METHOD

WI1470 10/05

The installation methods depicted below allow the customer to disarm the Freedom system using their standard garage door remote control. When the remote control is activated, the Touchpad will sense the current flowing to the garage door opener motor, indicating an authorized entry. When the Touchpad senses that the door has subsequently opened, the system will disarm.

ONE GARAGE DOOR


Note: For this method, do NOT program location [67-3] or [67-4].

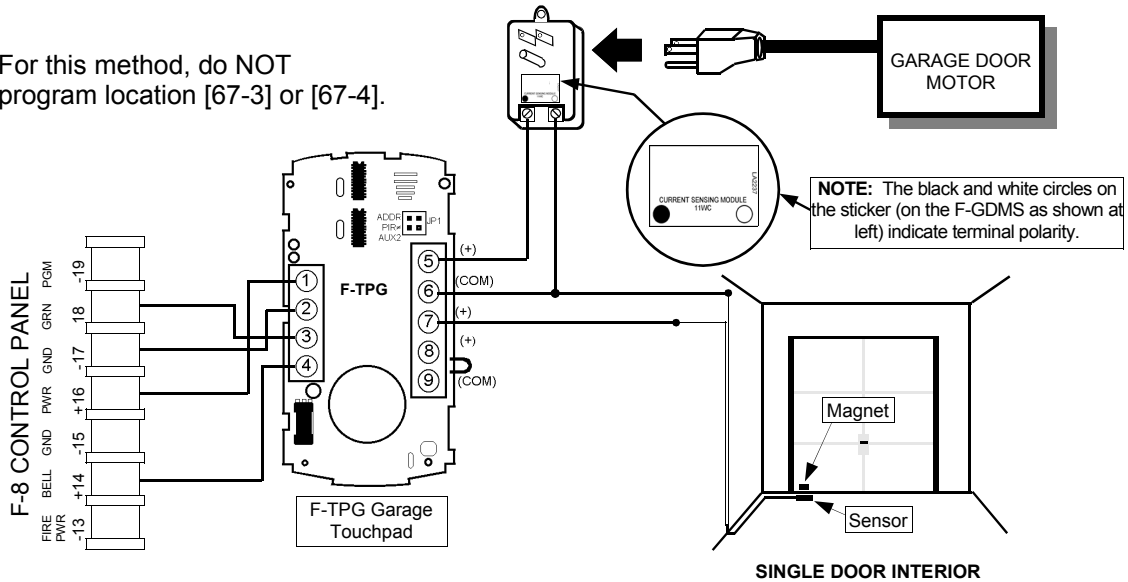

For UL installations, please see WI1451


TWO GARAGE DOORS

Note: For this method, do NOT program location [67-3] or [67-4].

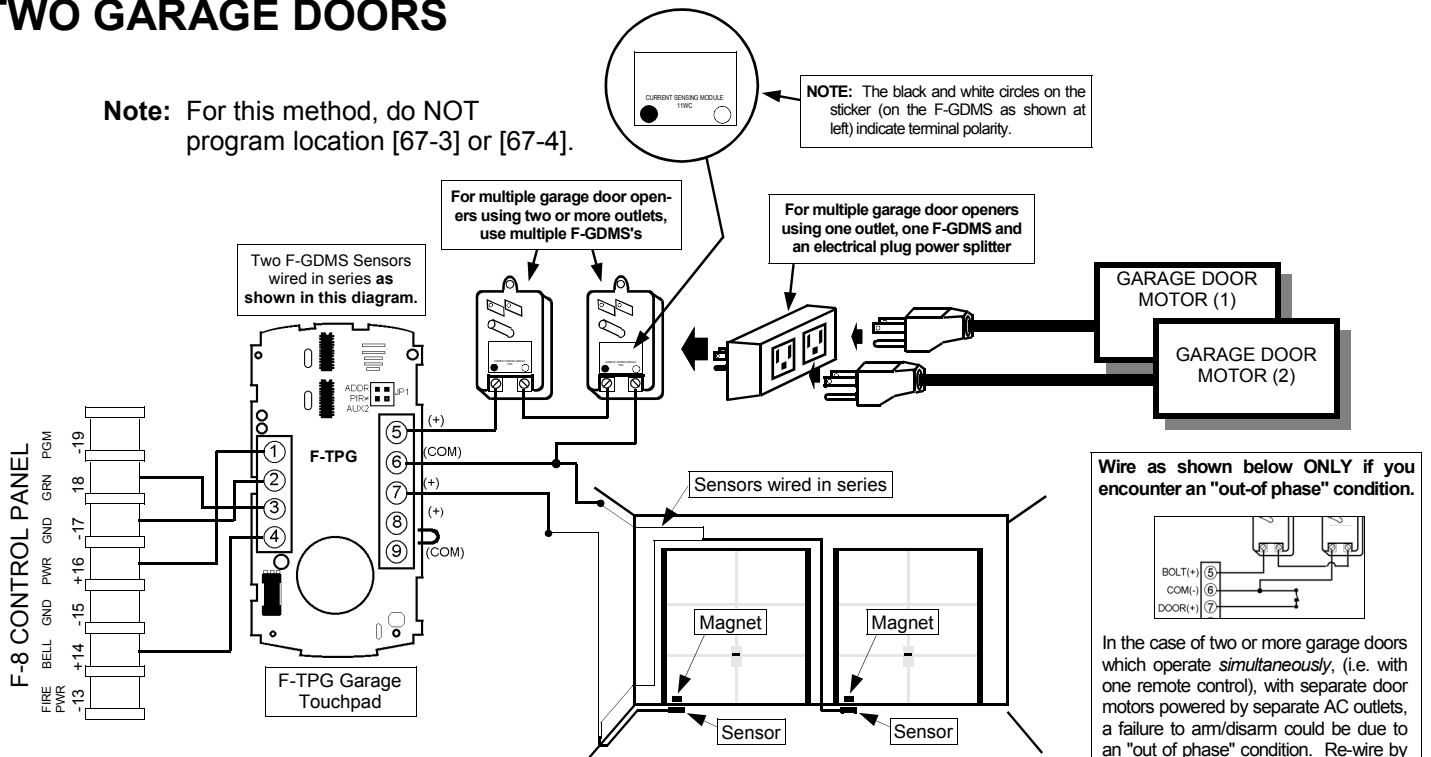

For UL installations, please see WI1451

 Wire as shown below ONLY if you encounter an "out-of phase" condition.



In the case of two or more garage doors which operate *simultaneously*, (i.e. with one remote control), with separate door motors powered by separate AC outlets, a failure to arm/disarm could be due to an "out of phase" condition. Re-wire by reversing the wires on one F-GDMS as shown above. Re-test the system.