

333 Bayview Avenue Amityville, New York 11701 For Sales and Repairs, (800) 645-9445 For Technical Service, (800) 645-9440

APPLICATION NOTE GEM-OUT2 MODULE INSTALLATION INSTRUCTIONS

WI1165 4/03

INTRODUCTION

The GEM-OUT2 Module is an accessory to the GEM-P801, GEM-P800, XP-600, GEM-P1632 and GEM-P816 panels. It is used to add 2 outputs that can be used to activate devices such as LEDs or Auxiliary equipment during a burglary alarm or fire alarm.

The Burglary Output and the Fire Output are open collector outputs that sink a maximum of 50mA from the AUX power.

INSTALLATION

Remove the panel terminal block screws and screw clamps from the +Bell terminal, - Bell terminal and the +12V terminal*.

Insert one of the screws and clamps through the center hole of the GEM-OUT2 Module. Be sure that the clamp and screw head are on the same side of the Module as the Module terminals. Insert screw into the center panel terminal hole. Secure the screw. Secure the remaining screws in the panel. See Fig. 1.

IMPORTANT: Place wires carefully. Wire the (+)Bell, (-)Bell and (+)12V Red on *top* of the GEM-OUT2 and *under* clamps. Tighten screws to secure.

Wire the BURGLARY output of the GEM-OUT2 Module to the input of the device that you want to trigger on a burglary alarm.

Wire the FIRE output of the GEM-OUT2 Module to the input of the

device that you want to trigger on a fire alarm.

Note: Bell must have 2.2k supervisory resistor installed.

FUNCTION

The BURGLARY output will change to active low after a burglary alarm (steady bell) has been activated, and will restore to open collector when the bell has turned off.

The FIRE output will change to active low when a fire alarm (temporal bell) has been activated and will restore to open collector when the bell has turned off.

If the steady bell changes to pulsing, the FIRE output will change to active low and the BURGLARY output will restore to open collector.

* The +12V terminal on the GEM-P801, GEM-P800 and XP-600 is the + Remote Power terminal and on the GEM-P1632 and GEM-P800 is the +Aux power terminal.

PROGRAMMING NOTES

The GEM-P800/P801/XP-600 panels require [96-3] Household Fire enabled. The GEM-P1632/816 panels require fire zones to be programmed for the following: Fire (Zone Option) [0531, 0586, 0641, 0696], Pulsed Alarm Output [0501, 0556, 0611, 0666], and Change Pulse Output to Temporal Output [0720 bit 7].

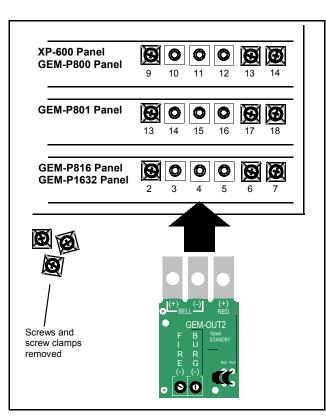


Fig. 1. This diagram illustrates the several panels and their respective numbered terminal blocks. Remove screws and screw clamps, and place Module on top of terminal block.

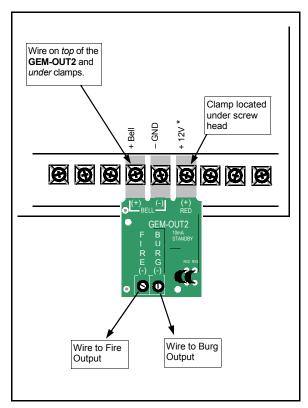


Fig. 2. Replace and tighten screws and screw clamps. Place all subsequent wires carefully on *top* of the **GEM-OUT2** and *under* clamps.

NAPCO LIMITED WARRANTY

warrants its products to be free from manufacturing to assume for it, any other warranty or liability defects in materials and workmanship for thirty-six concerning its products. months following the date of manufacture. NAPCO will, within said period, at its option, repair or replace any product failing to operate correctly without charge to the original purchaser or user.

any part thereof, which has been repaired by others, hereinabove set forth, shall not be enlarged, improperly installed, improperly used, abused, altered, diminished or affected by and no obligation or liability damaged, subjected to acts of God, or on which any shall arise or grow out of Seller's rendering of serial numbers have been altered, defaced or technical advice or service in connection with Buyer's removed. Seller will not be responsible for any order of the goods furnished hereunder. dismantling or reinstallation charges.

THERE ARE NO WARRANTIES, EXPRESS OR SYSTEM BE COMPLETELY TESTED WEEKLY. IMPLIED. WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. THERE IS NO EXPRESS OR IMPLIED WARRANTY MERCHANTABILITY OR Α WARRANTY FITNESS FOR A **PARTICULAR** PURPOSE. ADDITIONALLY, THIS WARRANTY IS IN LIEU OF ALL OTHER OBLIGATIONS OR LIABILITIES ON THE PART OF NAPCO.

limited to any implied warranty of merchantability, product or system will in all cases provide adequate must be brought within the six months following the warning or protection. A properly installed and end of the warranty period.

ANYONE FOR ANY CONSEQUENTIAL INCIDENTAL DAMAGES FOR BREACH OF THIS OR CONSEQUENTLY, ANY OTHER WARRANTY, EXPRESS OR IMPLIED, LIABILITY EVEN IF THE LOSS OR DAMAGE IS CAUSED BY PROPERTY DAMAGE, OR OTHER LOSS BASED THE SELLER'S OWN NEGLIGENCE OR FAULT.

In case of defect, contact the security professional who installed and maintains your security system. In order to exercise the warranty, the product must be returned by the security professional, shipping costs prepaid and insured to NAPCO. After repair or replacement, NAPCO assumes the cost of returning products under warranty. NAPCO shall have no obligation under this warranty, or otherwise, if the safety of the user's family or employees, and limits its product has been repaired by others, improperly liability for any loss or damage including incidental or installed, improperly used, abused, altered, damaged, consequential damages to NAPCO's original selling subjected to accident, nuisance, flood, fire or acts of price of the product regardless of the cause of such God, or on which any serial numbers have been loss or damage. altered, defaced or removed. NAPCO will not be responsible for any dismantling, reassembly reinstallation charges.

representations, whether oral or written, are either limitations or exclusions may not apply to you. This merged herein or are expressly canceled. NAPCO Warranty gives you specific legal rights and you may neither assumes, nor authorizes any other person also have other rights which vary from state to state.

NAPCO SECURITY SYSTEMS, INC. (NAPCO) purporting to act on its behalf to modify, to change, or

In no event shall NAPCO be liable for an amount in excess of NAPCO's original selling price of the product, for any loss or damage, whether direct, indirect, incidental, consequential, or otherwise arising This warranty shall not apply to any equipment, or out of any failure of the product. Seller's warranty, as

NAPCO RECOMMENDS THAT THE ENTIRE

Warning: Despite frequent testing, and due to, but not limited to, any or all of the following; criminal tampering, electrical or communications disruption, it is possible for the system to fail to perform as expected. NAPCO does not represent that the product/system may not be compromised circumvented; or that the product or system will prevent any personal injury or property loss by Any action for breach of warranty, including but not burglary, robbery, fire or otherwise; nor that the maintained alarm may only reduce risk of burglary, IN NO CASE SHALL NAPCO BE LIABLE TO robbery, fire or otherwise but it is not insurance or a OR guarantee that these events will not occur. SELLER SHALL HAVE FOR ANY PERSONAL INJURY. ON A CLAIM THE PRODUCT FAILED TO GIVE WARNING. Therefore, the installer should in turn advise the consumer to take any and all precautions for his or her safety including, but not limited to. fleeing the premises and calling police or fire department, in order to mitigate the possibilities of harm and/or damage.

NAPCO is not an insurer of either the property or

Some states do not allow limitations on how long an implied warranty lasts or do not allow the exclusion or limitation of incidental or consequential damages. This warranty contains the entire warranty. It is the or differentiate in their treatment of limitations of warranty and any prior agreements or liability for ordinary or gross negligence, so the above